




Lenovo Essential B570 RAM Replacement

Use this guide to replace your RAM.

Written By: Samuel Filliettaz

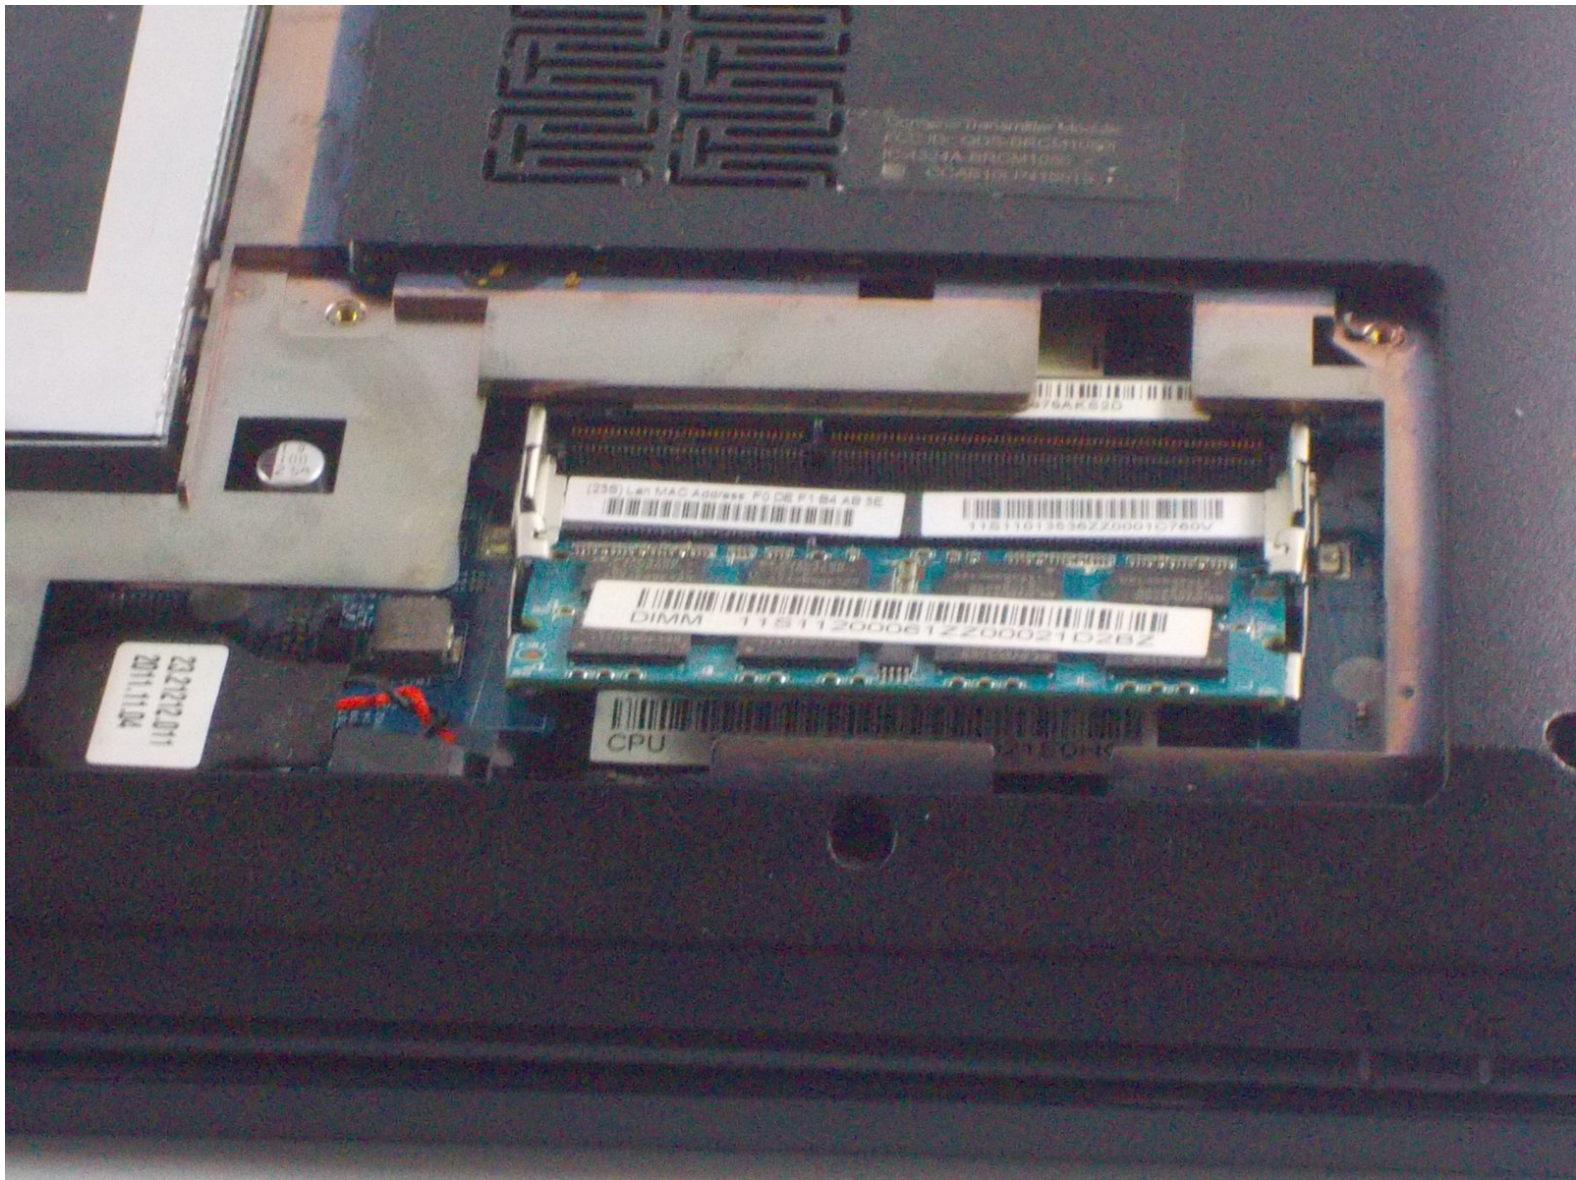

INTRODUCTION

This guide will help you remove and replace your RAM.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Battery




- Turn over laptop.
- Switch open the left battery lock.
- ⓘ If you are replacing inner components of the laptop, it is recommended to remove the battery first to avoid damage to the laptop.

Step 2

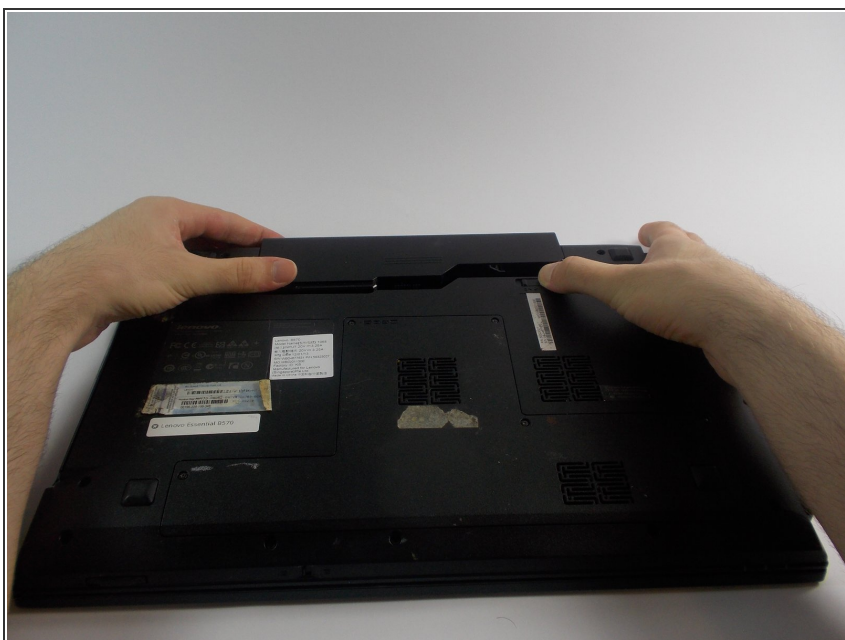

- Hold the right battery lock open with one hand while removing the battery itself with the other.

Step 3 — Back Panel

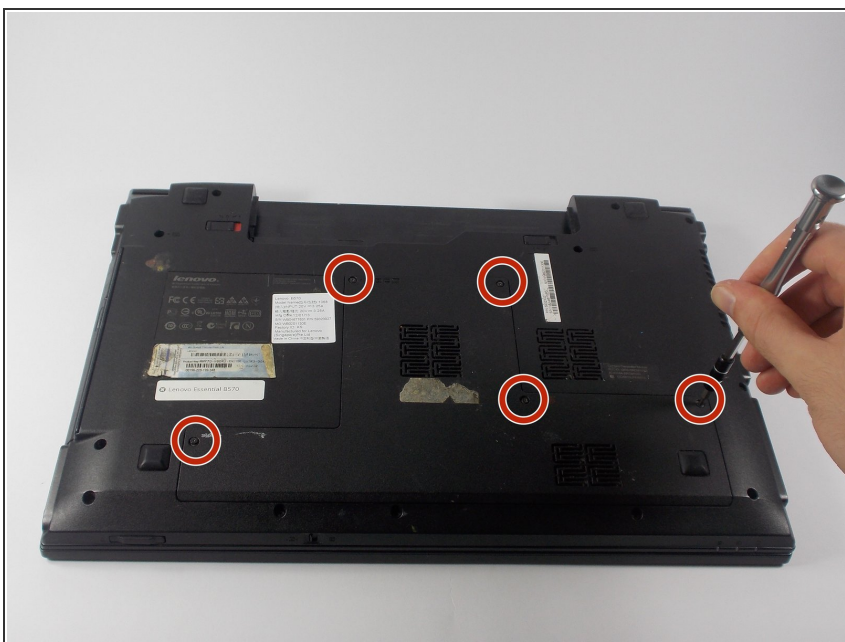

- Loosen the five Philips screws that secure the panel.

i The screws do not actually fully remove from the panel. Loosening them as much as you can will be enough to disconnect them from the laptop.



Step 4



- Prop open the cover with a plastic opening tool.



! If the cover does not come off easily, do not force it. Make sure all screws are loosened.

Step 5 — RAM

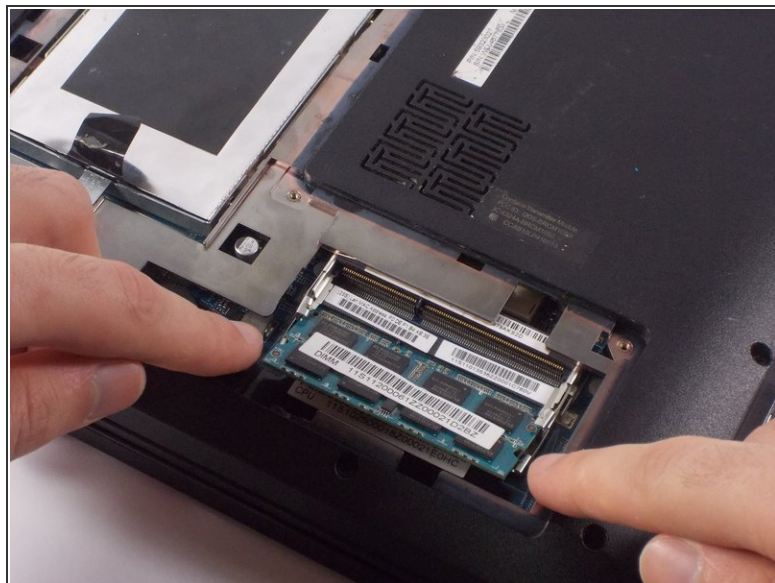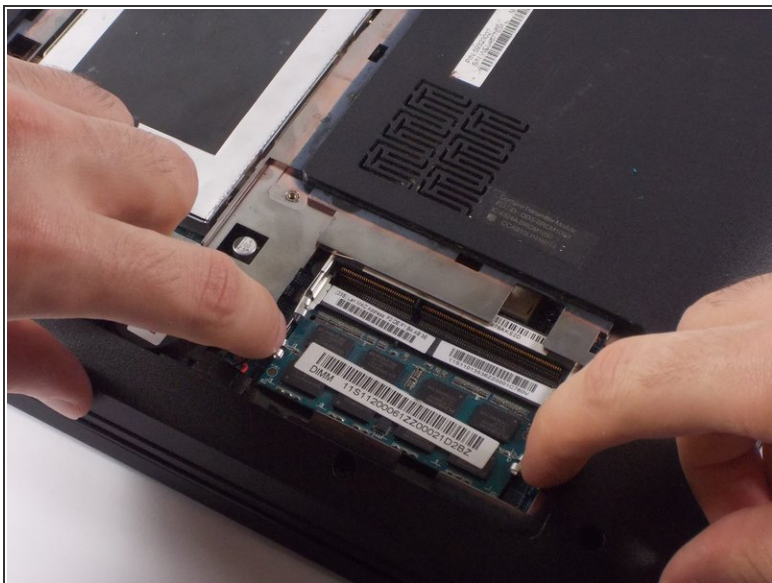

- Release your RAM by pulling its locks away from one another.

Step 6

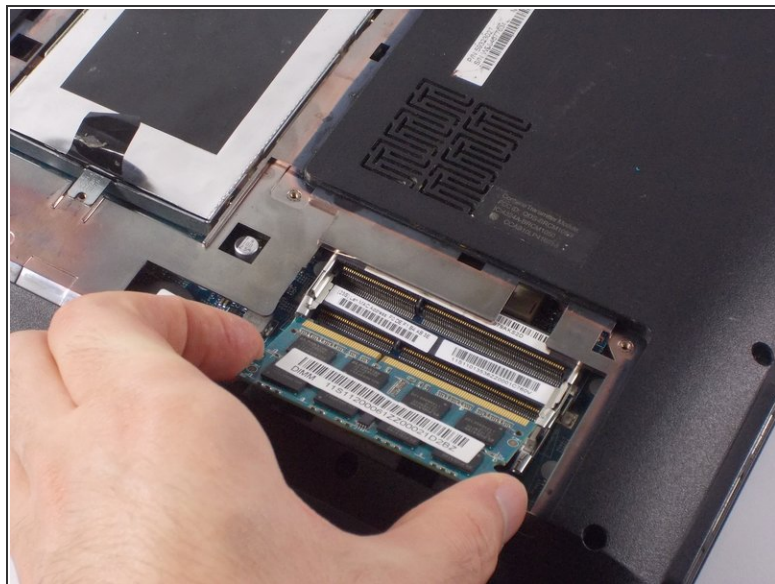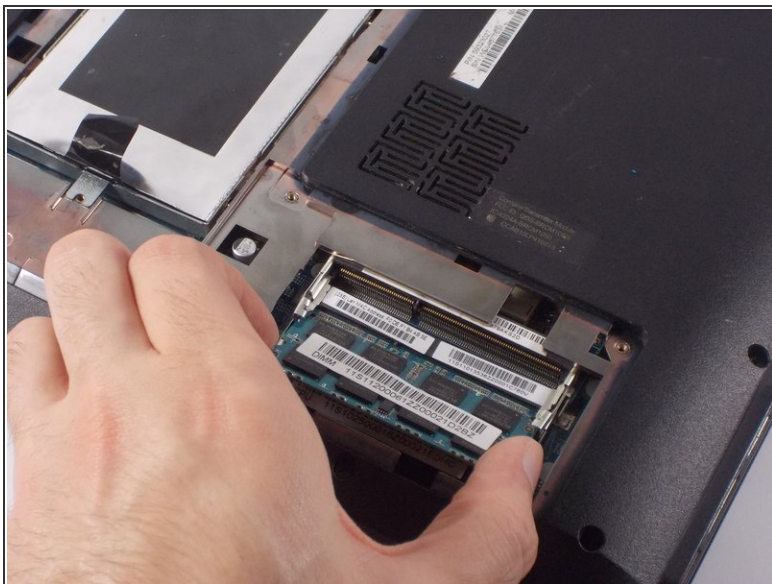

- Remove RAM by carefully pulling it away from its socket.

To reassemble your device, follow these instructions in reverse order.