



Archos 70b Stand Replacement

Replacing the kickstand from the device.

Written By: Joshua Stoddard



INTRODUCTION

In this guide you will learn how to remove and replace the kickstand on the Archos 70b. This is an easy replacement guide, the only difficult part is opening the device.

TOOLS:

- [Spudger](#) (1)
 - [T4 Torx Screwdriver](#) (1)
-

Step 1 — Back plate



- Remove all the tape and plugs to access the screws beneath.

Step 2



- Unscrew all 5 of the .3mm t4 screws from the back plate of the device.

Step 3



- Gently go around the outside of the back plate and pry the back cover off.

Step 4 — Stand



- Remove the small blocking between the battery and stand
- Push the pin towards the battery until completely free

Step 5



- Remove stand
- The stand should easily slide out once the pin is removed

To reassemble your device, follow these instructions in reverse order.