


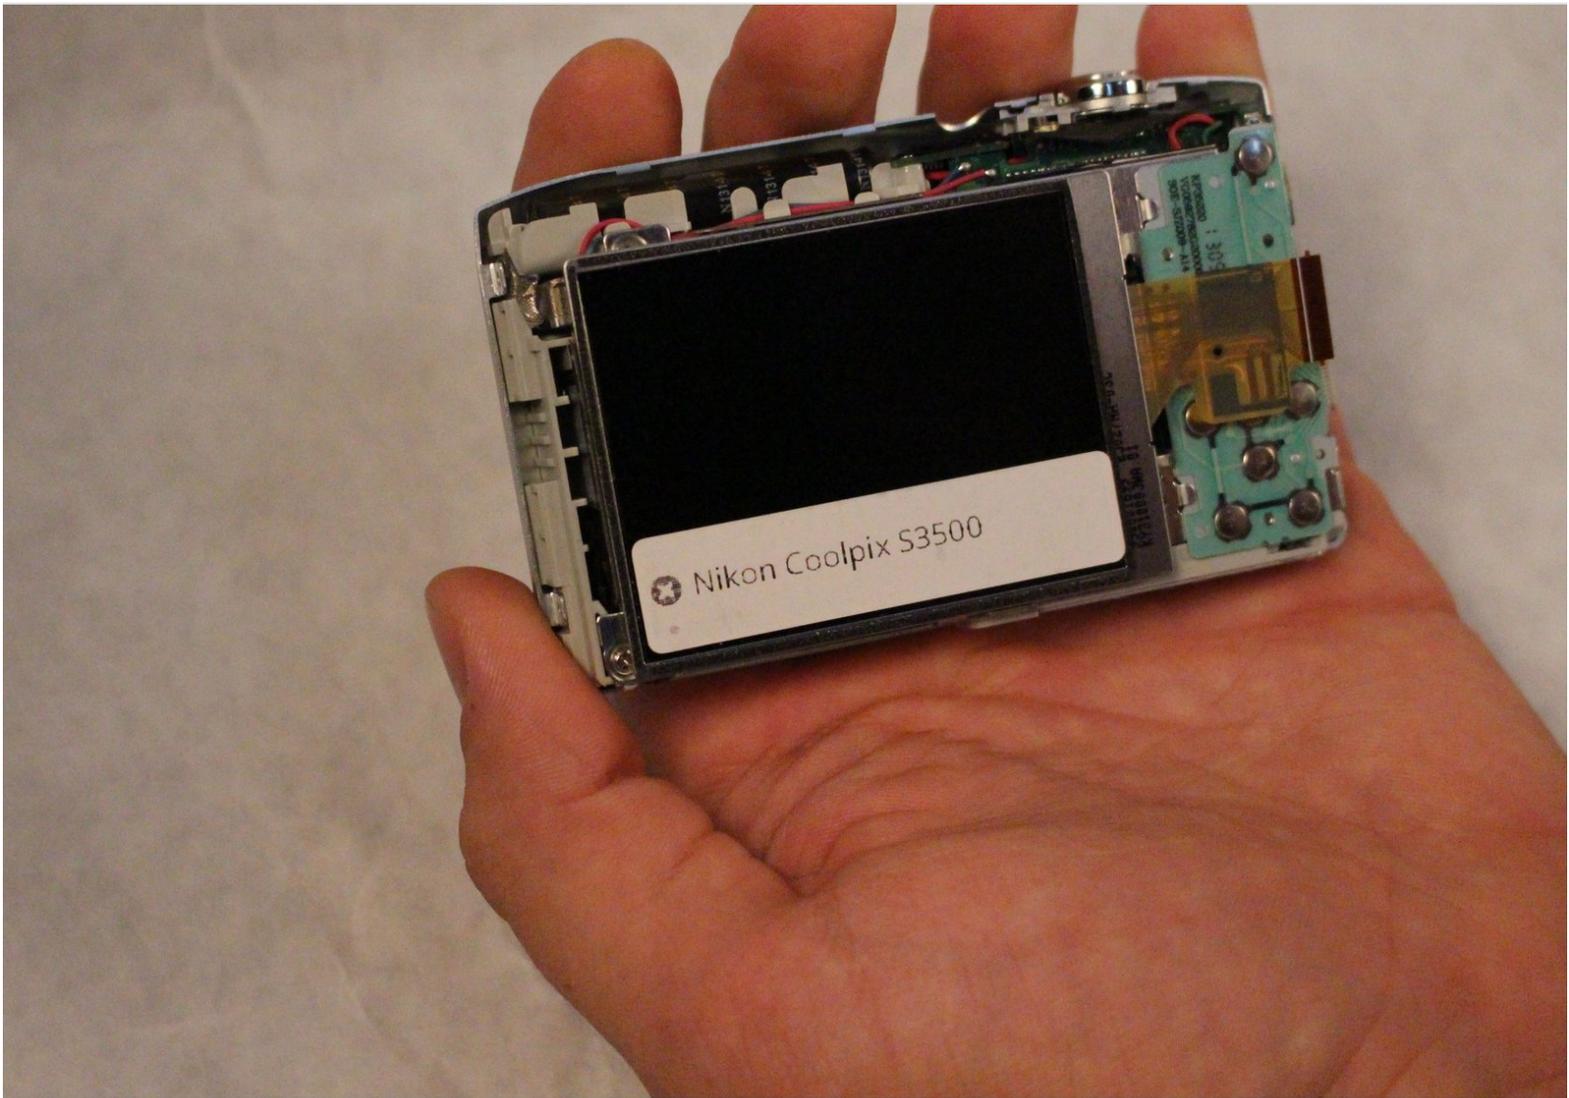

Nikon Coolpix S3500 Shutter Release Button Replacement

Don't you hate when you go to take that timeless photograph and the shutter release button will not function? We do, so we decided to make a guide that will aid you in the replacement of the shutter release button on this device.

Written By: Jordan Rosemeyer





INTRODUCTION

The guide will give you a step by step tutorial on how to replace the shutter release button on the device.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel Disassembly

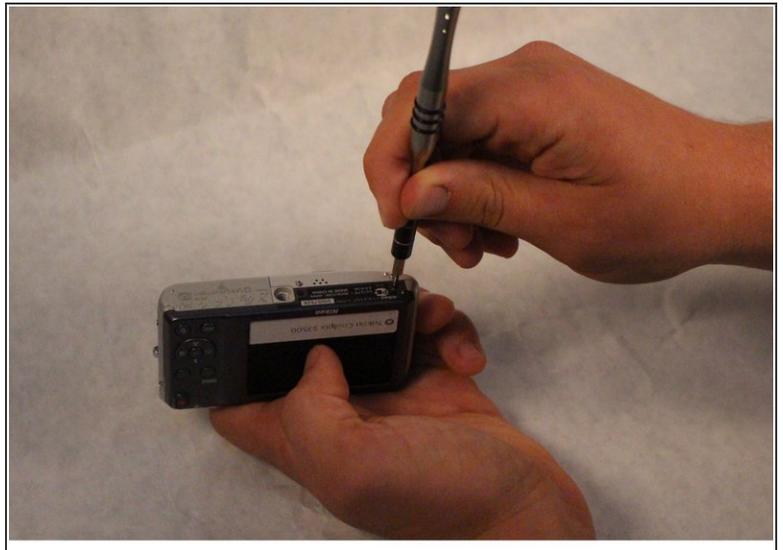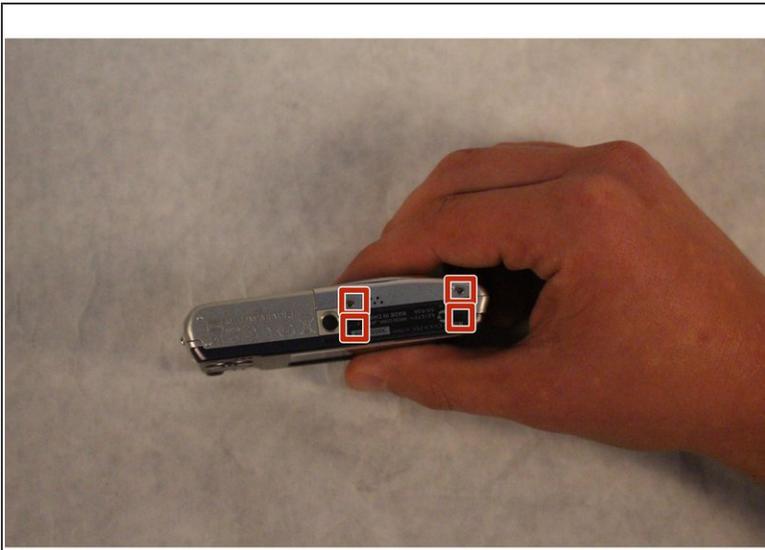



- With the battery door facing upward, take your PH000 screwdriver and remove the 4 mm screws from the bottom of the device.

Step 2

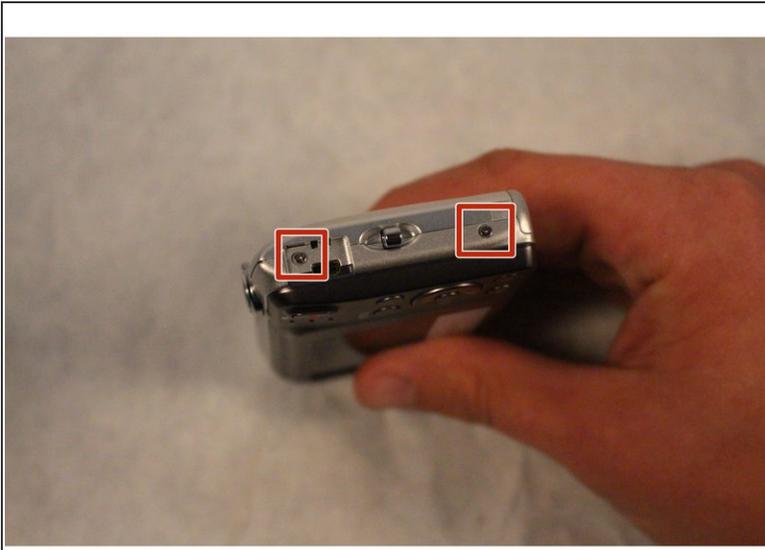

- After removing the screws, rotate the device to where the micro USB port is facing up.
- Now, take your PH000 screwdriver and remove the two 4 mm screws from the device.

Step 3

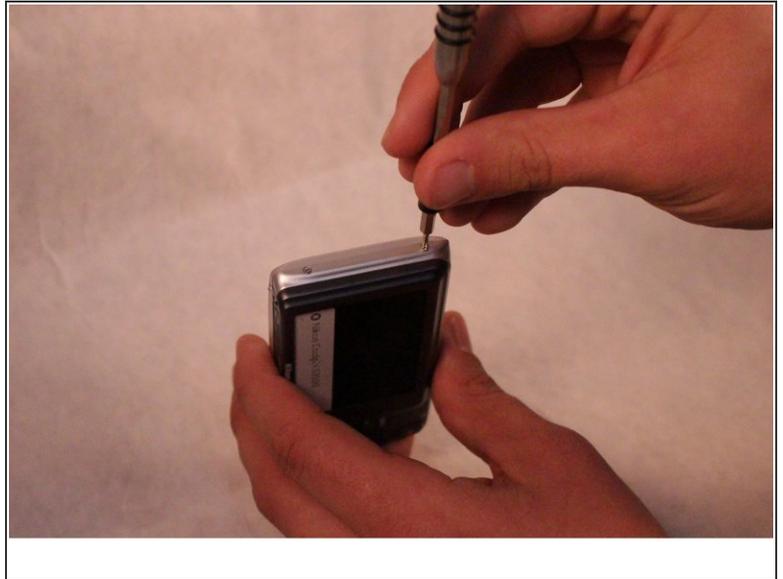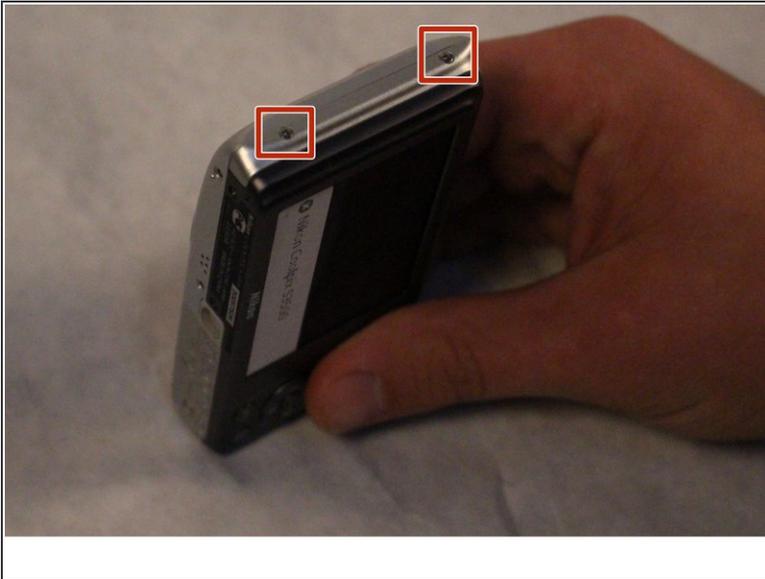


- Rotate the device 180 degrees so that the opposite side of the device is now facing upwards.
- Now, take your PH000 screwdriver and remove the two 4 mm screws from the device.

Step 4




- After all of the screws are removed, rotate the device so that the bottom of the device is now facing upward.
- With your index finger, press down and slide open the memory card/battery door.

Step 5

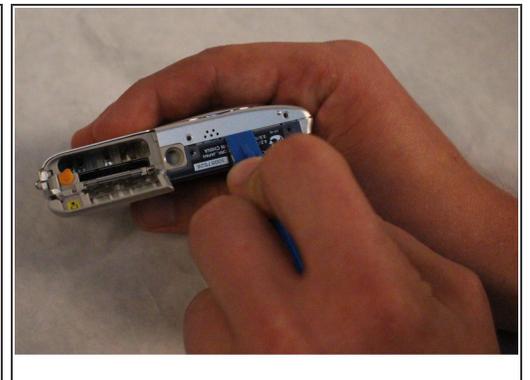

- Now take the plastic opening tool, and place it in the seam of the device.
- Now, work the tool around the seam of the device until you can safely pry open the device.


Step 6

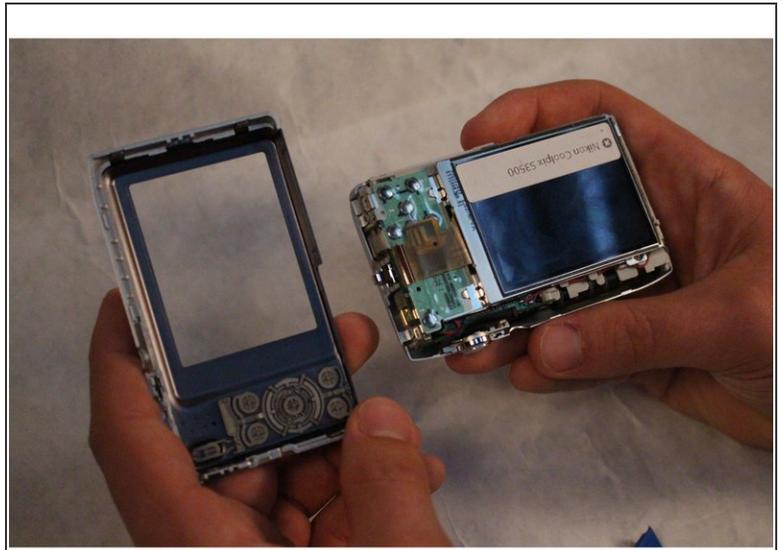

 Be careful when removing the back piece of your device.


- Using your free hand, finish prying off the back piece of the device.

Step 7 — Shutter Release Button

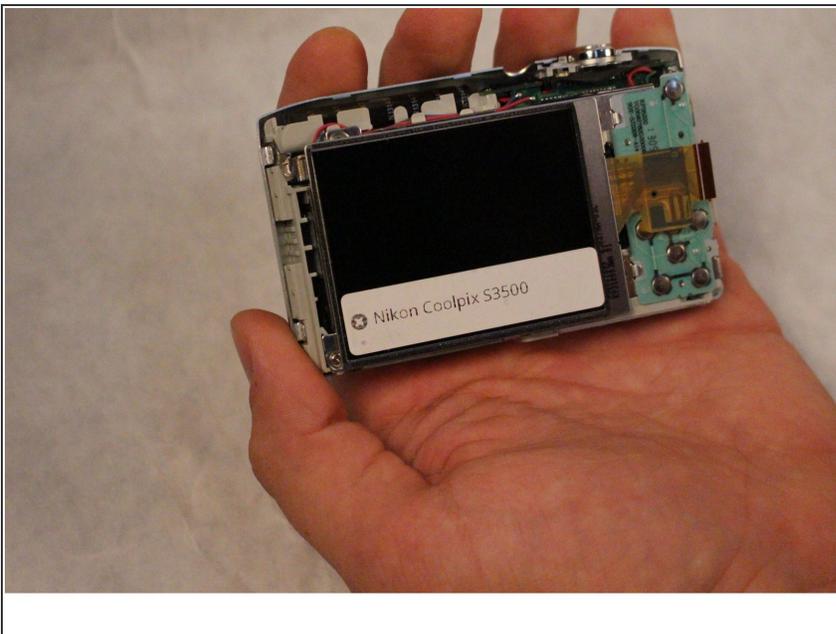


- Place the device shutter side down onto your hand.

Step 8

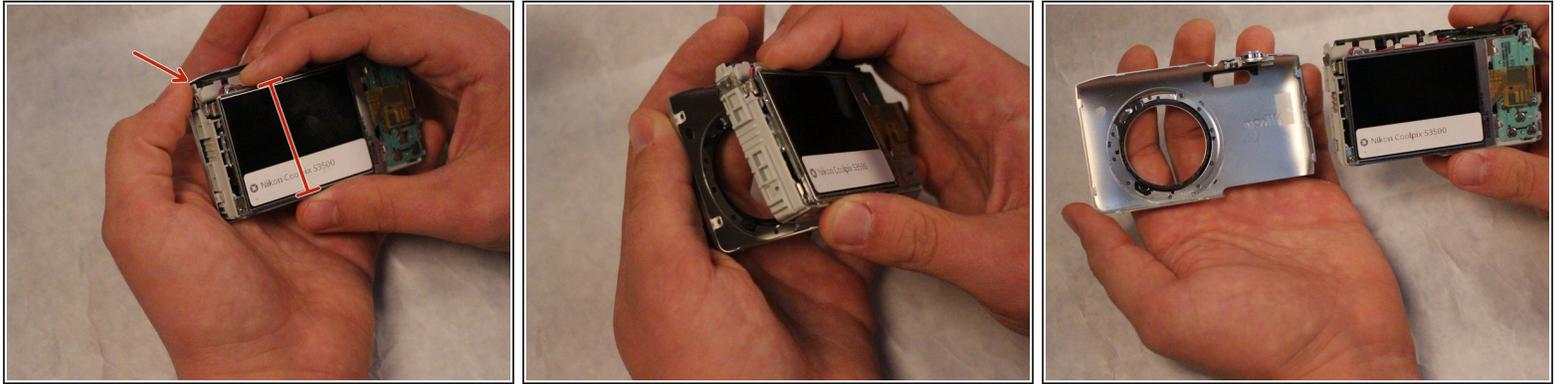

- Take the thumb of the hand holding the device and place it on the plastic front panel.
- ⚠ Make sure to be gentle so no damage is done to any of the inner components of the device.
- With your free hand, grip the outer edge of the LCD screen and start to pull the LCD from the front panel of the device.
- This should cause the two pieces to separate from each other.

Step 9

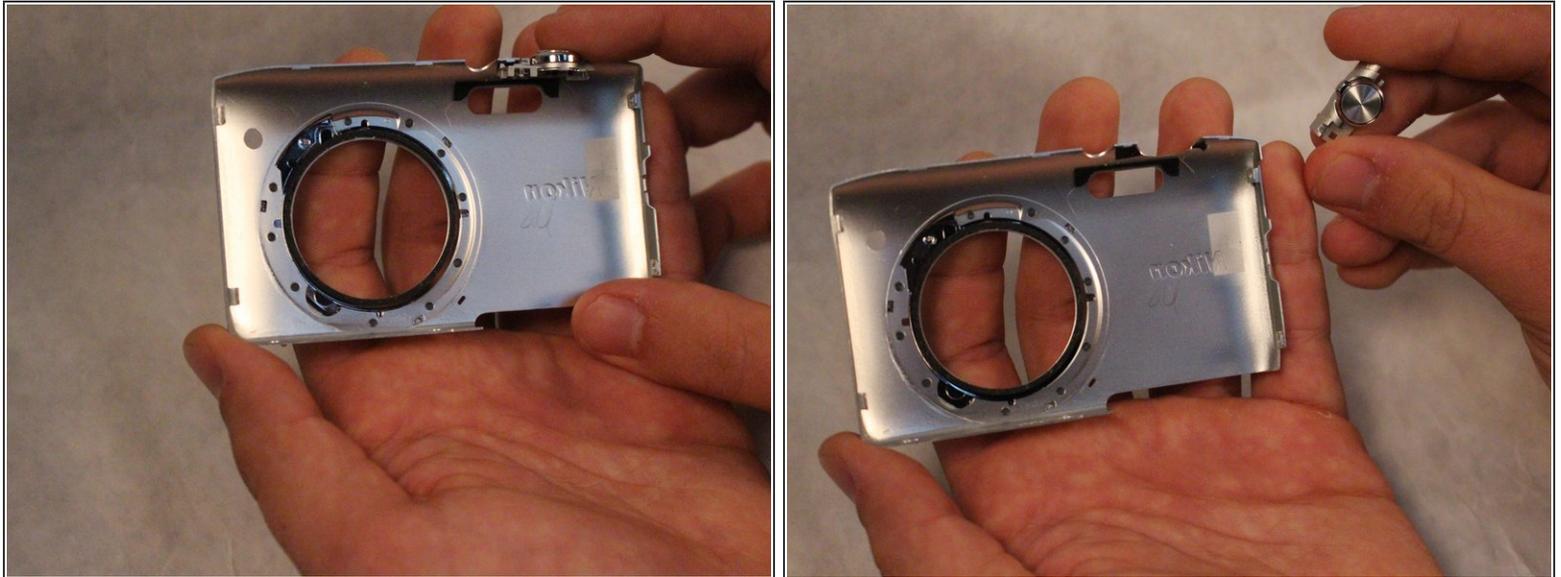

- Now that the 2 pieces are separated, take your free hand and gently press down on the shutter release button.
- This should cause the shutter release button to come free from the front panel of the device.

To reassemble your device, follow these instructions in reverse order.