



Motorola Rival Battery Replacement

This guide will teach you how to replace the battery for the Motorola Rival

Written By: Sekani Paul



INTRODUCTION

Battery Replace

Step 1 — Battery



- Locate the back side of the device

Step 2



- Locate the lever to release the back cover

Step 3



- Push down on the lever, while pulling the back cover away from the device

Step 4



- Place index finger and thumb on the battery and pull away from device.

Step 5



- Replace faulty battery with replacement battery and replace the cover on the device

To reassemble your device, follow these instructions in reverse order.