



# HKC P774A Digitizer Replacement

This guide will allow you to replace the digitizer.

Written By: Sean McCauley



---

## INTRODUCTION

The digitizer is the part that fits in front the LCD. This is records touch feedback.


---



### TOOLS:

- [Precision Tweezers Set](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Digitizer

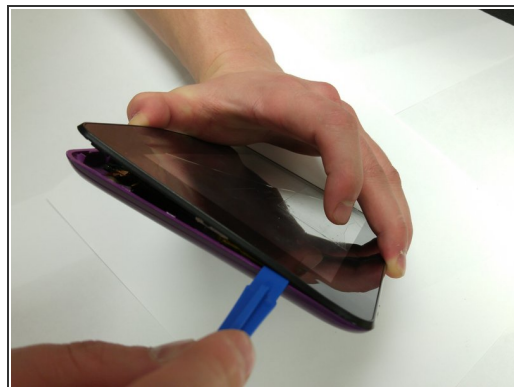

- Insert the flat end of the spudger into the side of the device
- This will create a gap between the device and screen housing.
- Insert the plastic opening tool into this gap and move it along this gap.

**⚠ Make sure not to bent the digitizer during this step.**


- The screen housing and device will now be separated.

## Step 2



- Once the digitizer has been removed from the body, disconnect the digitizer band from the motherboard.
  - Two small black pins (circled in red) will need to be unlocked.
  - Unlock the pins by pulling them outward with the tweezers.
- ⚠ Make sure the pins are released entirely before attempting to remove the band.
- Remove the band using the tweezers.

## Step 3

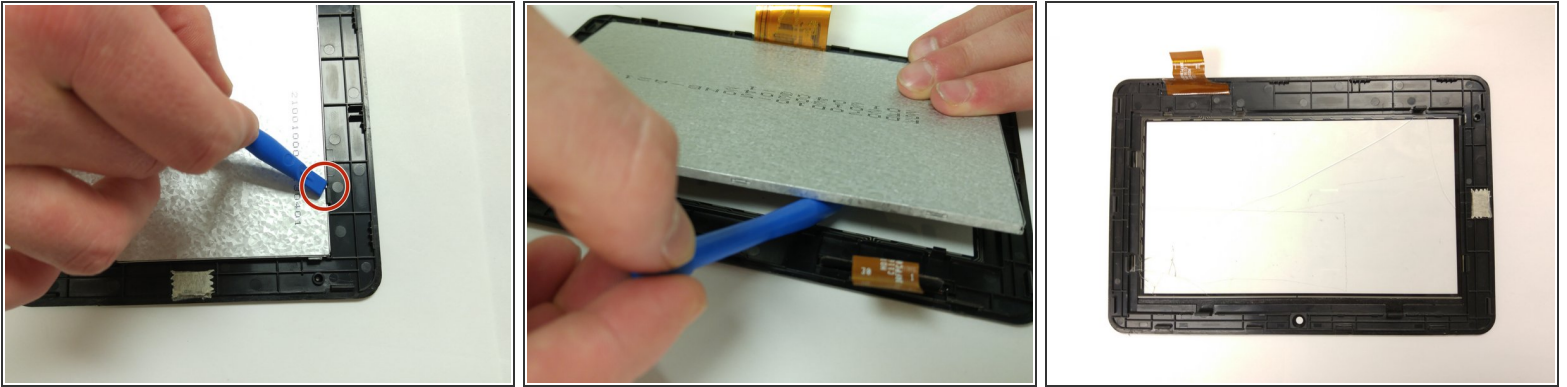

- Once the digitizer has been disconnected from the motherboard, the LCD screen must be removed from the digitizer.
  - Push open the tabs (circled in red) using the flat end of the plastic spudger.
- ⚠ Be sure not to bend the digitizer while prying.
- Continue to release all tabs while continuing to pry the LCD away from the digitizer.

To reassemble your device, follow these instructions in reverse order.