




HKC P774A LCD screen Replacement

This guide will show you how to replace the inner LCD screen on this tablet.

Written By: Sean McCauley

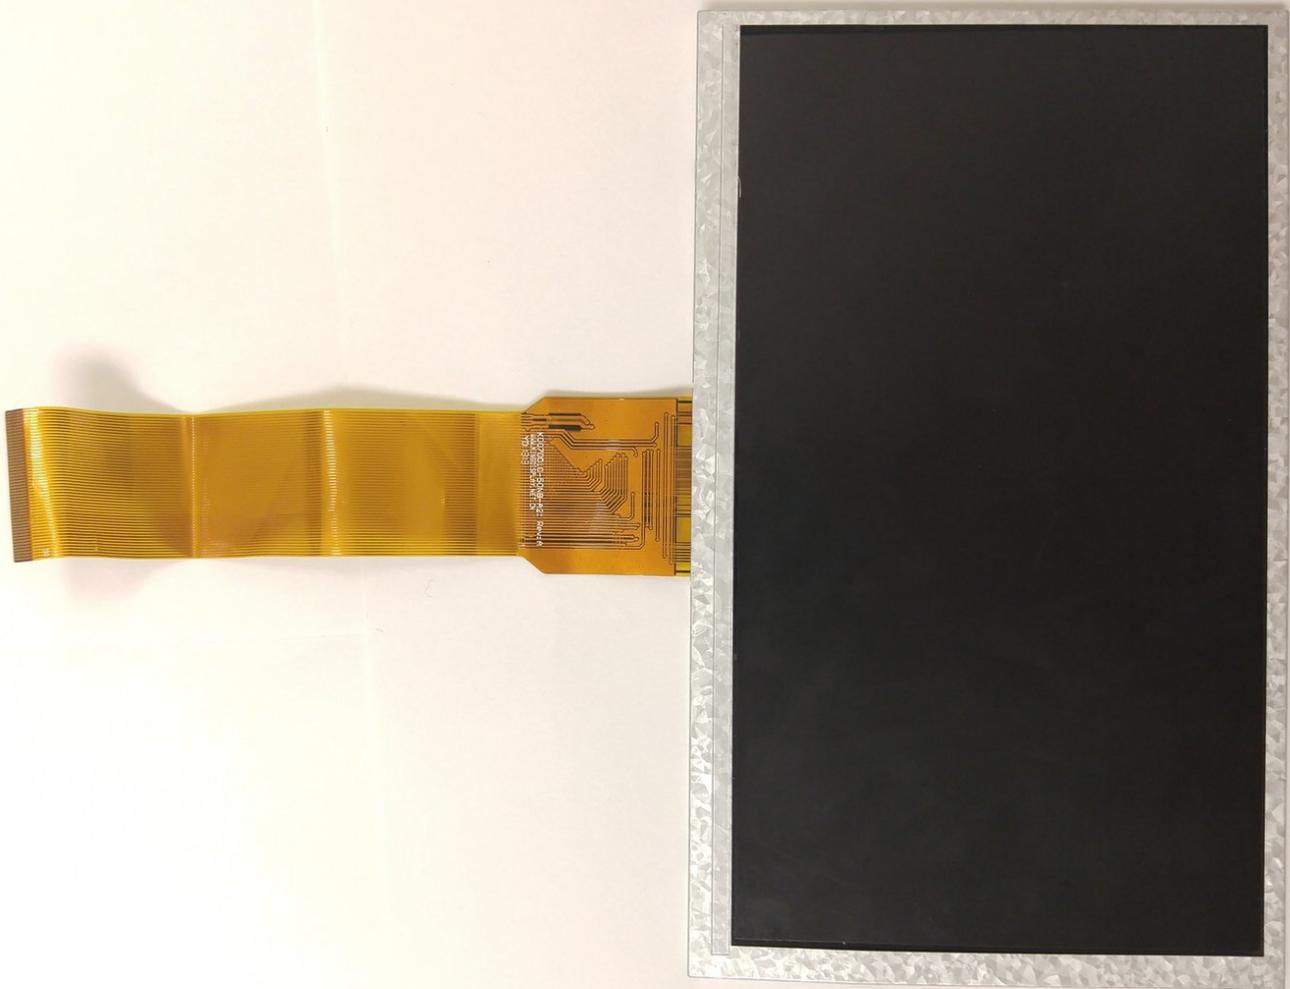

INTRODUCTION

The LCD screen is what projects information from the tablet. This is not to be confused with the digitizer (see digitizer replacement guide). On this tablet, the LCD screen is on the inside of the device.

TOOLS:

- [Precision Tweezers Set](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Digitizer



- Insert the flat end of the spudger into the side of the device
- This will create a gap between the device and screen housing.
- Insert the plastic opening tool into this gap and move it along this gap.

⚠ Make sure not to bent the digitizer during this step.

- The screen housing and device will now be separated.

Step 2




- Once the digitizer has been removed from the body, disconnect the digitizer band from the motherboard.
 - Two small black pins (circled in red) will need to be unlocked.
 - Unlock the pins by pulling them outward with the tweezers.
- ⚠ Make sure the pins are released entirely before attempting to remove the band.**
- Remove the band using the tweezers.

Step 3



- Once the digitizer has been disconnected from the motherboard, the LCD screen must be removed from the digitizer.
 - Push open the tabs (circled in red) using the flat end of the plastic spudger.
- ⚠ Be sure not to bend the digitizer while prying.**
- Continue to release all tabs while continuing to pry the LCD away from the digitizer.

Step 4 — LCD screen

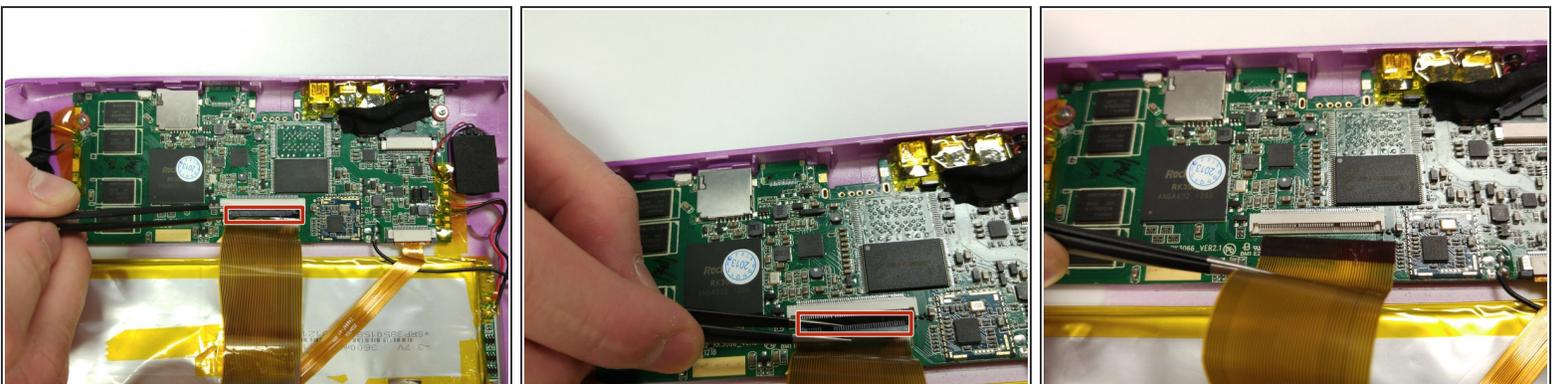

- Once the digitizer has been removed, the LCD can be disconnected from the motherboard.
- Use the tweezers to unlock the black pins (outlined in red) that connect the LCD band to the motherboard.
- Once the pins have been removed, pull the band out using the tweezers.

⚠ Make sure not to damage the band when removing the pins.

To reassemble your device, follow these instructions in reverse order.