




# Lenovo Essential B570 Back Panel Replacement

Use this guide to access your devices easily replaceable inner components.

Written By: Samuel Filiettaz

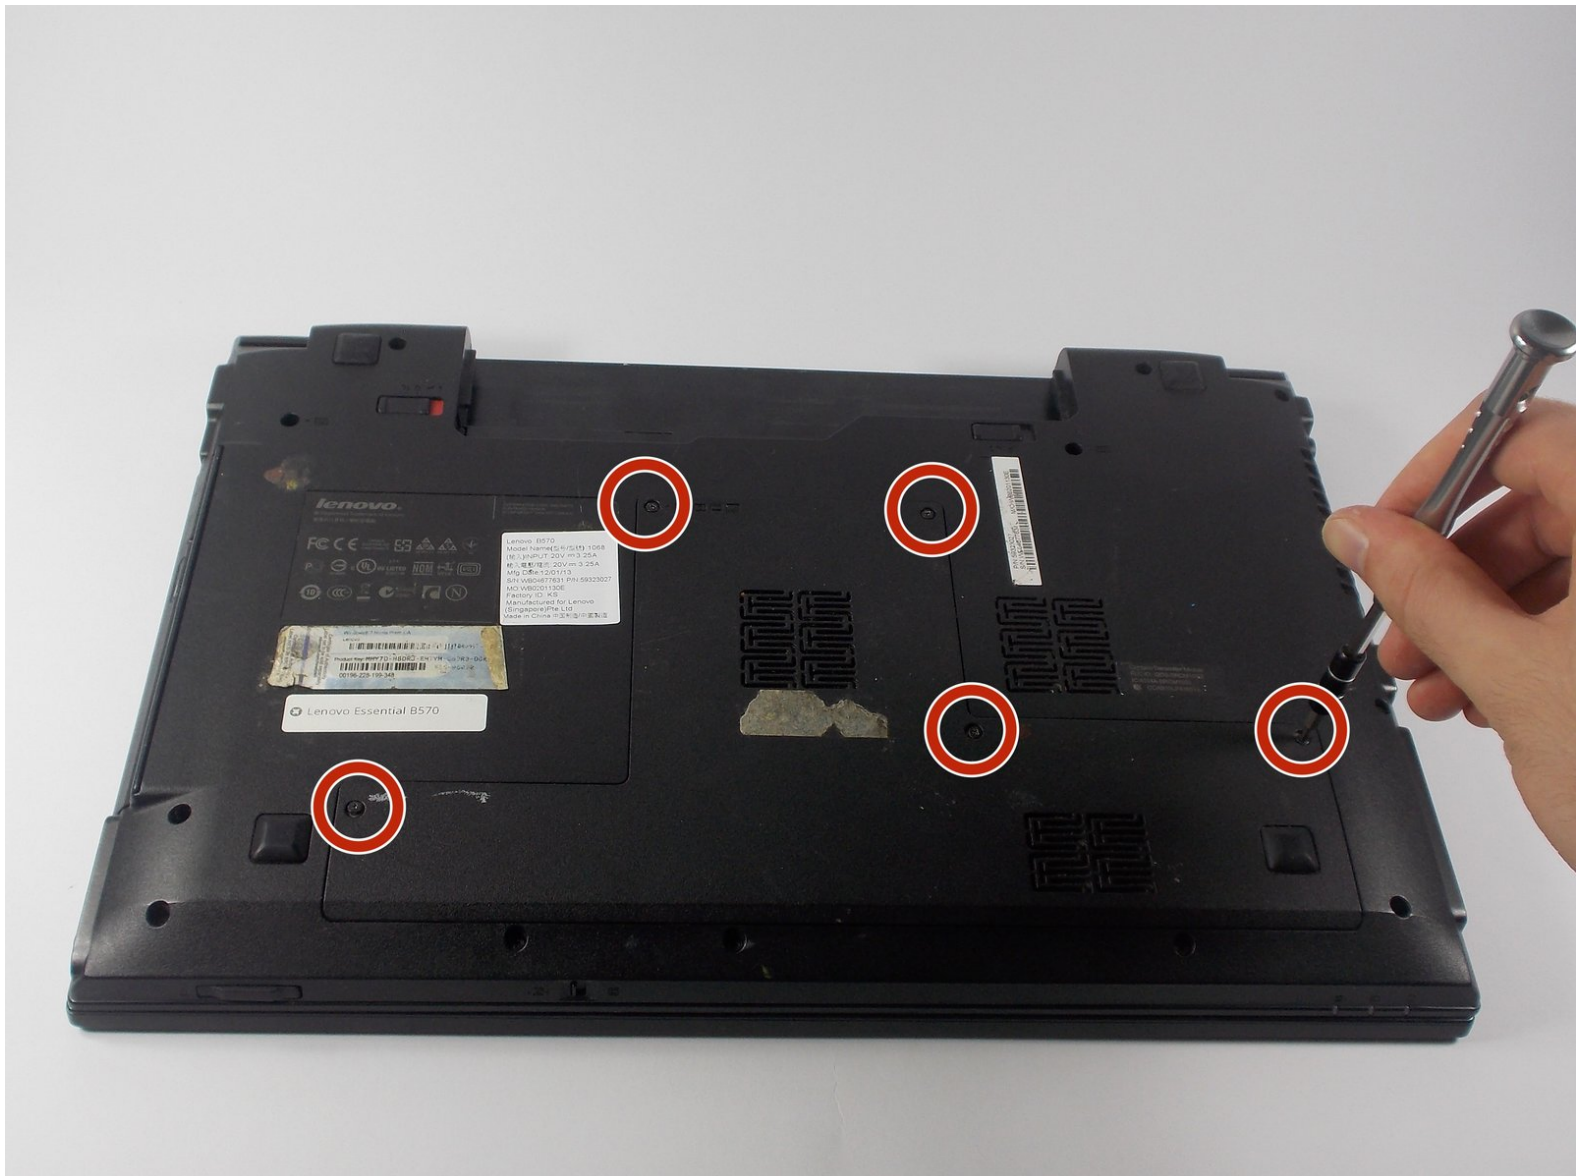

## INTRODUCTION


This guide shows how to remove the back panel of the laptop. This is required in order to access the laptop's inner components.

---

### TOOLS:



- [iFixit Opening Tools](#) (1)
  - [64 Bit Driver Kit](#) (1)
-

## Step 1 — Back Panel

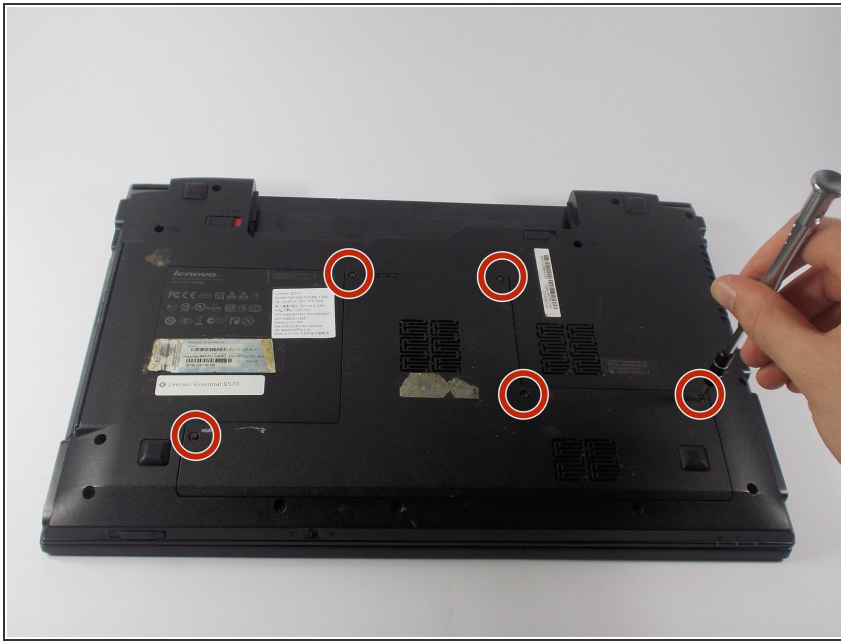

- Loosen the five Philips screws that secure the panel.
- ⓘ The screws do not actually fully remove from the panel. Loosening them as much as you can will be enough to disconnect them from the laptop.

## Step 2

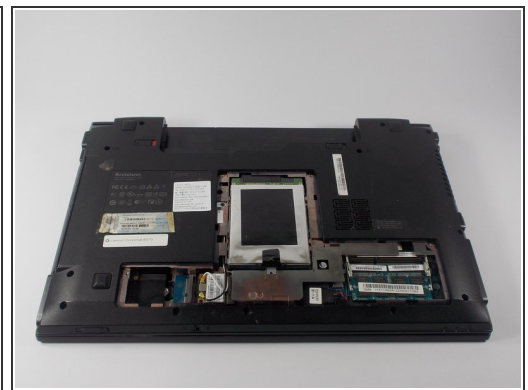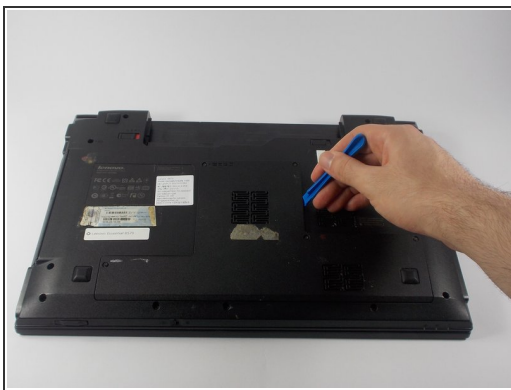

- Prop open the cover with a plastic opening tool.

⚠ If the cover does not come off easily, do not force it. Make sure all screws are loosened.

To reassemble your device, follow these instructions in reverse order.