



# Samsung SPH-M360 Logic Board Replacement

This guide demonstrates how to replace the logic board correctly on the Samsung SPH-M360.

Written By: Ashraf Nasser



 **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Battery



- Locate the arrow on the panel of the rear side of the phone.
- Use one or two fingers to apply light pressure downwards on the rear panel and push or pull in the direction of the arrow.

## Step 2



- Place finger inside the small semi-spherical slot near the top of the battery.
- Lightly pull the battery away from the phone. This should not require much effort.

## Step 3 — Casing



- Remove the four screws on the corners of the casing.

⚠ The volume and camera buttons may fall out

## Step 4




- Starting near the top of the casing, use the plastic opening tool to gently pry the casing open.
  - ⓘ The case should require some effort to pry open, but do not use excessive force for risk of breaking the rear panel.
- Slowly work the plastic opening tool around the edge of the casing, gently prying it around at all sides.

## Step 5



- Once the casing has been fully pried off of the phone, it should be easily removed by hand.
  - ⚠ The buttons for the camera and volume may fall out while removing the casing. Be careful not to lose the small pieces.

## Step 6 — Logic Board

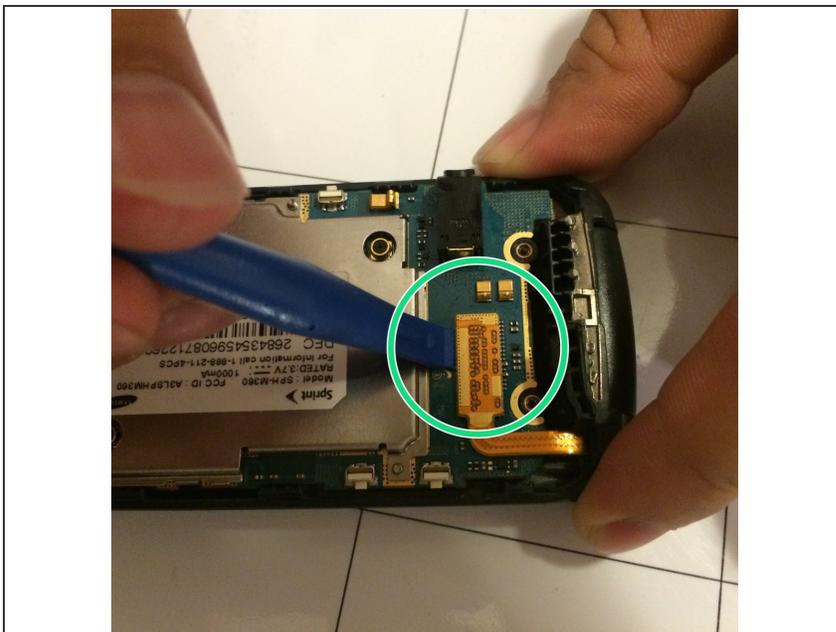



- Use the plastic opening tool to gently detach the golden strip from the logic board.
  - The strip should detach easily with little force required.

## Step 7



- Use the plastic opening tool to pry the logic board out of the phone case from the bottom area of the phone.

## Step 8

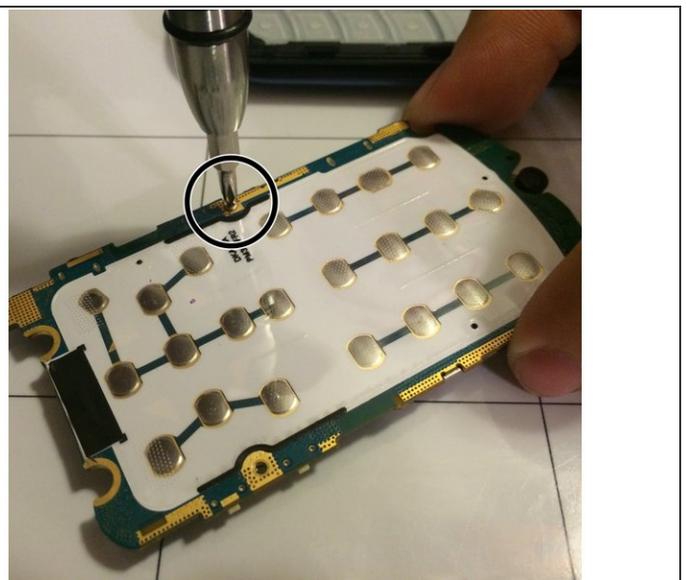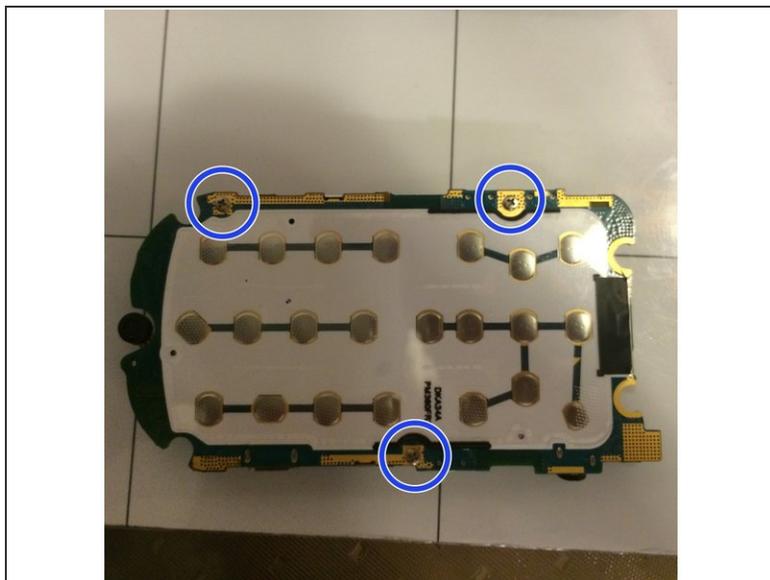

- Flip the logic board over and locate the three screws along the edges.
- Carefully unscrew the three screws to remove the panel covering the logic board.
- ⚠ Be careful with the screws after unscrewing them because they are small and easy to lose.

## Step 9



- Flip the logic board back over and use the plastic opening tool to remove the metal cover on the logic board.
- This will not require much force, so be gentle.

To reassemble your device, follow these instructions in reverse order.