

HTC Desire SD Card Replacement

Replace SD card in HTC Desire.

Written By: Hunter Kent





PARTS:

• Spudger (1)

• 16 GB SD Card (1)


Step 1 — Battery





Insert flat end of spudger into slot on the top of phone to pry off the back plate.

Step 2

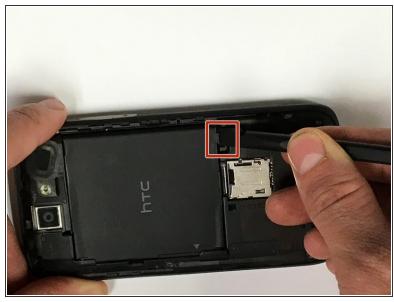



- Use flat edge of spudger to lift the bottom right corner of the battery.
- Lift the battery out of the phone.

Step 3 — SD Card



 Remove SD card and replace with a new one.

To reassemble your device, follow these instructions in reverse order.