




# HTC Desire HTC Desire Speaker Replacement

This guide is to replace a speaker for the HTC Desire.

Written By: Scott Olson

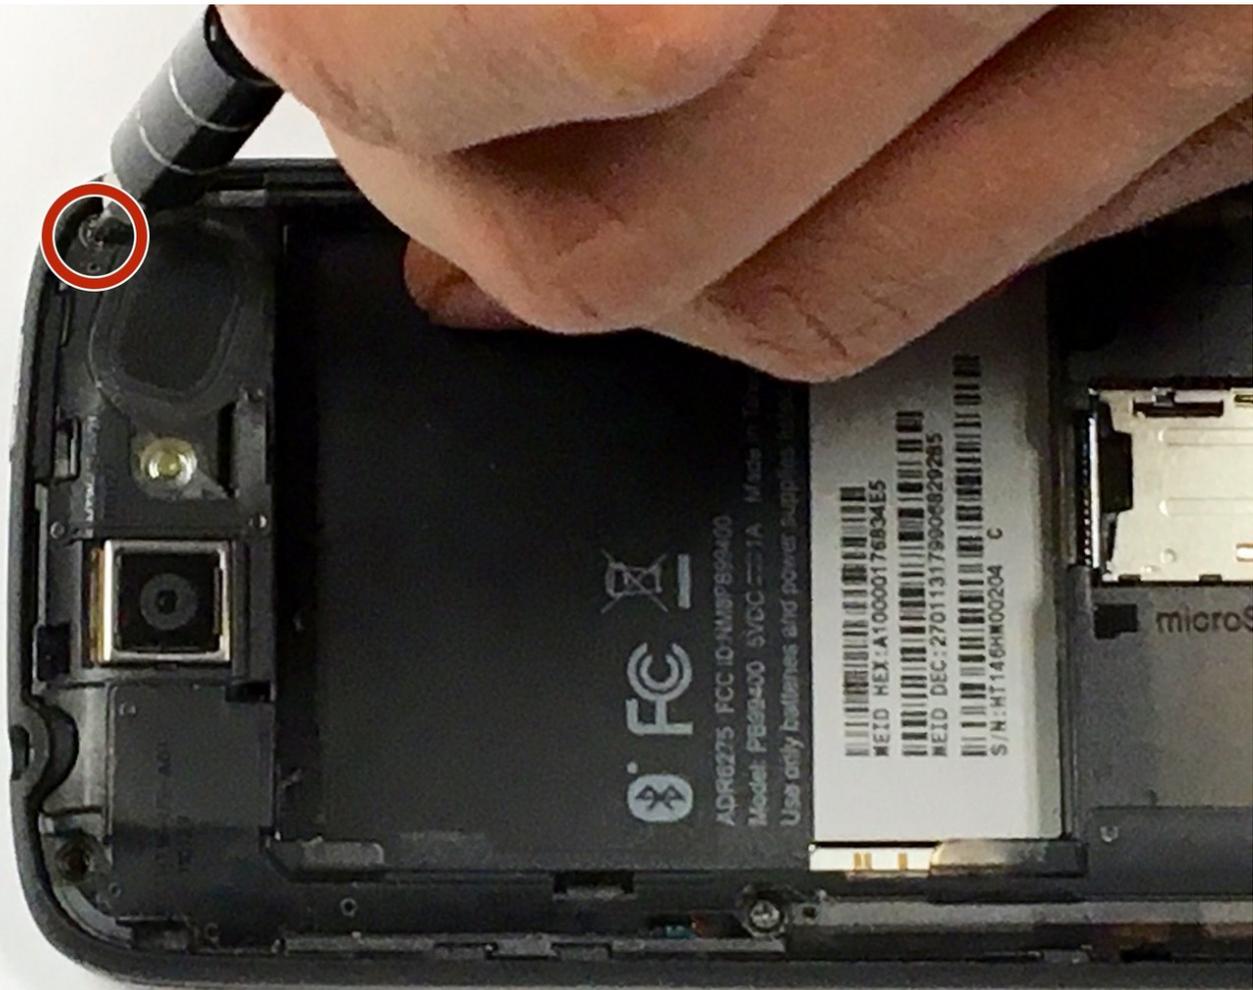

---

## INTRODUCTION

This will show reader how to disassemble the inside of a HTC Desire. It will teach readers how to replace the internal speaker of the phone.

---

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)

### PARTS:


- [HTC Desire Speaker](#) (1)

## Step 1 — Battery




- Insert flat end of spudger into slot on the top of phone to pry off the back plate.

## Step 2

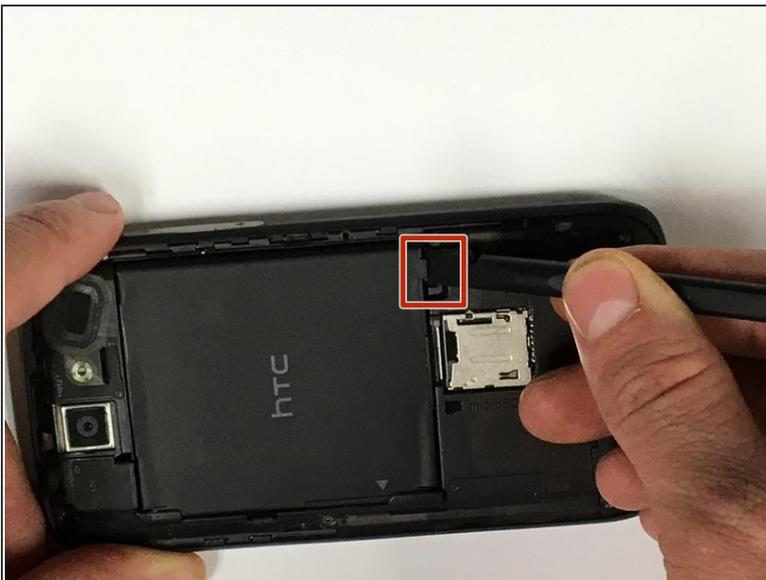


- Use flat edge of spudger to lift the bottom right corner of the battery.
- Lift the battery out of the phone.

### Step 3 — Vibrator

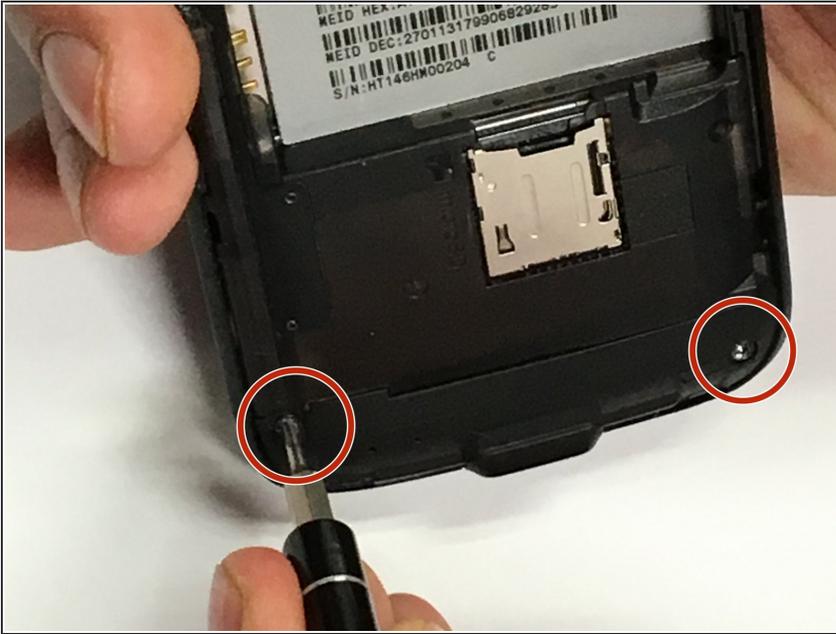


- Remove the lower, two 0.5 mm screws using Torx T5 screwdriver.

### Step 4

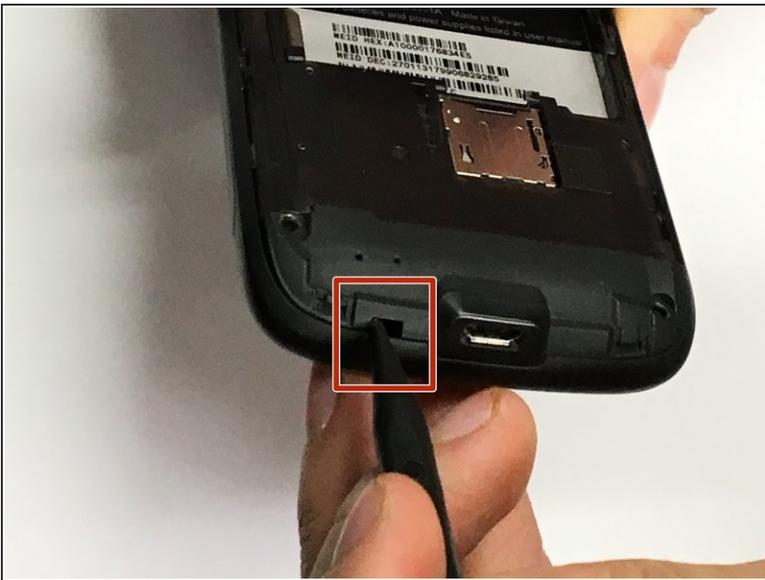

- Use spudger to pry vibrator panel off.

## Step 5

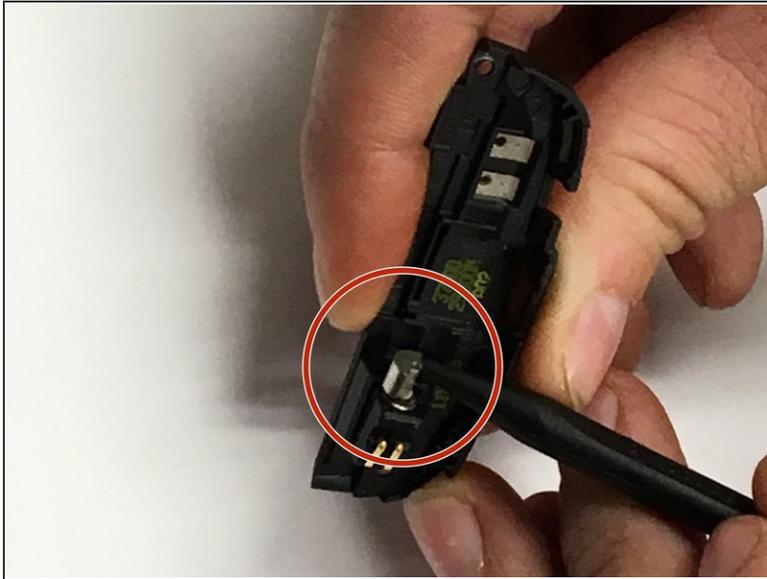


- Use spudger to remove the vibrator.

## Step 6 — HTC Desire Speaker




- Take out the upper, two 0.5 mm Torx screws with a Torx T5 bit.

## Step 7

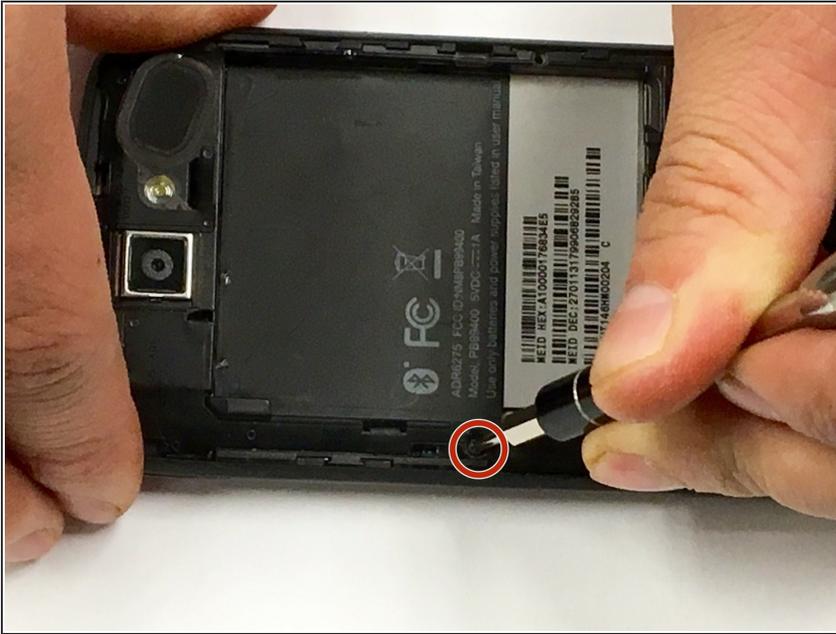


- Take the middle 0.3 mm phillips screw out with the phillips J000 tip.

## Step 8

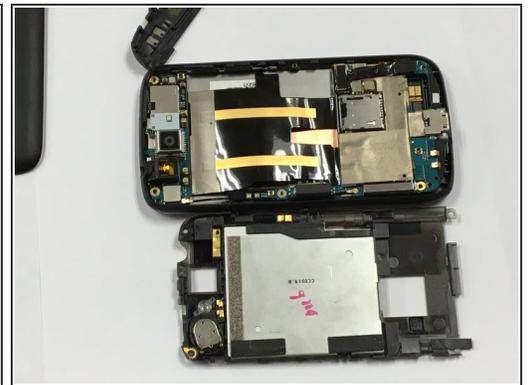


- Using the spudger, pry up to remove the battery holder.

## Step 9

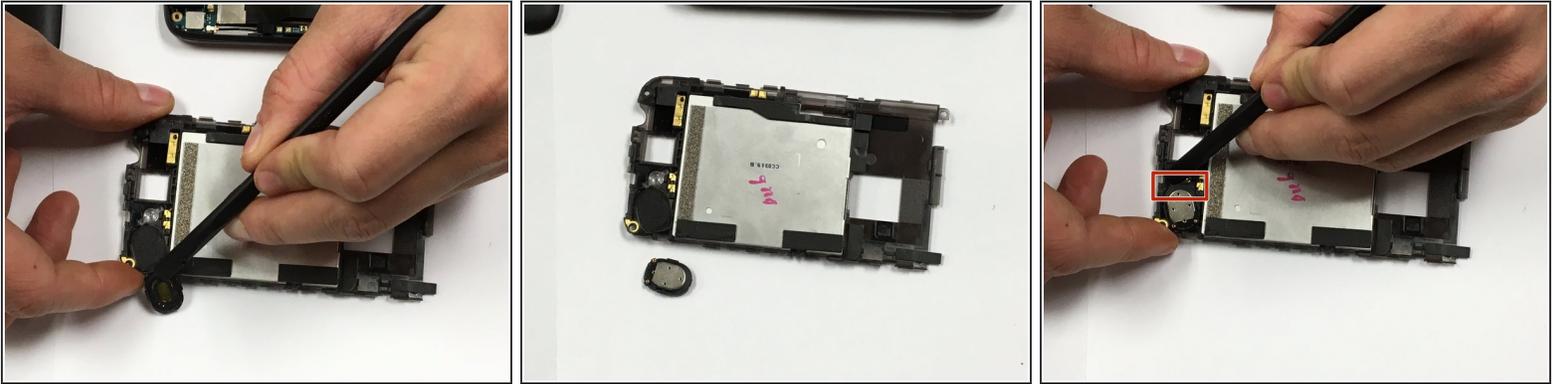

- Using the spudger, pry the speaker out of its place.

## Step 10

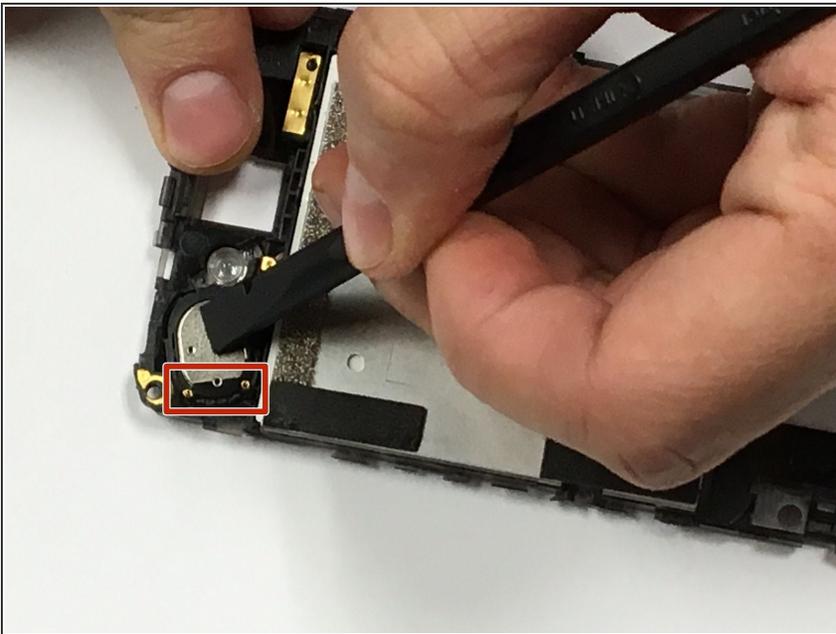

- With the springs up, place the new speaker into position.

To reassemble your device, follow these instructions in reverse order.