



# Canon PowerShot S120 Display Replacement

Show how the display of a Canon S120 can be replaced if it's cracked.

Written By: Dave Hakkens



---

## INTRODUCTION

The display of my canon s120 broke. Ordered a new display somewhere on Ebay and installed it. It's super easy!

---



### TOOLS:


- [Small Cross Screwdriver](#) (1)
-

## Step 1 — Get your camera



- So that's the problem: a cracked screen. The rest still works fine.

## Step 2 — Get a new part

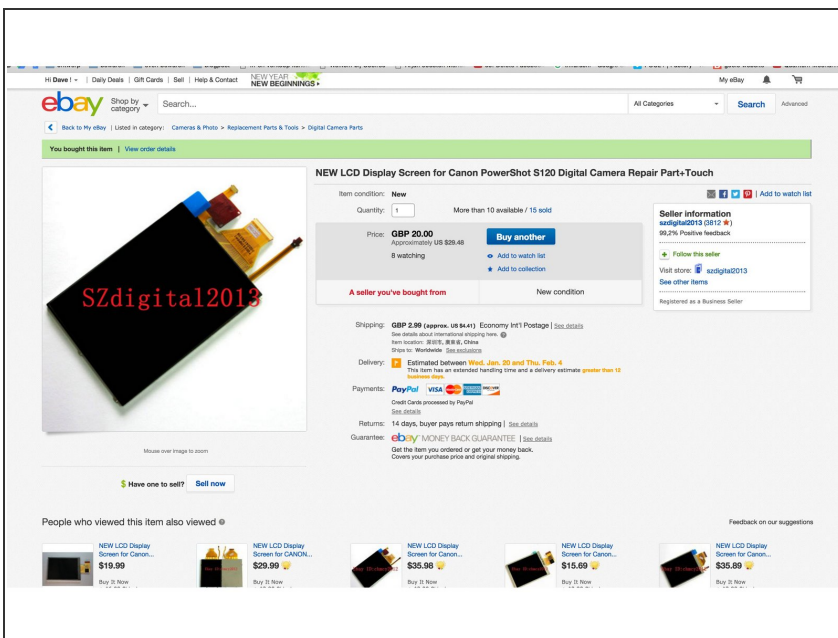

- First step is finding a replacement part. Canon support isn't very good here. So I've been searching the




web and found some good results on Ebay. Order one of these, all you need.

### Step 3 — Open the camera




- You only need one small cross screw head screwdriver to open up the camera. It takes 9 screws to take out the display.

### Step 4 — Disconnect the connectors

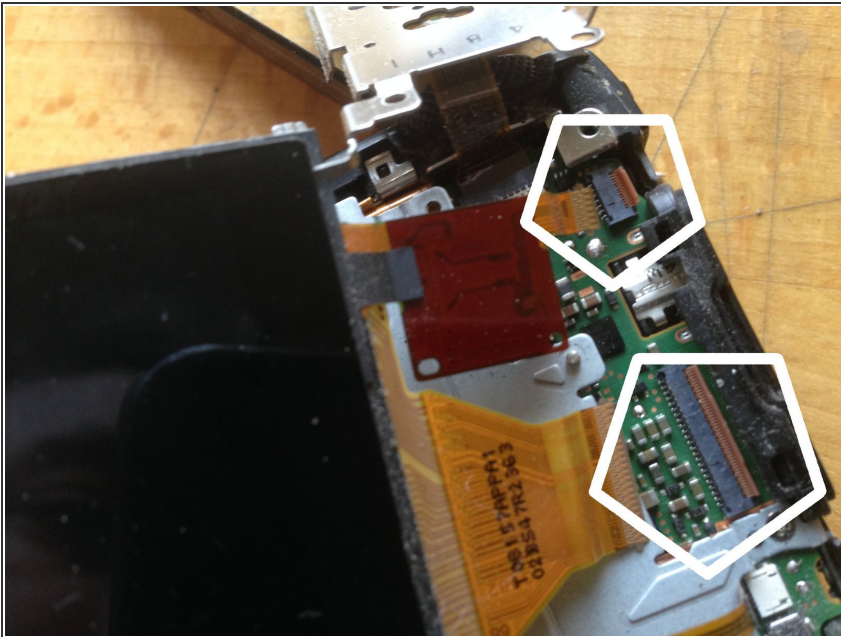

- The display is plugged in the camera with 3 little connectors. Carefully click the hinge open and you can pull out the connector.

## Step 5 — Overview of all the components

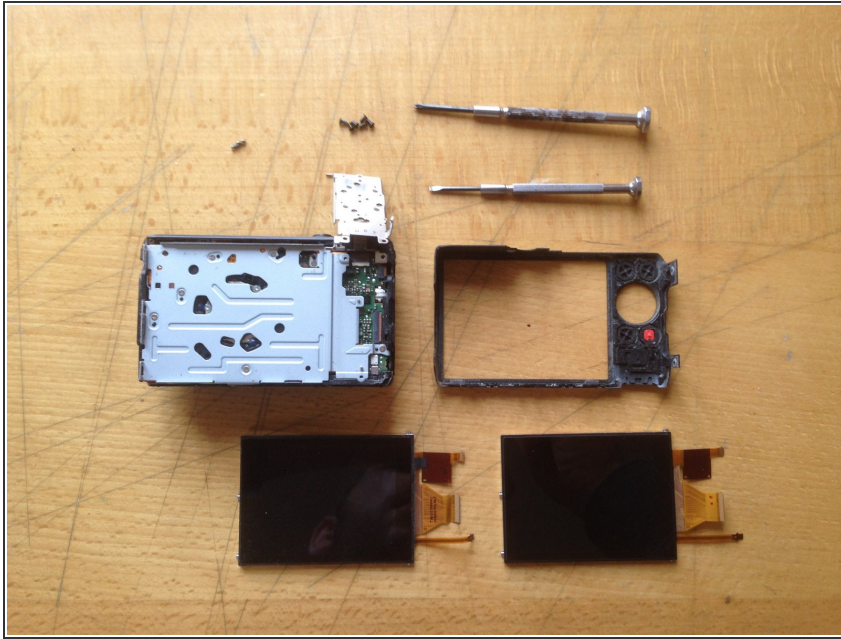

- this is what it should look like when everything is disassembled.

## Step 6 — Put it back together



- replace the display, plugin the connectors, and screw it back together. It should work again right after you turn it on

To reassemble your device, follow these instructions in reverse order.