


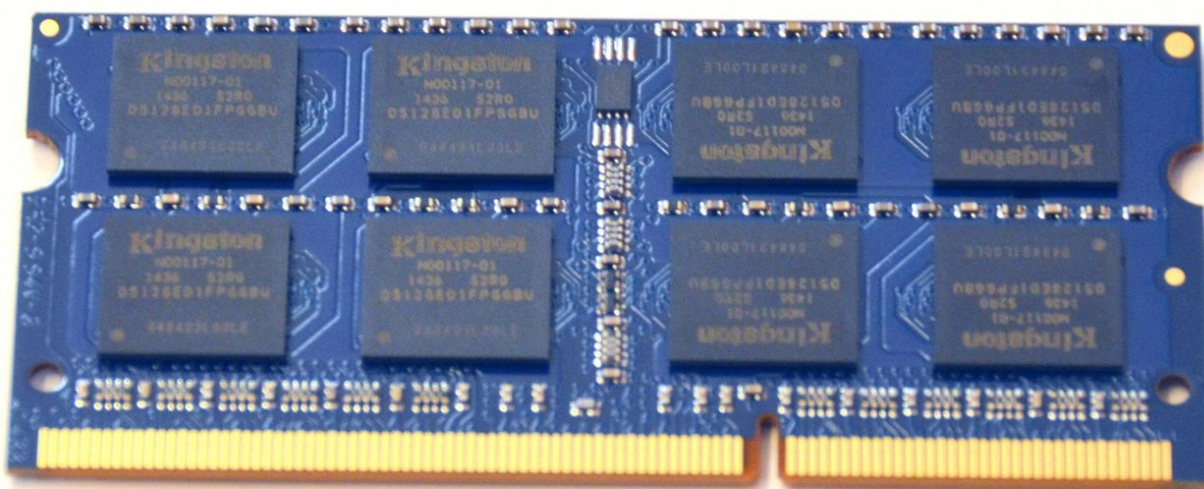

Replacement or expansion RAM

Written By: Felice Suglia





TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)

Step 1 — Battery




- Unlock the battery latch on the right.
- Unlock the battery lock on the left.
- Remove the battery pack from its slot.

Step 2 — Access to Components 2

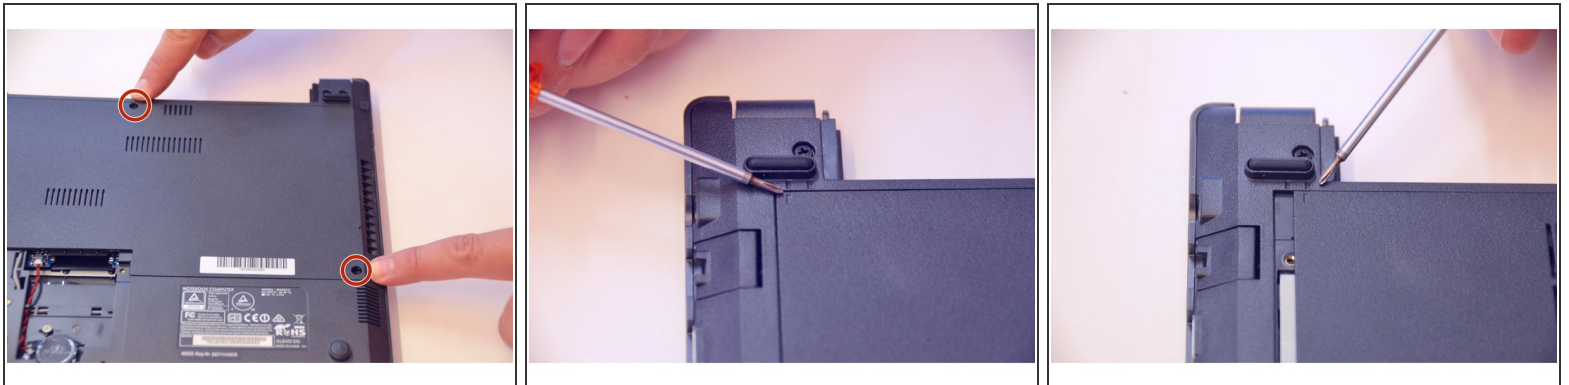




- Using the Philips # 0 screwdriver, unscrew the 2 screws of the top cover
- Check the marks indicating the direction in which the cover must be removed.
- Remove the bottom cover by removing it in the direction of the markers.

Step 3

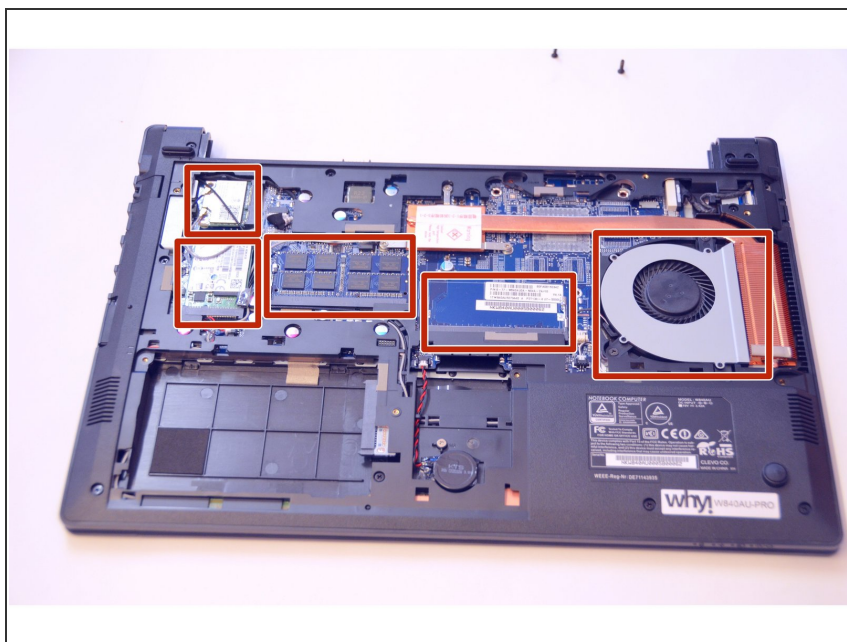


- Then appear the other components of the Laptop.

Step 4 — RAM

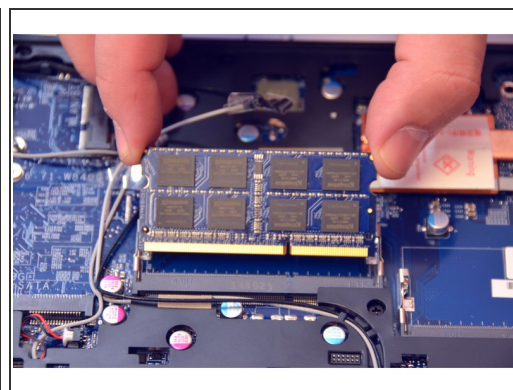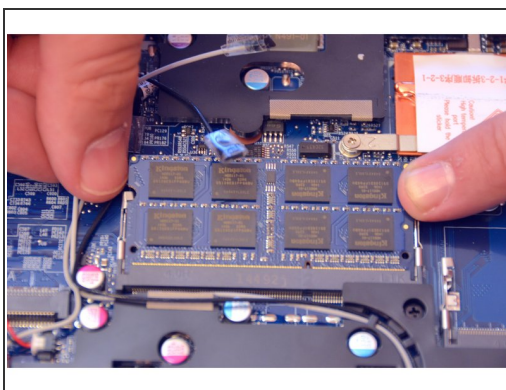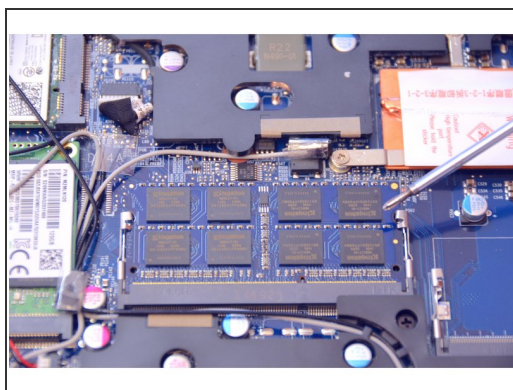

- Here is the RAM bar installed by default.
- Locate and remove the spring blades that hold the memory module in place.
- Remove the memory module (RAM).

Step 5

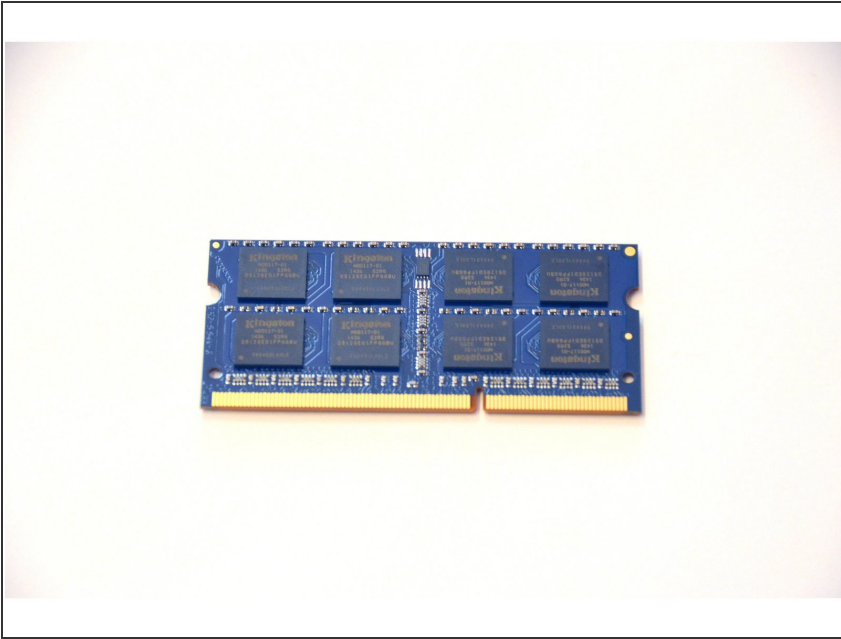

- Here is the RAM bar out of its location.

To reassemble your device follow the instructions in reverse order