



# Fujifilm X-M1 Back Case Replacement

Use this guide to replace a damaged back case,...

Written By: Kelsea Weber



# INTRODUCTION

Use this guide to replace a damaged back case, or open the case to access other components of your camera.

We highly suggest you use a [magnetic project mat](#) or an organization tray. This camera has **many** different types of screws and keeping them organized is key to proper reassembly.

---

## TOOLS:

[Phillips #00 Screwdriver](#) (1)

[Tweezers](#) (1)

[Magnetic Project Mat](#) (1)


[Spudger](#) (1)

---


## Step 1 — Battery



- Turn the camera upside down to locate the battery compartment.
- Slide the button up to open the compartment.
- Slide the orange button up to release the battery.

 The battery is not shown in these photos.

## Step 2 — Back Case

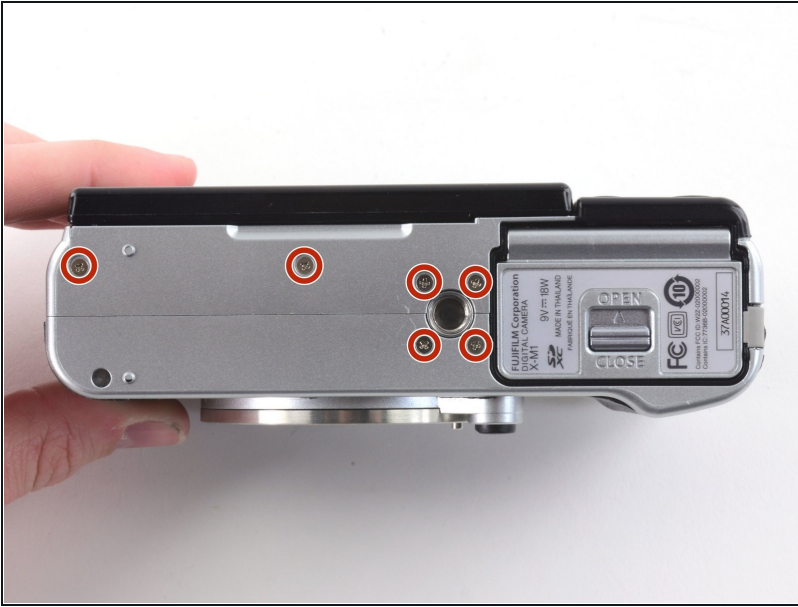

- Remove the six 2.5 mm Phillips screws from the bottom of the camera.

## Step 3



- Use [tweezers](#) or a finger nail to peel back the rubber cover on the left handgrip.
- Remove the 3.4 mm Phillips screw.
- Remove the 3.7 mm screw.

## Step 4



- Use tweezers or a fingernail to peel back the rubber cover on the right handgrip.
- Remove the 3.2 mm Phillips screw.
- Remove the 3.8 mm Phillips screw.
- Remove the 2.8 mm Phillips screw.

## Step 5



- Use tweezers to slide the metal shield straight out of the external flash mount.



## Step 6




- Remove the four 4.6 mm Phillips screws from the external flash mount.
- Use tweezers or two fingers to remove the mount clip.

## Step 7




- Extend the LCD.
- Remove the two black 4.3 mm Phillips screws from the back case.

## Step 8

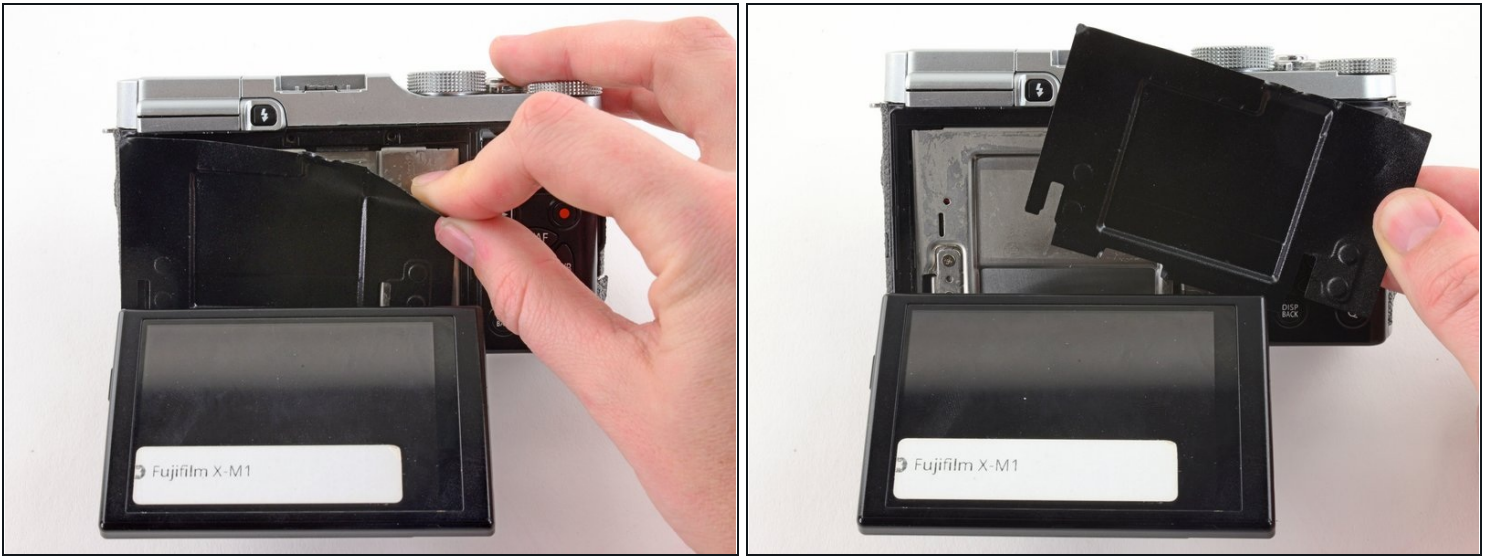

- Use two fingers to peel back and remove the black plastic cover from behind the LCD.

## Step 9

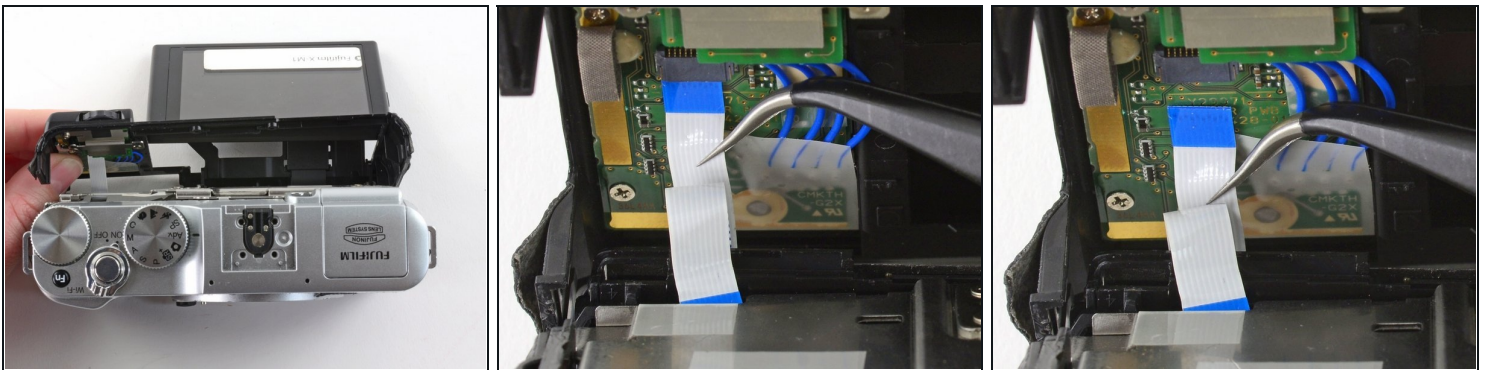

- Slowly pull the back frame away from the camera.

**⚠ Do not attempt to remove the frame, as it is attached to the camera by a ribbon cable.**

- Use tweezers to pull the white and blue ribbon cable out of the connector.

## Step 10



- Slide the frame around the LCD to remove it from the camera.


## Step 11



- Remove the two 2.6 mm Phillips screws from the right side of the metal frame.




## Step 12

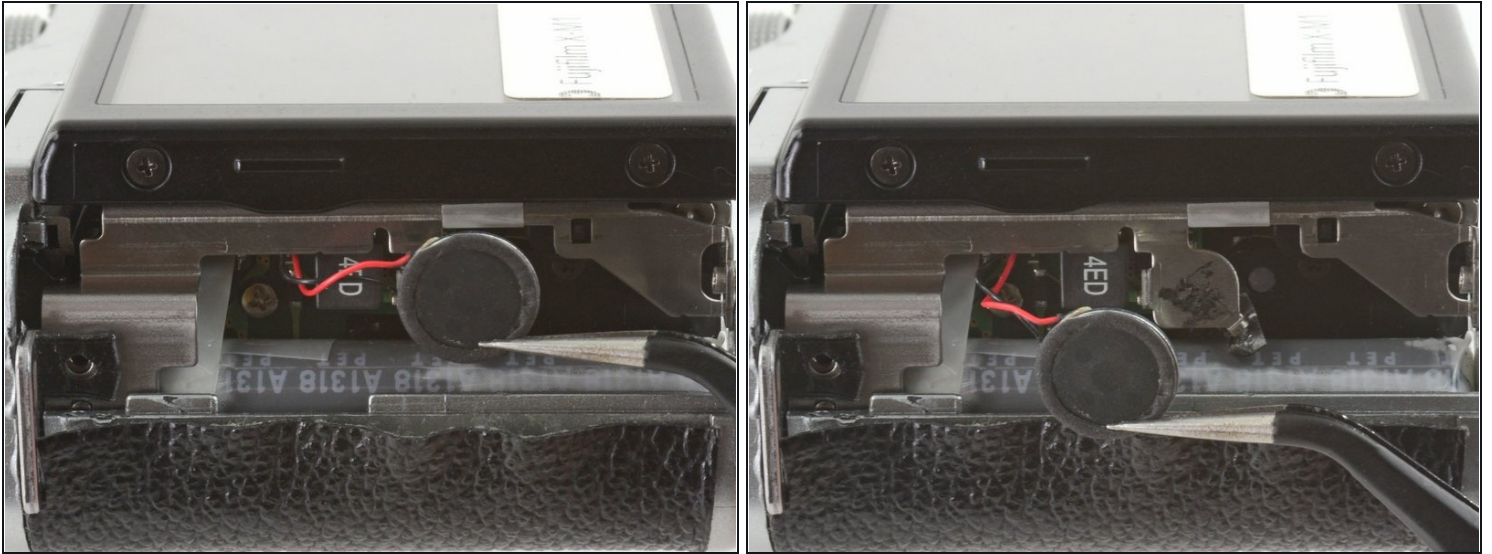

- Use tweezers to unhook the speaker near the left handgrip.

## Step 13

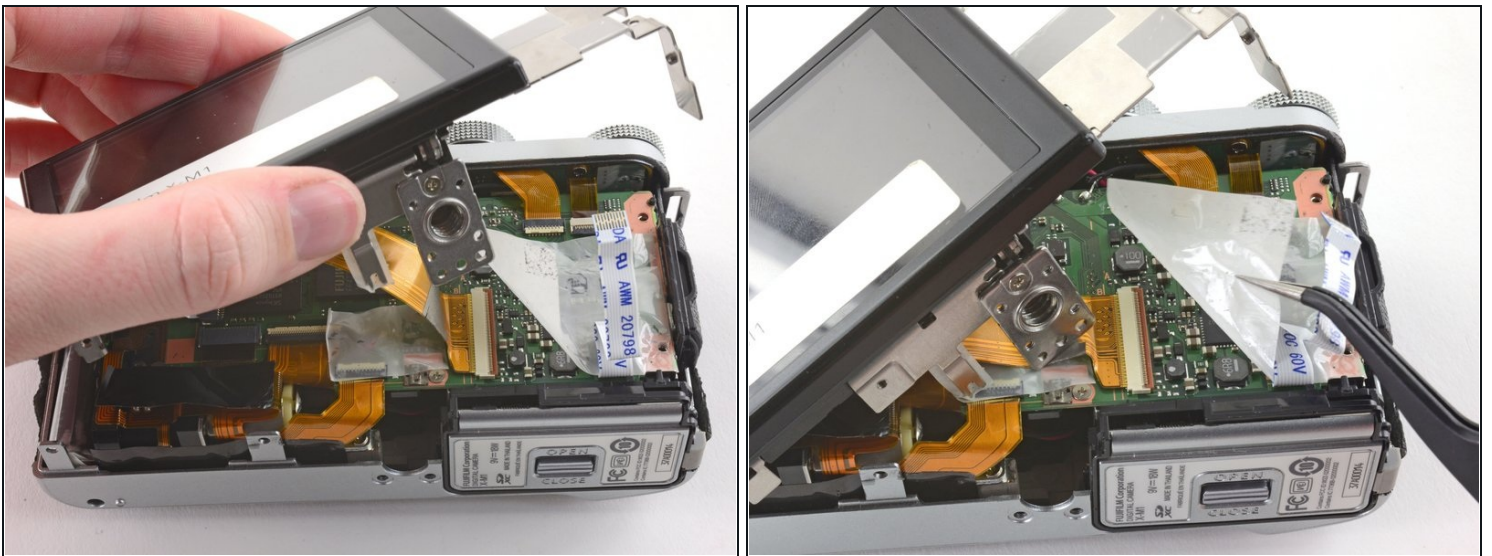


- Slowly lift the metal frame away from the motherboard.

**⚠ Do not attempt to remove the frame, as it is attached to the motherboard by a large ribbon cable.**

- Use tweezers to remove the plastic covering the motherboard.



## Step 14

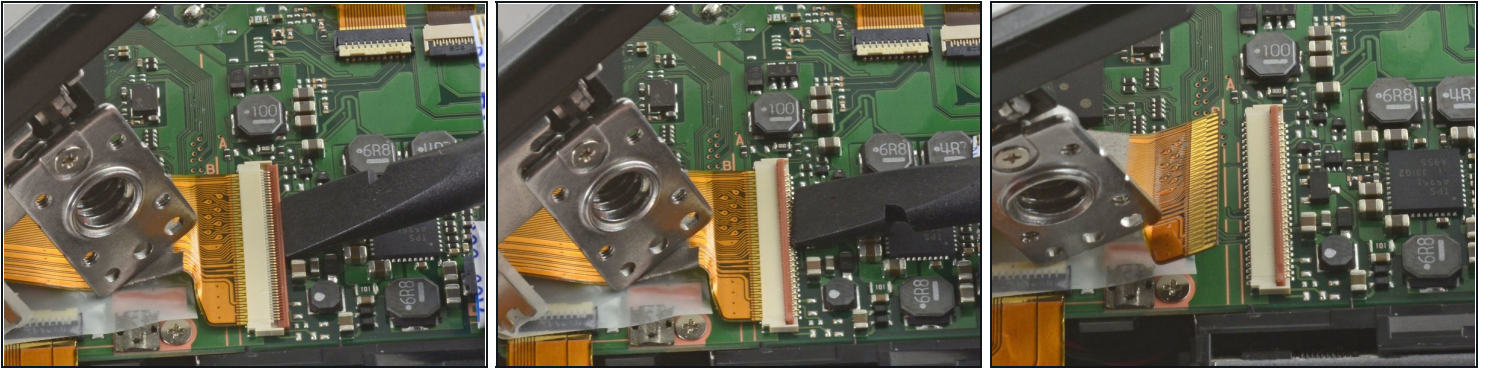

- To remove the ribbon cable, flip back the orange lock on the large ZIF connector with the flat end of a spudger.
- ① If the ribbon cable does not pop out on its own, use tweezers to pull it out of the connector.
- Remove the back case.

---

To reassemble your device, follow these instructions in reverse order.