



# Samsung NX3000 Lens Assembly Replacement

This guide will show you how to replace the len...

Written By: Kelsea Weber



# INTRODUCTION

This guide will show you how to replace the lens assembly on the Samsung NX3000.

We highly suggest you use a [magnetic project mat](#) or an organization tray. This camera has **many** different types of screws and keeping them organized is key to proper reassembly.

---

## TOOLS:

[Phillips #00 Screwdriver](#) (1)


[Tweezers](#) (1)

[Magnetic Project Mat](#) (1)

---

## Step 1 — Battery



- Turn the camera upside down. Only remove the lens if you have to in order to access the battery compartment, as dust particles could easily enter the main body and fall onto the delicate sensor.
  - Slide the button to the left to open the battery compartment.
  - Push the blue button up to release the battery.
-  The battery is not shown in these photos.

## Step 2 — Lens Assembly



- Remove the four 7.3 mm Phillips screws from the front of the lens assembly.
- Remove the silver ring with [tweezers](#).



## Step 3



- Use tweezers to remove the black plastic ring and small metal ring inside the lens assembly.



## Step 4

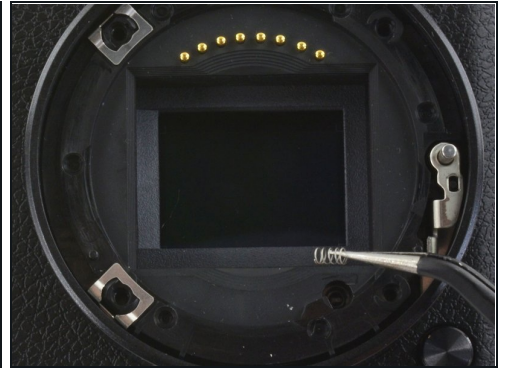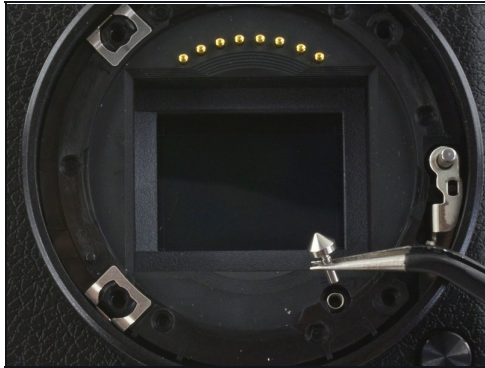

- Use tweezers to lift the pyramid screw and spring from the lens assembly.

---

To reassemble your device, follow these instructions in reverse order.