


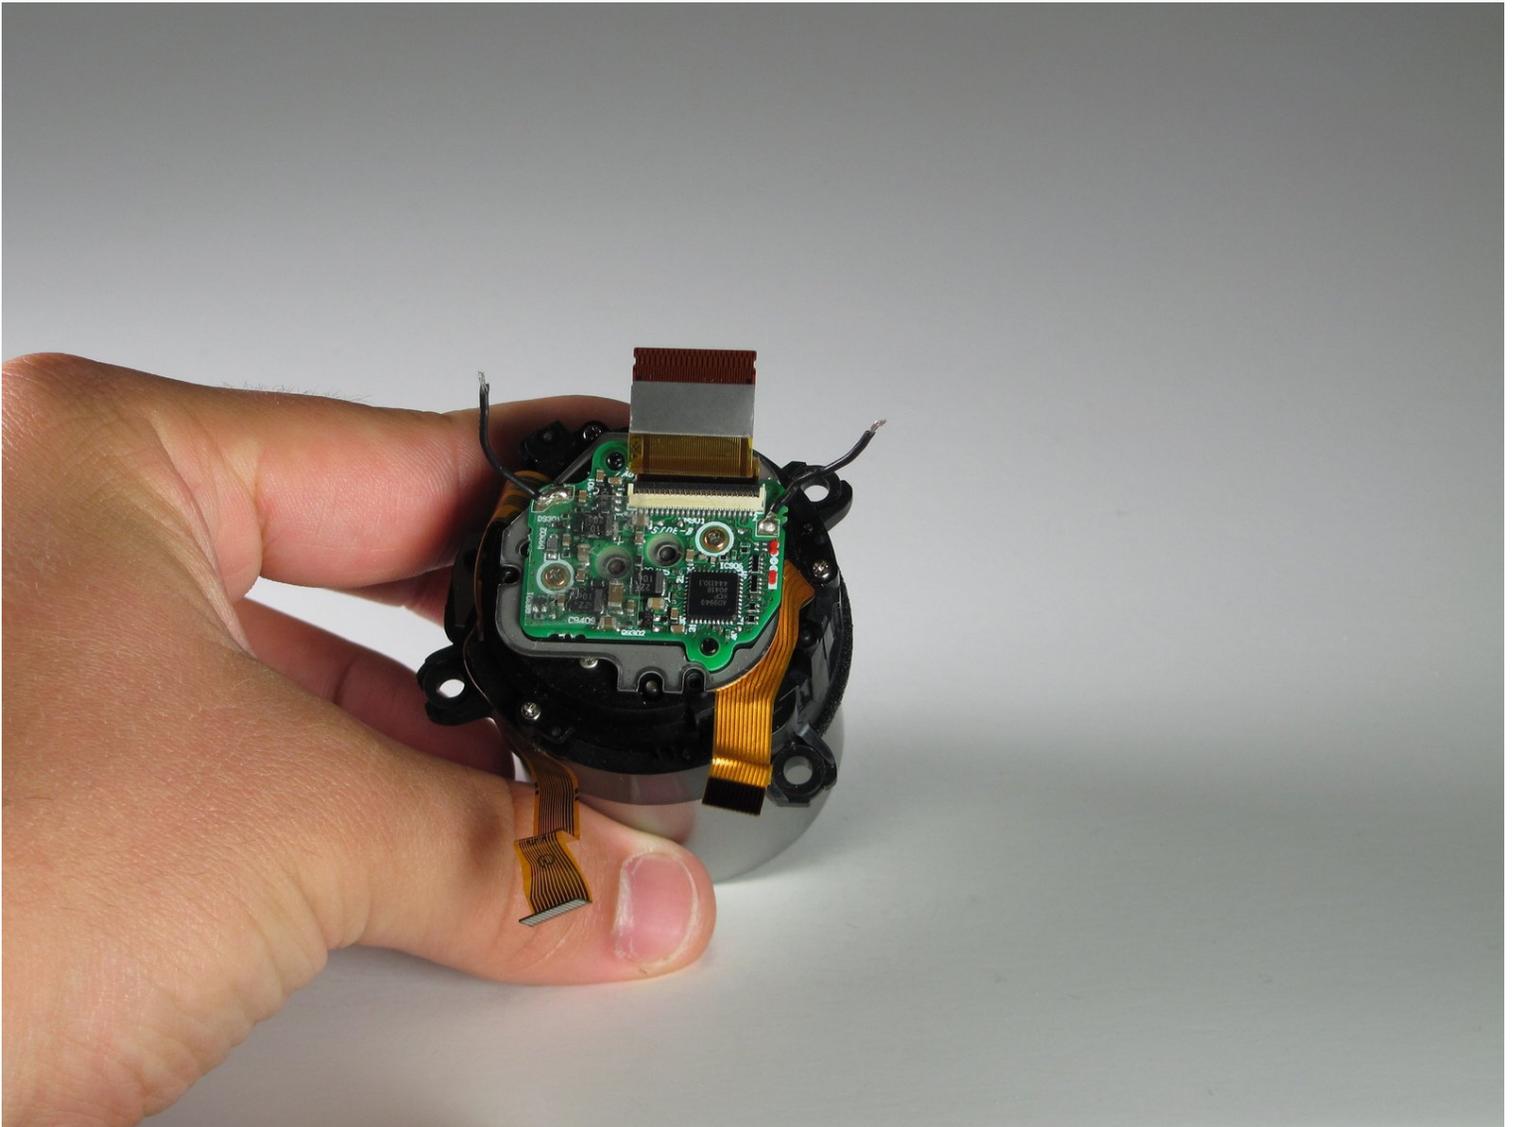

Olympus C-765 Lens Replacement

Have you cracked the lens on your camera, or...

Written By: Mason Morgan



INTRODUCTION

Have you cracked the lens on your camera, or has it gotten really dirty? Follow this guide to repair the lens on your Olympus C-765 digital camera.

Looking through a dirty or cracked camera lens is frustrating and makes it difficult to see the subject of focus. Even a few tiny specks can have an effect on the photo you are taking.

Part of this guide has you remove the motherboard from the camera. This requires the skill of [desoldering](#) to remove the motherboard connections.

Before beginning, make sure to power off your camera completely, remove the battery, and disconnect from any external power source.

TOOLS:

Soldering Iron 60w Hakko 503F (1)

Tweezers (1)



Phillips #00 Screwdriver (1)

Step 1 — Motherboard



- Use a Phillips #00 screwdriver to remove the single 4mm screw located directly to the right of the viewfinder on the back of the camera.
- Remove the two 2mm screws from the left side panel.
- Remove the single 3mm screw from the right side panel.
- Remove the five 3mm screws from the bottom of the camera.

Step 2

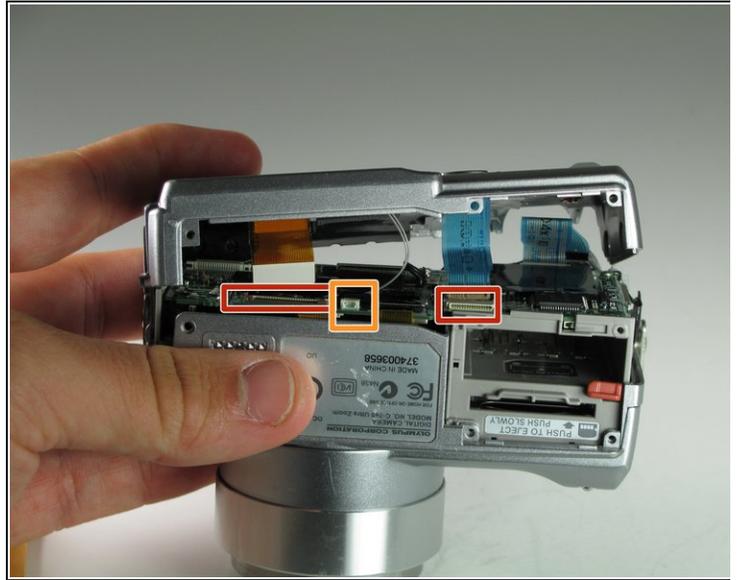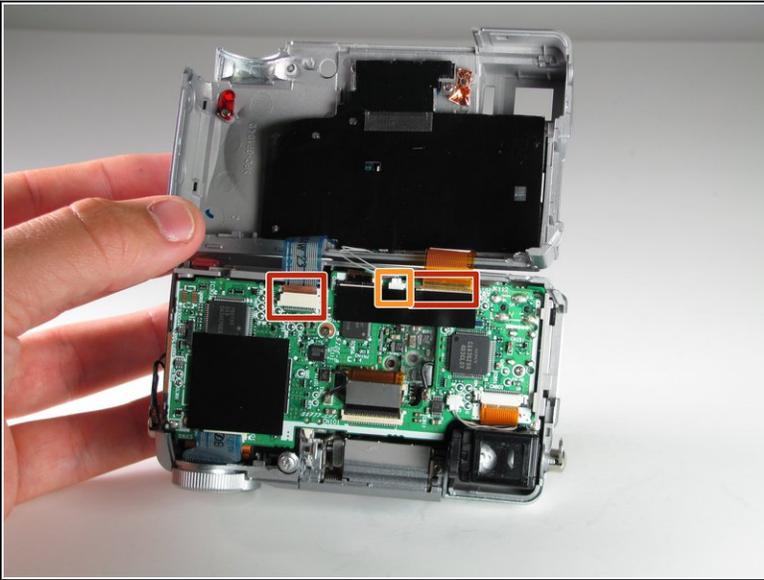


- Rock the two ribbon cables gently out of their sockets.
- ⓘ For more on disconnecting ribbon cables, look [here](#).
- Grasp and pull the white cable out of its clip with metal tweezers.
- Remove the back panel completely.

Step 3




- Peel off the black plastic sheets.
- Use the Phillips #00 screwdriver to remove the two 3mm screws holding the motherboard in place.

Step 4

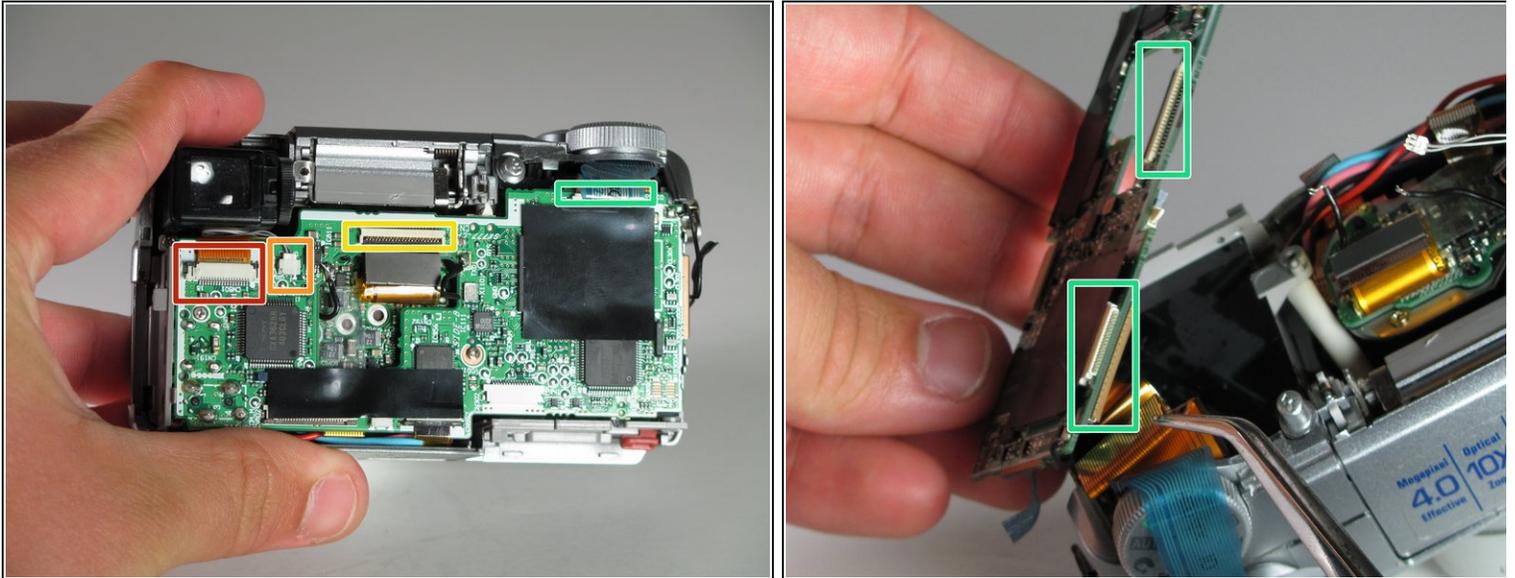


- Remove the ribbon cable directly below the viewfinder.
 - Detach the white plastic clip from its socket with a pair of tweezers.
 - Disconnect the ribbon cable from the center of the board, near the central hole.
 - Disconnect the three ribbon cables from the top right of the motherboard, near the selector wheel. One is on the top of the board, and the other two are on the underside.
- ⓘ For more information on disconnecting ribbon cables, look [here](#).

Step 5

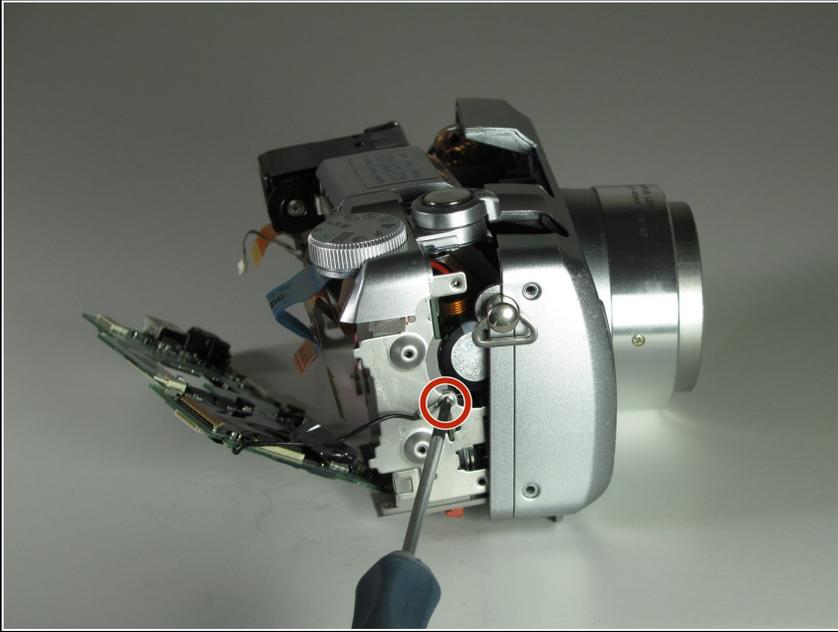


- Remove the single 3mm ground screw attached to the right side of the camera body using the Phillips #00 screwdriver.

Step 6

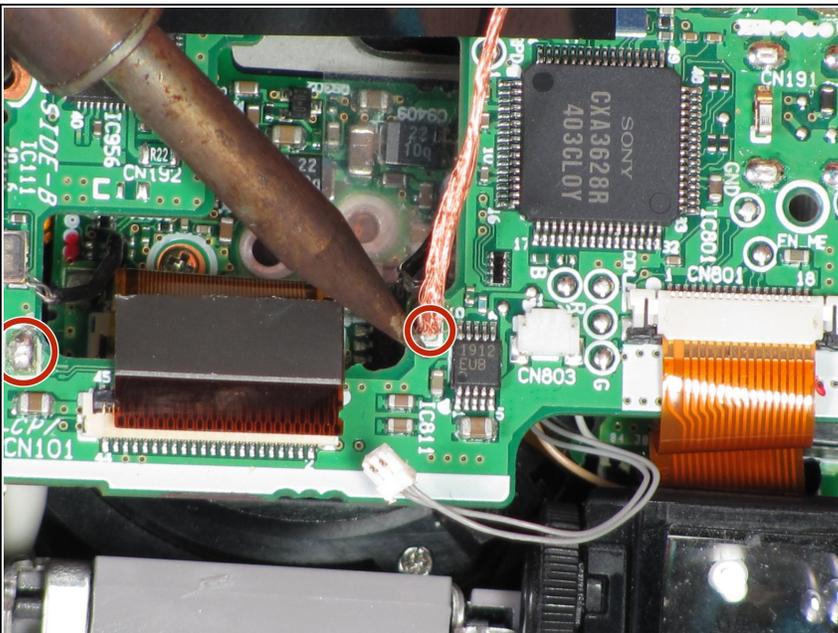


- Use the soldering iron to desolder the connections from the motherboard.
- ⓘ For more information on desoldering, look [here](#).
- ⚠ When soldering, avoid touching any of the other components with the soldering iron to prevent damage to the motherboard.

Step 7

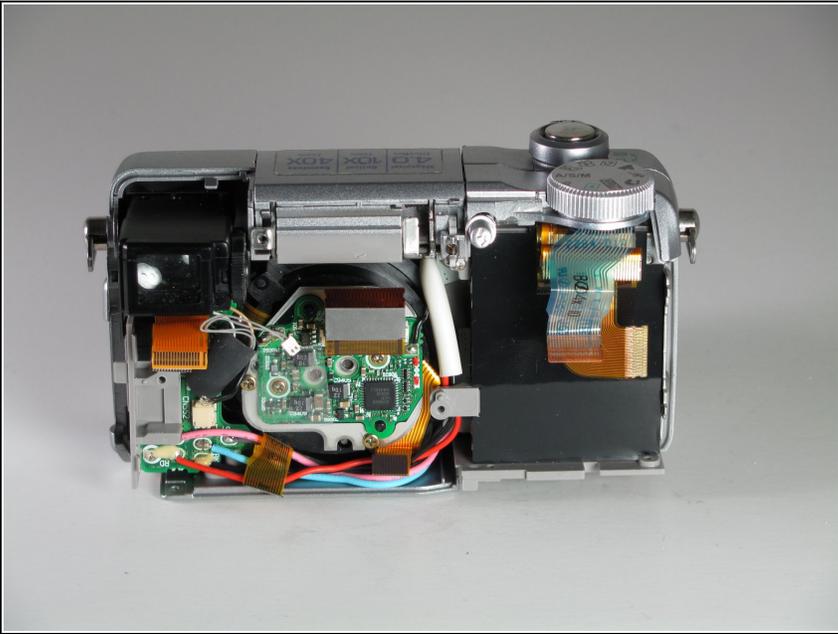


- Remove the motherboard from the camera.

Step 8 — Lens

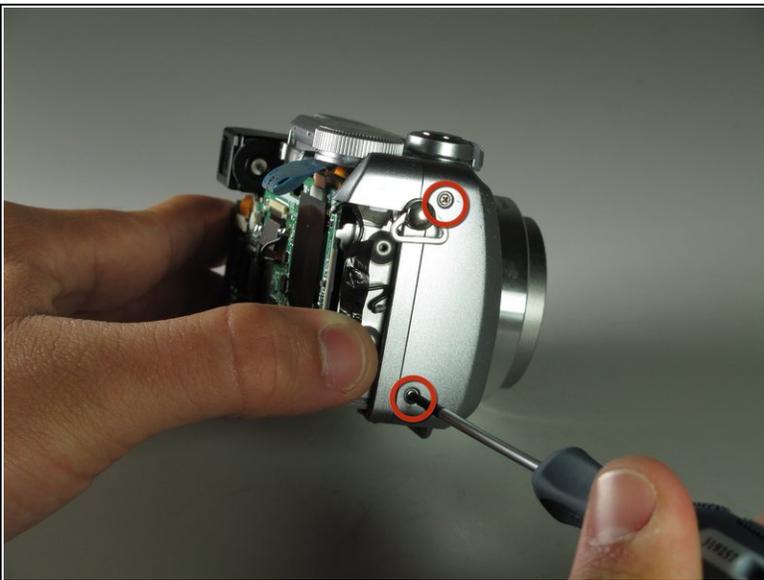


- Unscrew the two 3mm screws from the right side of the casing.
- Pop the flash up to get access to the two body screws underneath.
- Undo the two 3mm screws.

Step 9

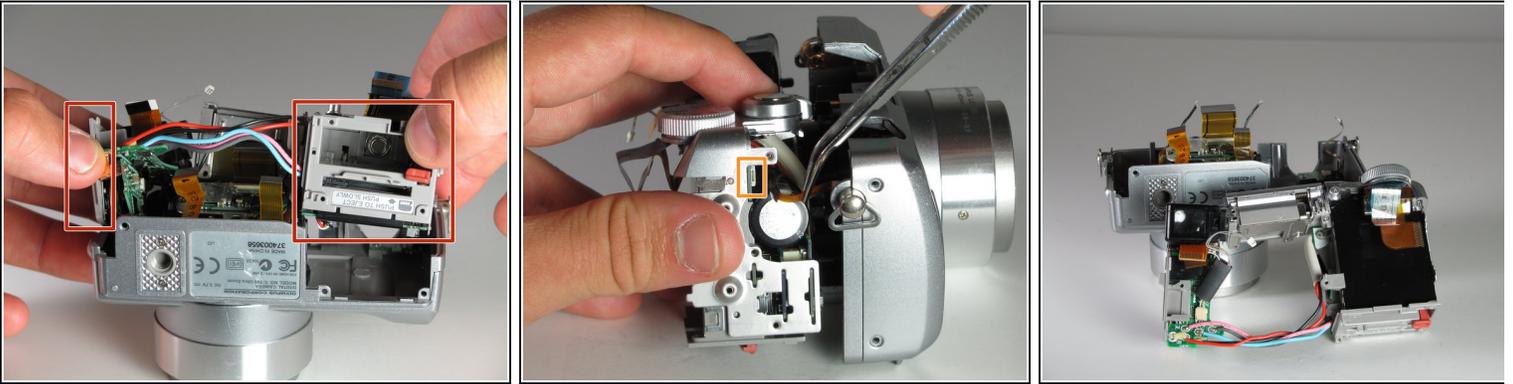

- Gently pull on the battery casing and the A/V ports to remove the connected components.
- Remove the small ribbon cable from the right side of the casing.

Step 10

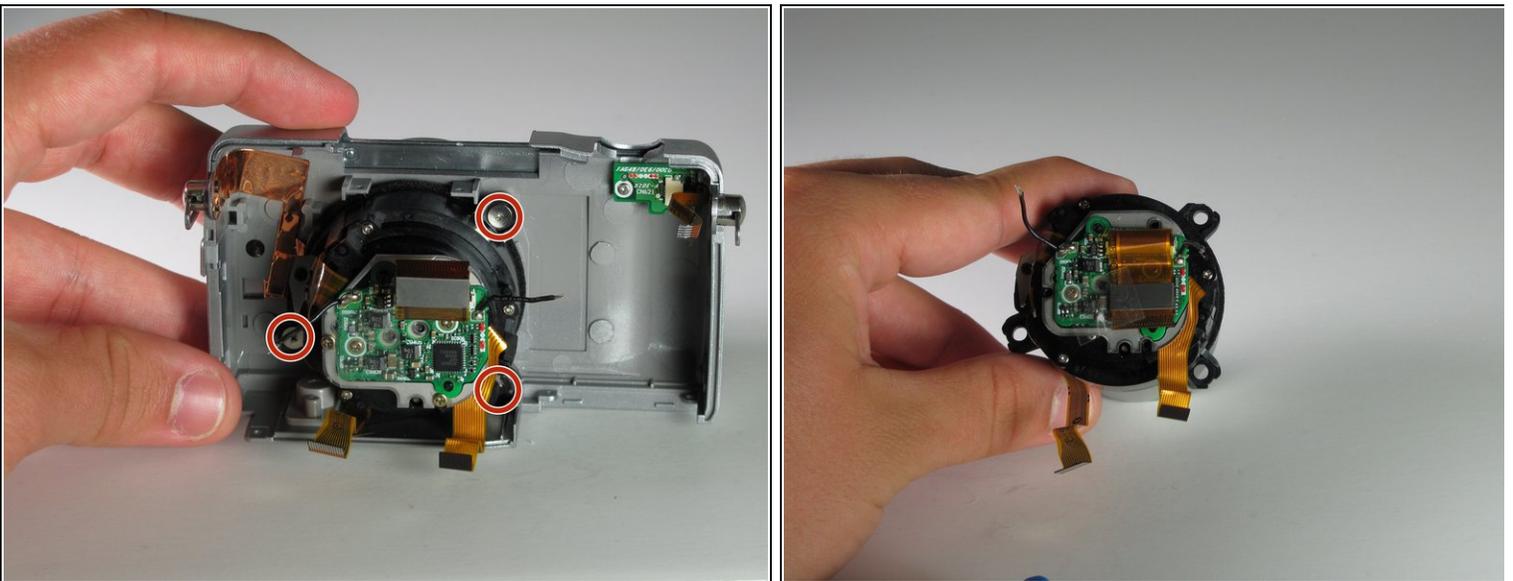

- Undo the three flat-top 4mm screws.
- Gently pull the lens away from the camera body.
- ⓘ Clean or replace the lens.

To reassemble your device, follow these instructions in reverse order.