



ASUS FonePad 7 Vetro/Touch Replacement


Written By: Andrew



 **TOOLS:**



- [iFixit Opening Tools](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
 - [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Rear Panel

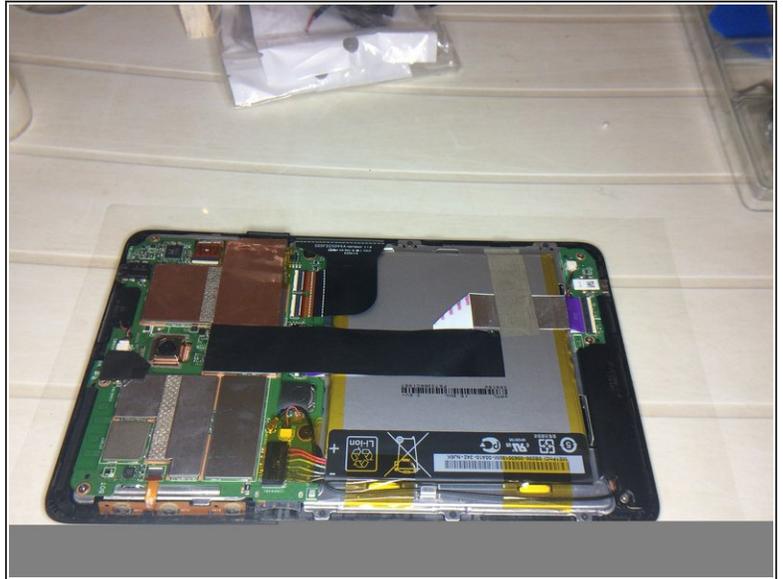

- Make sure your device is turned off. Then with a plastic opening tool, carefully remove the back panel by carefully working your way around the perimeter.

Step 2 — Battery

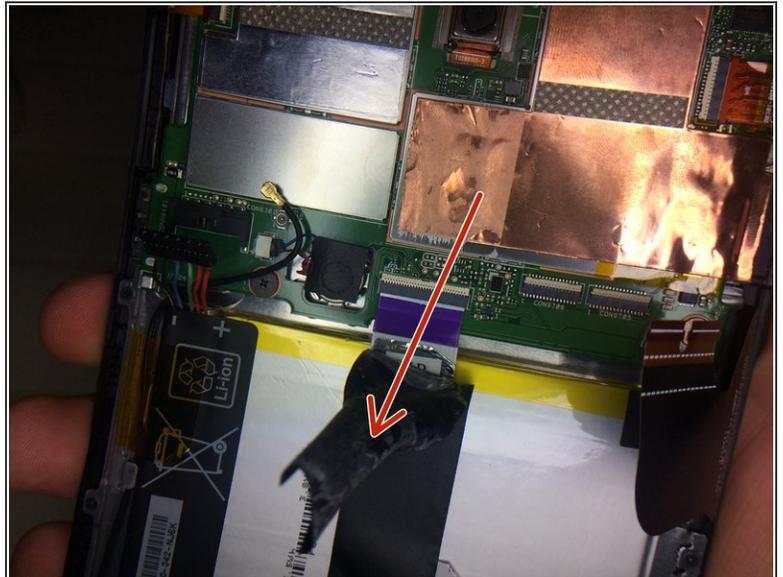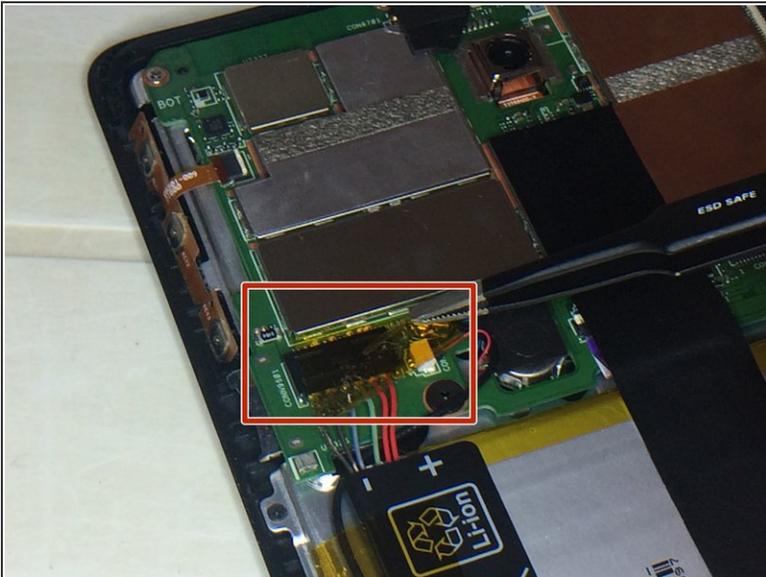


- Remove adhesive strips.
- Disconnect the battery connectors by carefully pulling down on them using a spudger or plastic opening tool.

Step 3 — Battery




- Disconnect Touch Connectors using a spudger or plastic opener tool.
- Disconnect the ZIF connectors holding the battery.
 - ⓘ You can also use your hand to remove ZIF connectors.
 - ⚠ ZIF connectors are delicate so be careful when you are removing them.

Step 4 — Remove Battery

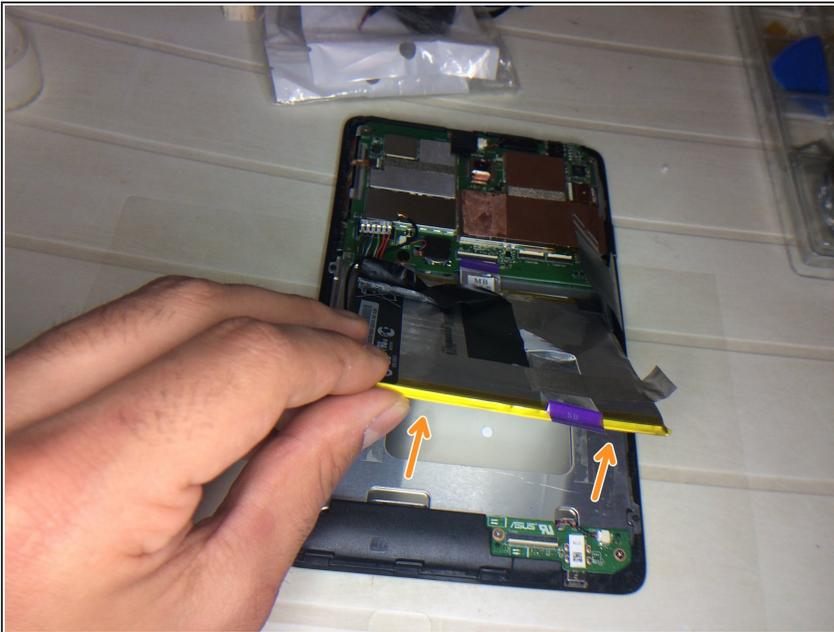



- Using a plastic opening tool carefully pry the battery loose. The battery is glued to the pad; slight pressure will be needed to remove the battery.

Step 5 — Power Management

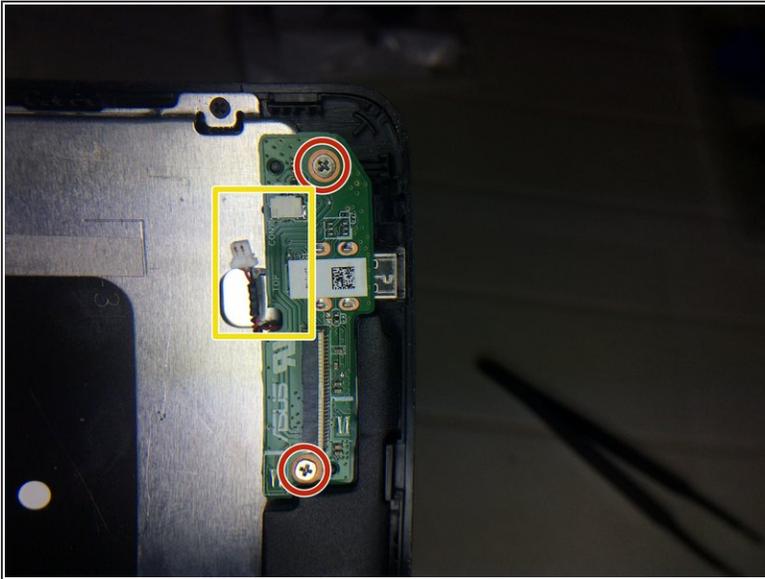


- Disconnect cable
- Remove the two Philips #0 screws from the power management board
- Remove Philips #0 screw

Step 6 — MotherBoard

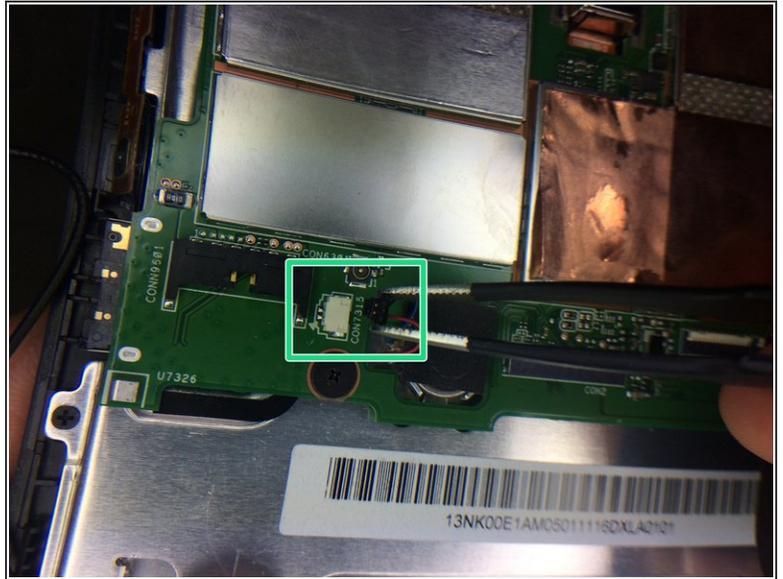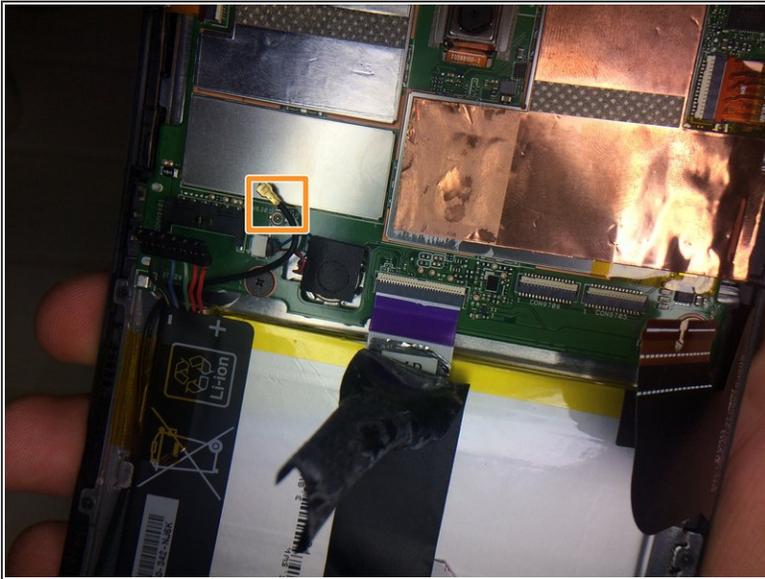



- Remove GPS antenna with a spudger.
- Disconnect the connector

Step 7 — Power and Volume Buttons

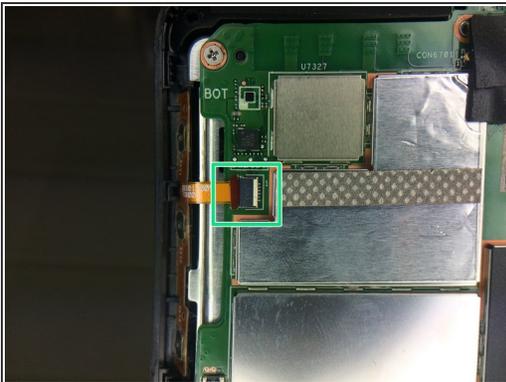


- Remove the power and volume connector

Step 8 — Earpiece

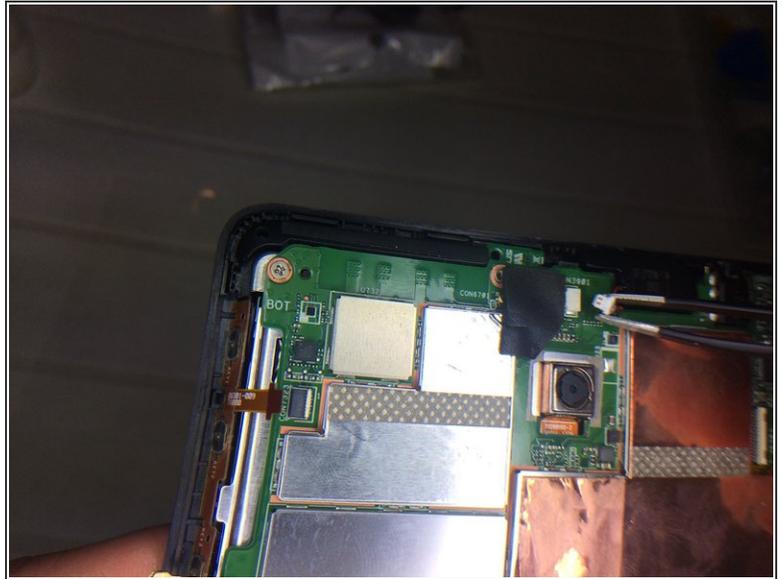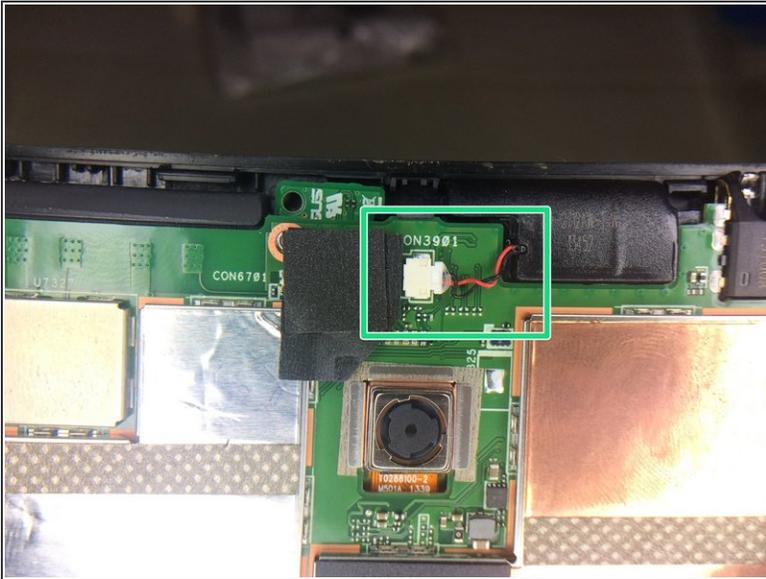


- Disconnect Earpiece connector

Step 9 — Display Cable

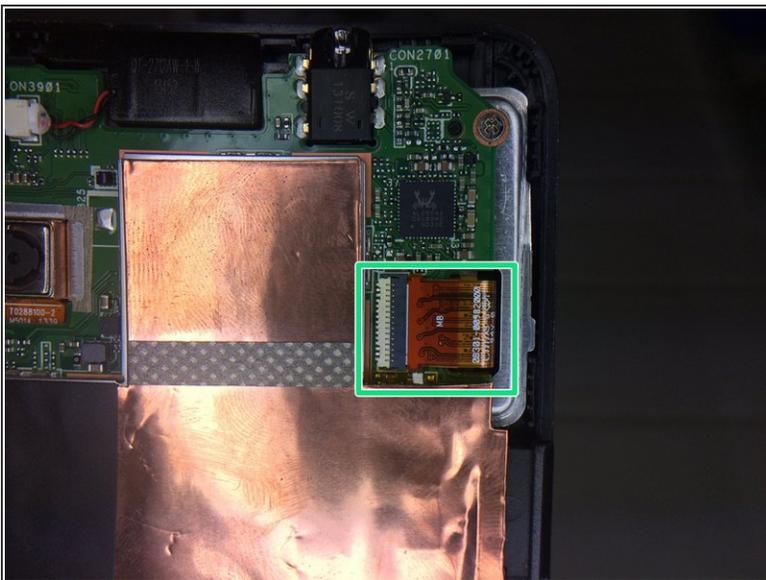

- Remove the Display connector from motherboard.

Step 10 — MotherBoard

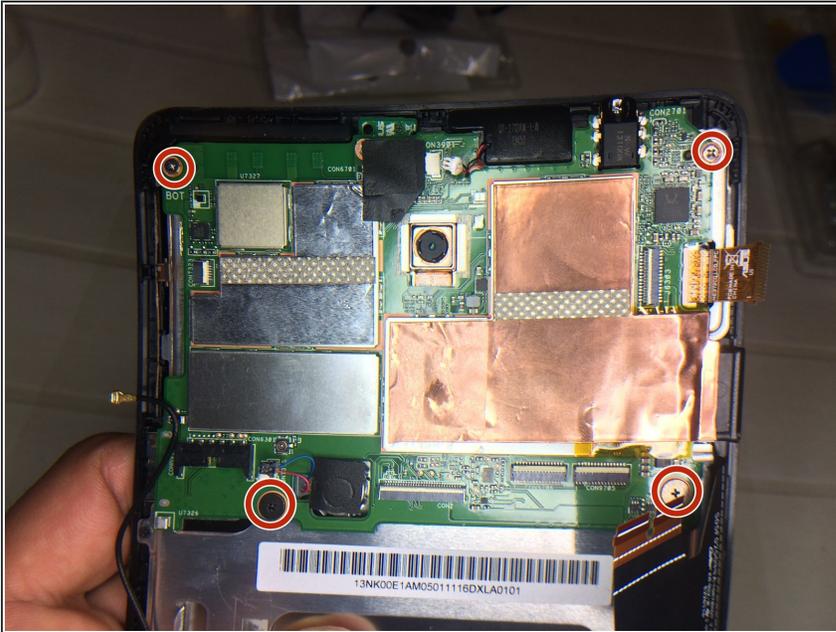

- Remove 4screw Philips #0 from motherboard

Step 11 — Components




- Remove Components

Step 12 — Remove Glass (TouchScreen)



- Inserisci qui la competenza.

Step 13 — Replace with new Glass. Good Job ;)

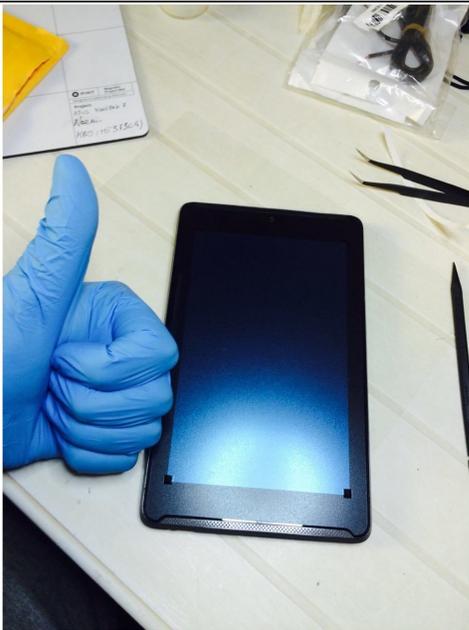

- Inserisci qui la competenza.

Per rimontare il dispositivo, segui queste istruzioni in ordine inverso.