



Canon Selphy CP910 Ink Cartridge Replacement

This guide will show you how to replace the ink cartridge in the Canon Selphy CP910.

Written By: Christie Peralta



INTRODUCTION

The Canon Selphy CP910 is used to print pictures from a camera and WiFi connection. For information regarding troubleshooting issues with the Canon Selphy CP910, go to [Canon Selphy CP910 Troubleshooting](#).

A new ink cartridge will be necessary to replace the old ink cartridge from the Canon Selphy CP910. Click [here](#) to purchase a new ink cartridge through Canon's website.

Step 1 — Ink Cartridge



- Open the door to the ink cartridge located on the right-hand side of the printer.

Step 2



- Lift the brown "eject" button up with your finger.
- Use two fingers to pull out device.

Step 3



- Pull out the empty ink cartridge and exchange it with a new one.

Step 4



- Push in new ink cartridge and close the lid.

To reassemble your device, follow these instructions in reverse order.