




# ASUS F550 HDD Replacement

Written By: Ryan




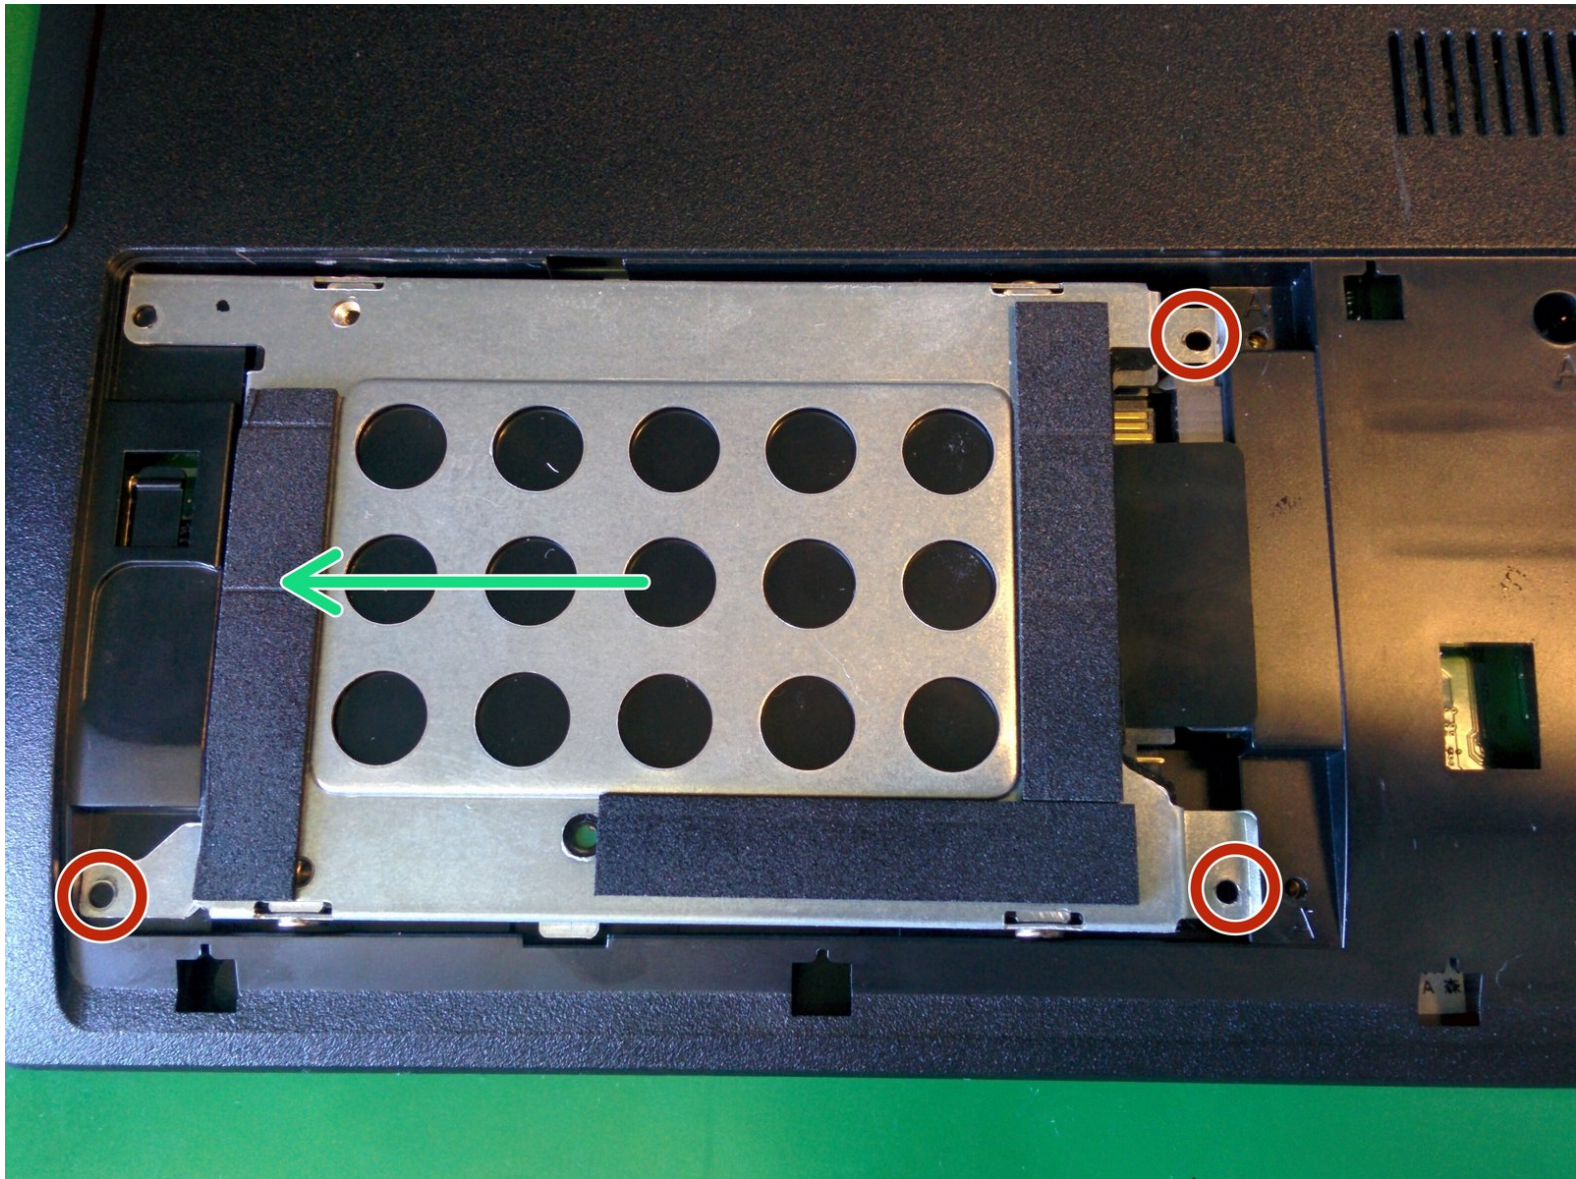

## TOOLS:

- [Essential Electronics Toolkit](#) (1)
-


## Step 1 — ASUS F550 HDD/Ram Cover Removal

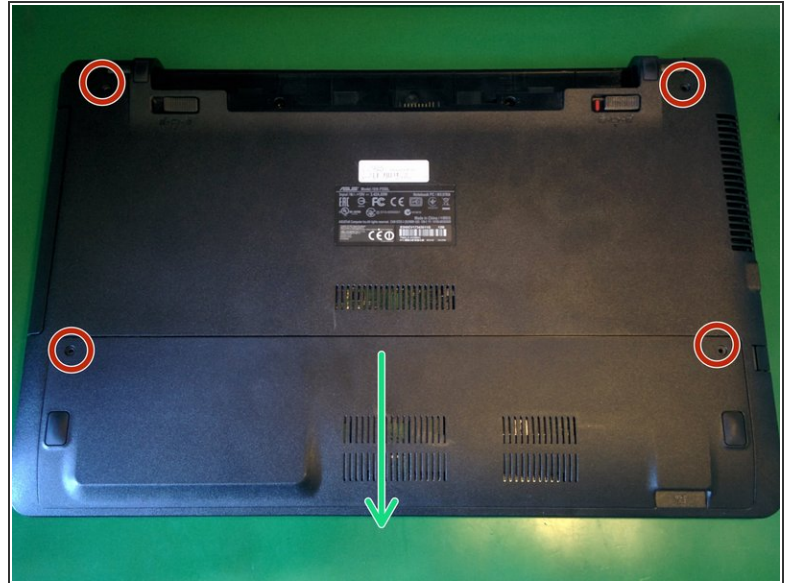

- Remove the battery, using release clips.
- ⓘ Ensure device has no residual power by attempting boot once battery is removed.
- Remove either 2 (or 4 for a full teardown) 12mm phillips screws, then removing the bottom cover to gain access to the HDD and RAM.
- Remove HDD and RAM cover




## Step 2 — HDD

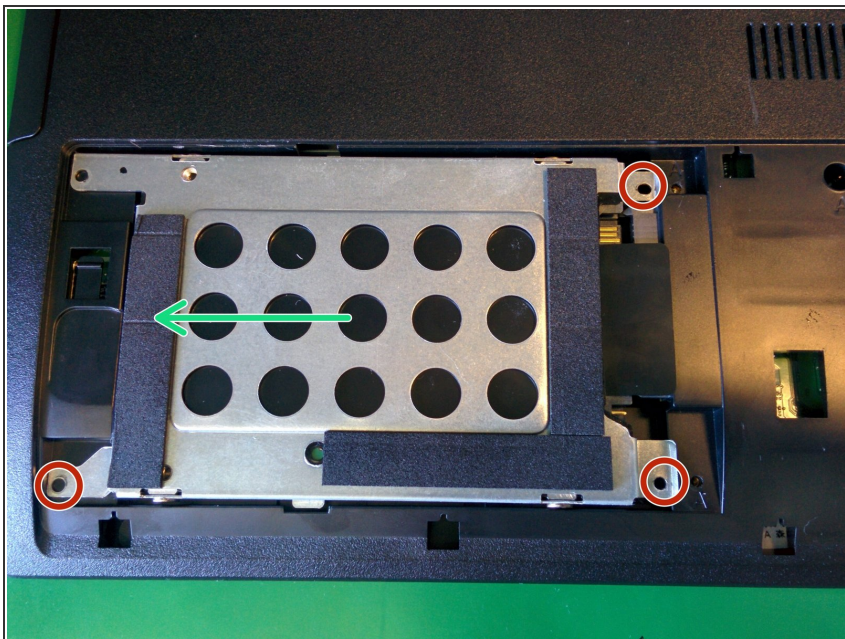

- Remove 3 5mm Phillips screws
- Slide HDD caddy back, remove using the black pull tab.

## Step 3 — HDD Removal from Caddy

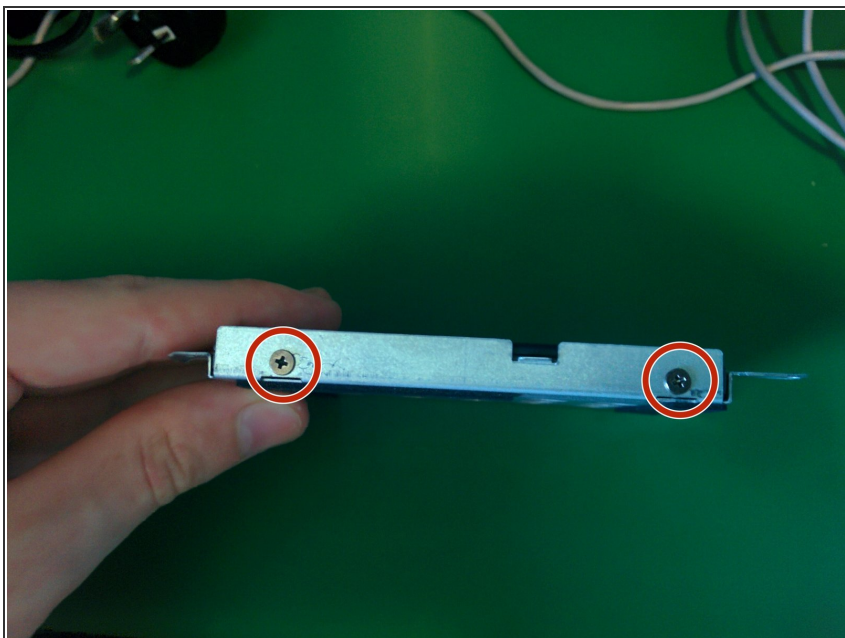

- Remove 4 Phillips screws, 2 per side
- Remove HDD from caddy.

To reassemble your device, follow these instructions in reverse order.