



# Nikon Coolpix AW130 Battery Replacement

Replacing or removing the battery is an essential step in repairing your camera.

Written By: Lauren Stepp



## INTRODUCTION

Removing the battery is a necessary prerequisite step in all Nikon Coolpix AW130 repairs. Failing to complete this step prior to replacing the LED screen or shutter button, for example, may result in electrical shock. No tools are required.

## Step 1 — Battery



- Using your thumb and pointer finger, open the card/battery hatch by pressing the center button of the wheel and turning the entire wheel to the left.

☑ When reassembling, you must turn this wheel to the right until it clicks.

## Step 2



- You should feel the door begin to loosen. Carefully pull the hatch open.



### Step 3



- Push the yellow battery/charger compartment tab up using your thumb nail.

### Step 4



- After pressing the yellow tab, the battery should loosen.
- Slowly pull the battery completely out.

To reassemble your device, follow these instructions in reverse order.