



Black and Decker BDEDMT Disassembly

Prerequisite Only - Identifying and unscrewing...

Written By: Edgardo Gutierrez Jr



INTRODUCTION

Prerequisite Only - Identifying and unscrewing all screws that keep the armature together.

TOOLS:

[Mako Driver Kit - 64 Precision Bits](#) (1)


Step 1 — Detach Matrix Attachment



 Remember to disconnect the device from all external power sources.

- To detach the matrix attachment piece, press down on the attachment release button located at the top of the device.
- Leaving your finger pressed down on the button, simply pull on the attachment to release it.

Step 2 — Remove Mounting Hardware

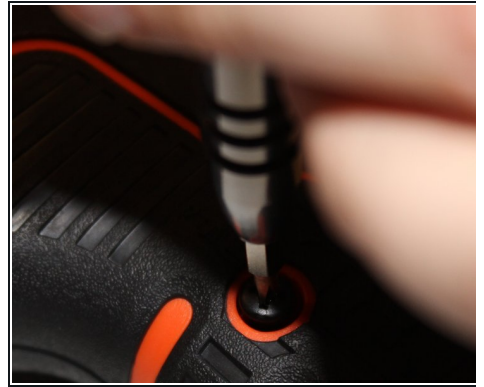

- Using a JIS 1 screwdriver, unscrew seven 19mm outer screws located on the armature.
 - Using the same screwdriver, unscrew the 12mm outer screw located on the armature.
-

To reassemble your device, follow these instructions in reverse order.