

Netgear G54 Wireless Router Teardown

A teardown the NetGEAR 54 Wireless Router

Written By: kempc8



INTRODUCTION

A teardown the NetGEAR 54 Wireless Router



TOOLS:

Metal Spudger Set, Phillips Screwdriver (1)

Step 1 — NetGear G54 Wireless Router







- Flip the Net Gear wireless Router over remove four rubber tabs.
- Place them to the side

Step 2 — Removing the rubber tabs



 There four screws that need to be removed.

Step 3 — Removing the four bottom screws







- Use a Phillips #00 screwdriver to remove the four screws.
- Place them aside

Step 4 — Removing the case







- Removing the bottom top facing up .
- Put it to the side.

Step 5 — Removing the front clear plastic






- Use a spudger on the edge of the clear hard plastic around the outer casing.
- Use a spudger on the edge to push up the plastic casing.
- Once the clear plastic casing is removed, place it to the side.

Step 6 — Removing the motherboard





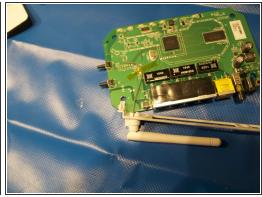

Remove the motherboard with bottom case. Then you are done.

Step 7



 After remove the motherboard. The top cases of the Router.