



Vtech Kidizoom Smart Watch DX Faceplate Replacement

Replace the Kidizoom Smart Watch DX faceplate to keep your watch looking good as new.

Written By: Jordan RiberSmith



INTRODUCTION

If your faceplate looks worn, cracked, or dirty, this guide will show you how to replace it - or just how to remove it for cleaning.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Faceplate



- Flip the watch so that the screen faces upward.

Step 2



- Use a plastic opening tool to gently pry the edges of the faceplate away from the watch.
- ⓘ You may hear some popping sounds as you are removing the faceplate. This is normal.

Step 3



- Pull the faceplate fully apart from the watch.

To reassemble your device, follow these instructions in reverse order.