



DeWalt D26451 Dust Bag Replacement

Replace the dust collector bag on the DeWalt D26451 Random Orbit Sander.

Written By: Shelby LeQuire



INTRODUCTION

The DeWalt D26451 is much like other sanders of its brand. The D26451 is 5 inches and single speed at 12,000 RPM. According to [DeWalt](#), newer models have improved dust collection and have less vibration during use, but that is not the case for the discontinued DeWalt D26451.

Dust collection is one of the D26451's poorer properties. The dust bag may become clogged or full, or just need replaced all together.


In this repair guide, we will be teaching you how to empty and replace the dust collection bag on the DeWalt D26451.



PARTS:

- [Dust Bag](#) (1)
-

Step 1 — Dust Bag

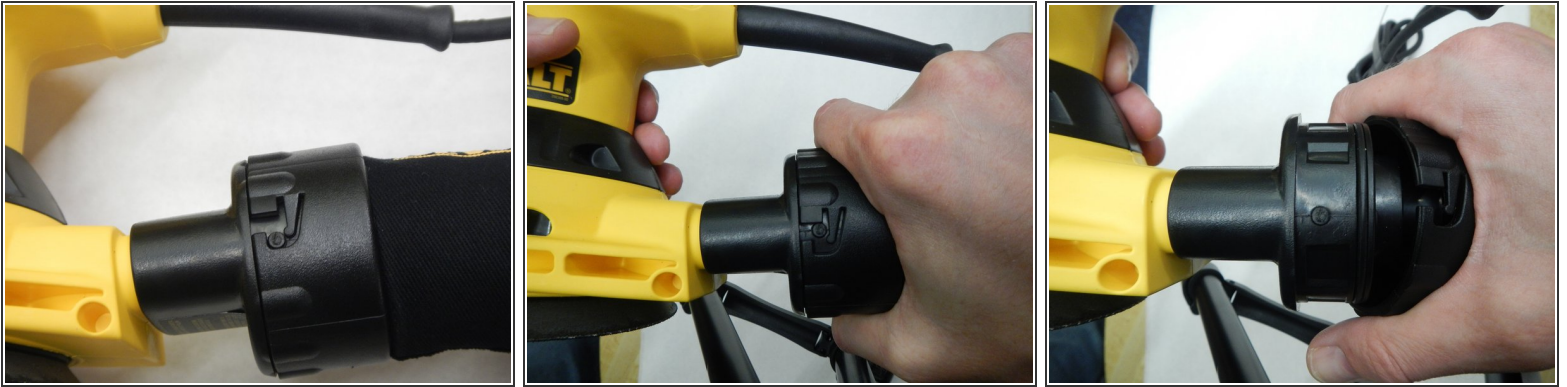

⚠ Please remember to wear safety glasses while completing this replacement guide.

- Slightly twist the grip counter-clockwise to release quick connect.
- Pull the bag from the sander.

Step 2



- Empty loose debris from the bag into trash.
- Collapse and expand the bag over the trash can to dislodge debris left inside the bag.

Step 3



- If you're replacing the bag all together, you can order a replacement bag [here](#).
- Attach the bag by twisting clockwise back onto the sander.

To reassemble your device, follow these instructions in reverse order.