



# ASUS ZenWatch Battery Replacement

A simple guide to replace that aging or dead...

Written By: Wayne McClure



# INTRODUCTION

A simple guide to replace that aging or dead battery in your ASUS ZenWatch.

## TOOLS:

[Magnetic Project Mat](#) (1)  
[Tweezers](#) (1)  
[Heavy-Duty Spudger](#) (1)  
[iFixit Opening Tool](#) (1)  
[T5 Torx Screwdriver](#) (1)

## PARTS:

[Asus ZenWatch Battery](#) (1)

## Step 1 — Watch Strap Removal




- On the strap there is a knob. Sliding this knob towards the opposite side of the strap releases the tension on the spring bar, allowing you to pull the strap out..

## Step 2 — Battery





- Use the T5 Torx driver to remove the four screws on the case.
  - ① Use the magnetic pad to keep all your parts easily contained!
- The case will pry easily off with just gentle hand pressure

## Step 3

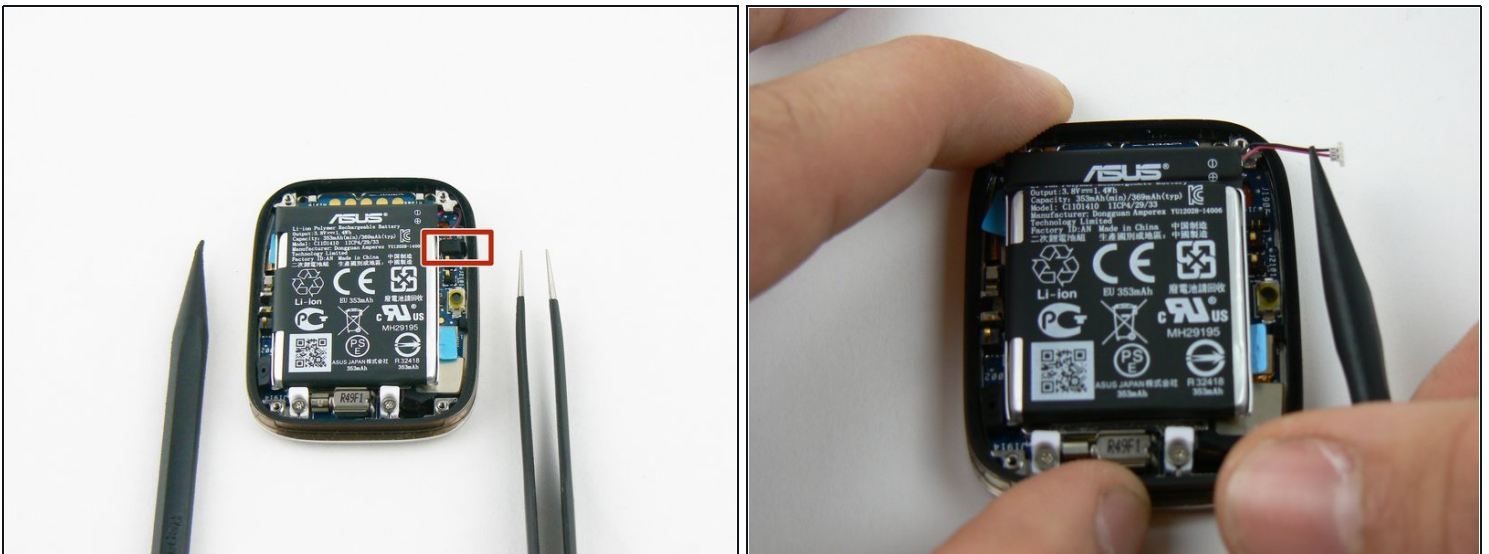

- Using the [tweezers](#), gently remove the fabric protecting the battery connection.
- ⚠ Take care when removing the fabric. Too much force may damage the contact with the metal tweezers.
- Use the heavy duty spudger to gently push the contact towards the top of the case.

## Step 4

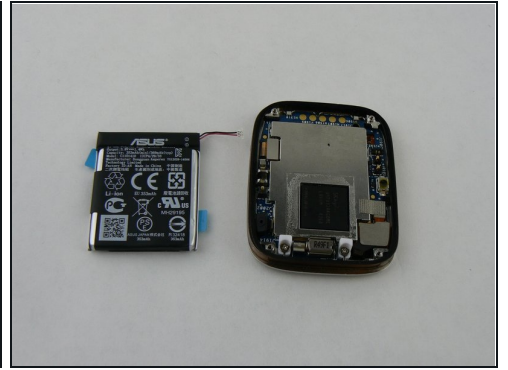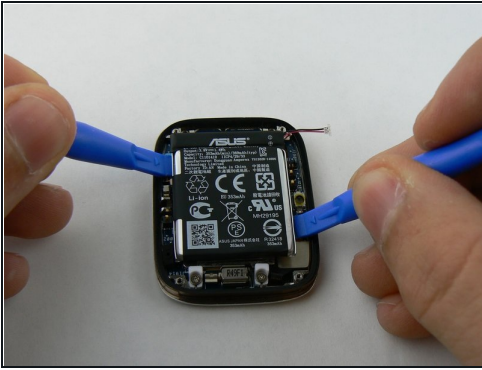

- Gently pry the battery up with the plastic pry tools

---

To reassemble your device, follow these instructions in reverse order.