



# Dremel 7300 MiniMite Cordless Battery Replacement

Follow this guide if you need to replace your Dremel 7300 MiniMite Cordless battery.

Written By: Kat



## INTRODUCTION

This guide will walk you through how to replace the battery in your Dremel 7300 Mini Mite Cordless Device. Sometimes the battery needs to be replaced. This guide will help make sure that the new battery is charged and operational.

## Step 1 — Battery



- Pull back on the release tabs to disconnect the battery pack from the housing.
- ⓘ When installing a new battery, you may need to charge it before using it.

To reassemble your device, follow these instructions in reverse order.