



Canon Powershot S200 Battery Replacement

How to safely remove and replace the battery from a Canon Powershot S200.

Written By: Kevin Nagaoka



INTRODUCTION

If your Canon Powershot camera (model: S200) battery is dysfunctional or not properly working — such as low charging, no charging, or fast consumption of power— follow the three simple steps in this guide for removing the battery from your camera.

The battery is a lithium-ion battery with a typical warranty of up to a year of use before you can see signs of energy depletion in charging. If you notice that your charged battery is draining more quickly than usual, consider using a tool to measure the battery's charging capacity.

Be careful when handling the battery.

Before beginning, make sure to power off your camera completely and disconnect from any external power source.



PARTS:

- [Canon Powershot S200 Battery](#) (1)
-

Step 1 — Battery



- Slide the grey latch to open the battery compartment.

Step 2



- Push and slide the orange retaining clip to the right to remove the battery.

Step 3



- Remove battery from the camera.

To reassemble your device, follow these instructions in reverse order.