



# OontZ Angle 3 Back Case Replacement

This guide shows how to replace the back case of OontZ Angle 3, and serves as a prerequisite for the other guides.

Written By: Mason Hollander



---

## INTRODUCTION

Oontz Angle 3 is a wireless Bluetooth speaker manufactured by Cambridge SoundWorks. It's main features are compact size, along with rubber casing, which makes it dustproof, sandproof and splashproof. Its normal output power is 10 Watts. The battery capacity is 2200 mAh, which helps this speaker work for at least 7 hours with one full charge.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Case




- ❗ Make sure that the OontZ Angle 3 is powered off before starting the disassembly.
- Use the plastic opening tool to remove the rubber caps from each end of the speaker.

## Step 2



- Remove four (4) 11.7 mm Phillips #0 screws from each side at the bottom of the speaker.

### Step 3

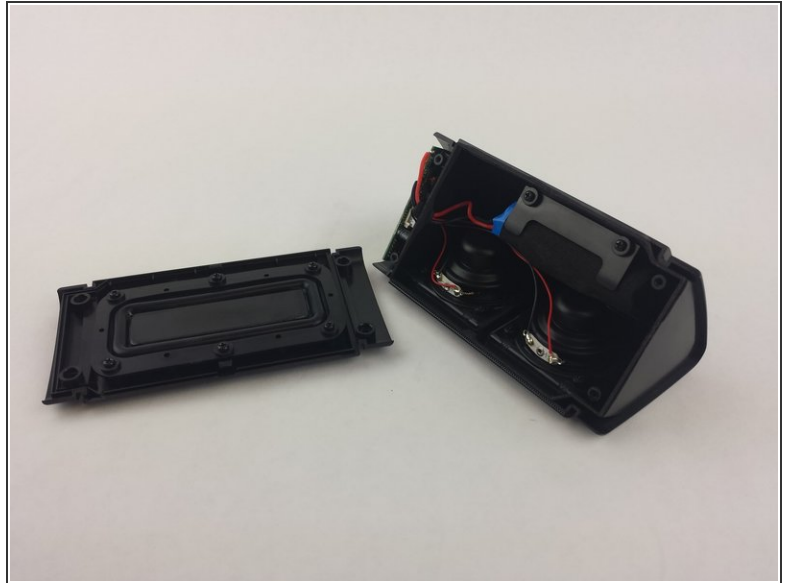

- Use the plastic opening tool on one of the corners to separate the bottom piece from the speaker, and then remove the piece.

To reassemble your device, follow these instructions in reverse order.