



Grace Digital Mondo Navigational Knob Replacement

Replace the navigational knob for the Grace Digital MONDO.

Written By: Nathaniel Brabham



INTRODUCTION

One of the easiest replacements for the device. A simple removal of the navigational knob with your hands.

Step 1 — Navigational Knob



- Remove the navigational knob with your hands by pushing one side of the knob outward.
- ⓘ A clicking sound will indicate when the navigational knob has been removed from its track.

To reassemble your device, follow these instructions in reverse order.