



# Nikon Coolpix S33 LCD Replacement

This guide will show you the steps to disassemble and replace your LCD screen of your Nikon Coolpix S33 Camera.

Written By: Maria Frias



## INTRODUCTION

To replace the LCD screen of your camera, you'll need to go through a few steps of disassembly including the steps from the Back Cover replacement guide.



### TOOLS:


- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [JIS Driver Set](#) (1)



### PARTS:

- [Nikon Coolpix S33 LCD Screen](#) (1)

## Step 1 — Back Cover

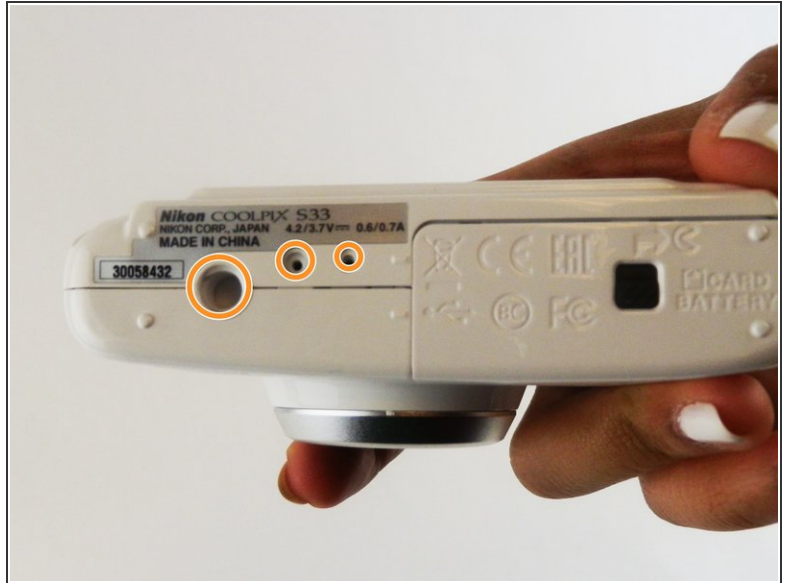

 Remove battery before initiating this step to avoid the possibility of electric shock.

- Remove all four T5 Torx screws from the exterior of the camera.
- Remove all three T5 Torx screws located at the bottom of the camera next to the battery compartment.

## Step 2



- Remove the two screws located above the HDMI and USB logos that are inside the camera's battery compartment using a JIS000 screwdriver.




### Step 3



- Using a plastic opening tool, gently remove the back cover from the camera.

### Step 4 — LCD



 Be sure to have followed the steps to remove the Back Cover of your camera before beginning to replace

the LCD Screen. This guide will cover just the replacement of the LCD Screen.

- Using a plastic opening tool, pry the LCD screen out of its slot inside of the camera.

## Step 5



- Before pulling the LCD Screen out of the camera, you will need to disconnect the ribbon connector that attaches the screen to the camera.
- Gently pull the ribbon connector out of its slot. You should be able to remove it without the need of any tools.

To reassemble your device, follow these instructions in reverse order.