



# Nikon Coolpix S33 Back Cover Replacment

This guide is used to show how to take the back cover off of the Nikon Coolpix S33 camera.

Written By: Maria Frias



## INTRODUCTION

In order to replace the motherboard, LCD screen, or speakers in the Nikon Coolpix S33 camera, the back cover needs to come off. This guide will show users how to remove the cover by taking out the screws, and prying off the back cover.



### TOOLS:


- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [JIS Driver Set](#) (1)



### PARTS:

- [Nikon Coolpix S33 Back Cover](#) (1)

## Step 1 — Back Cover

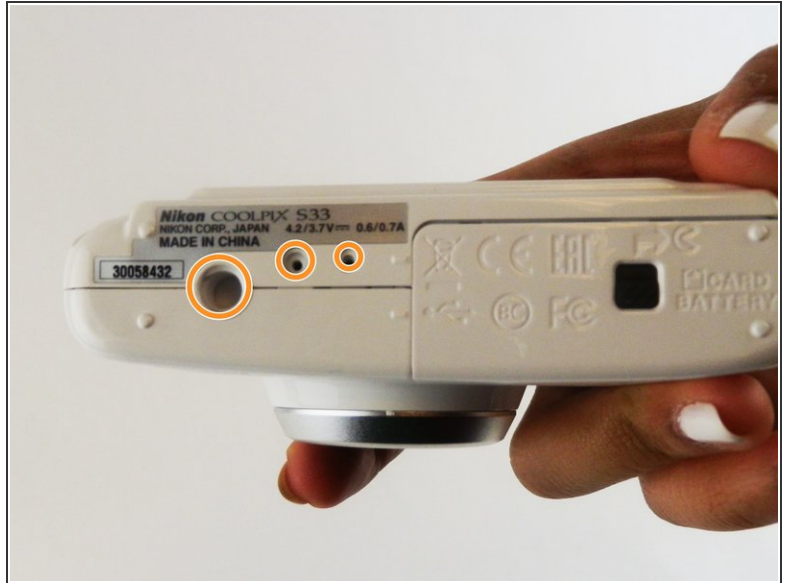

 Remove battery before initiating this step to avoid the possibility of electric shock.

- Remove all four T5 Torx screws from the exterior of the camera.
- Remove all three T5 Torx screws located at the bottom of the camera next to the battery compartment.

## Step 2



- Remove the two screws located above the HDMI and USB logos that are inside the camera's battery compartment using a JIS000 screwdriver.

## Step 3



- Using a plastic opening tool, gently remove the back cover from the camera.

To reassemble your device, follow these instructions in reverse order.