




Tagital T9X Camera Replacement

Written By: Adam Bamforth

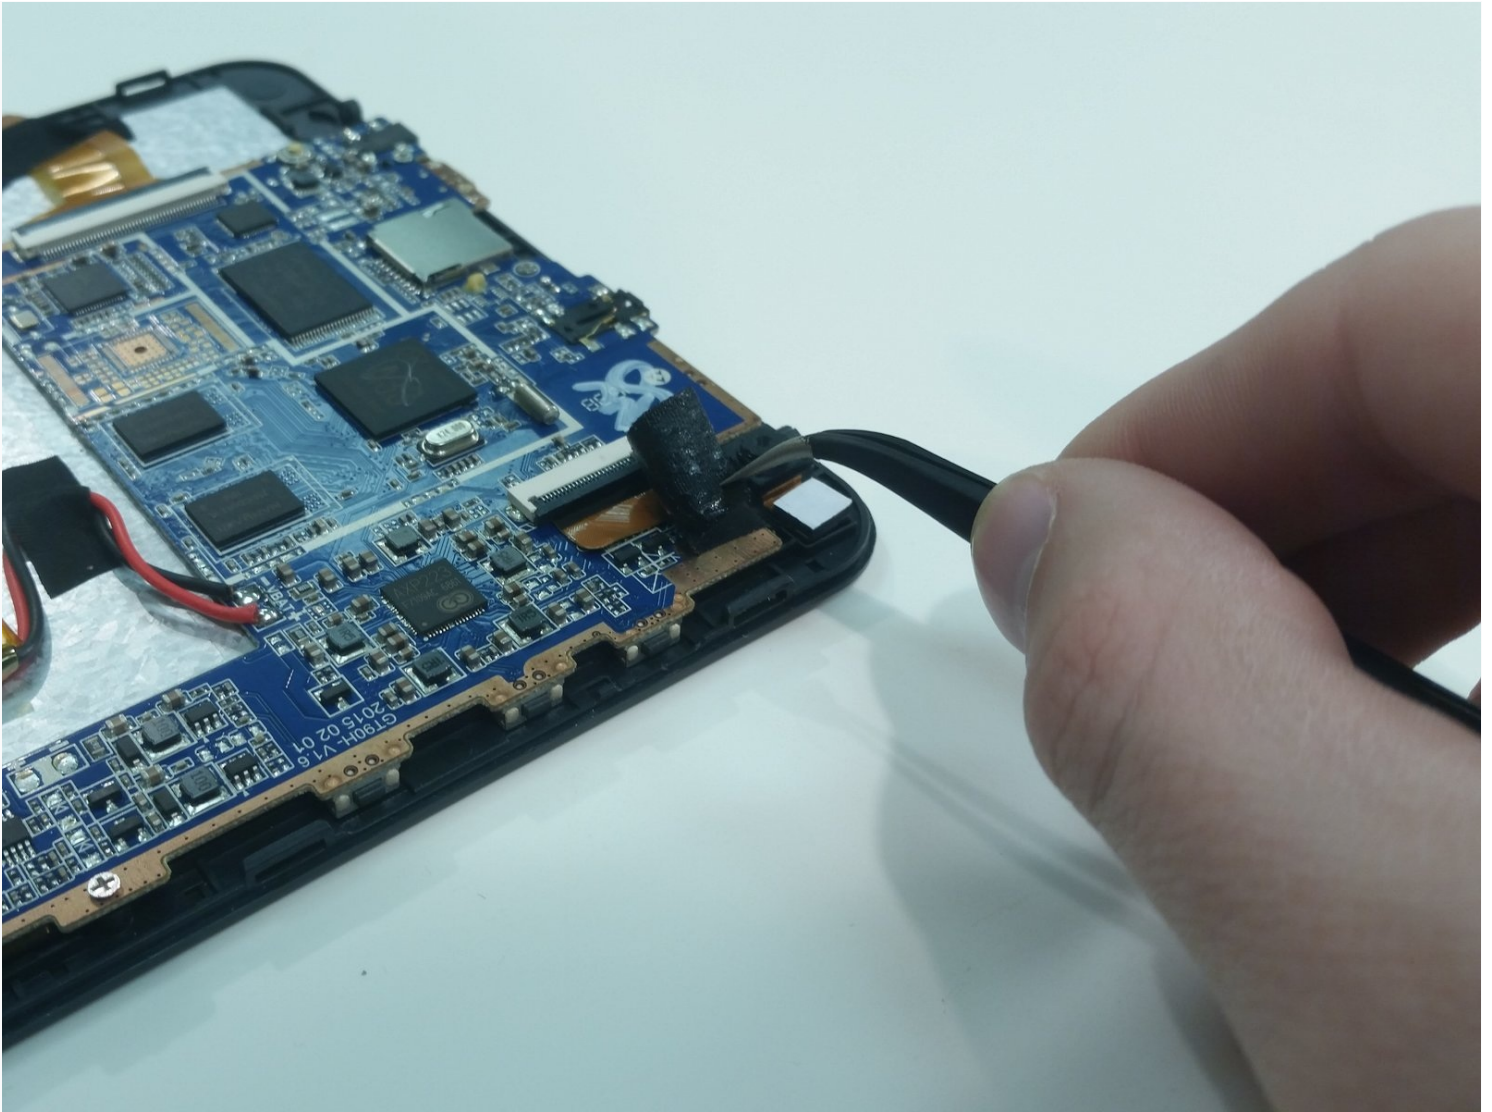

TOOLS:

64 Bit Driver Kit (1)

iFixit Opening Tool (1)


Tweezers (1)

Spudger (1)


Step 1 — Back Cover



- With the tablet turned off, remove the two 5mm Phillips head screws from the top of the tablet.


 These screws are extremely easy to lose. Be sure to store them in a safe place.

Step 2

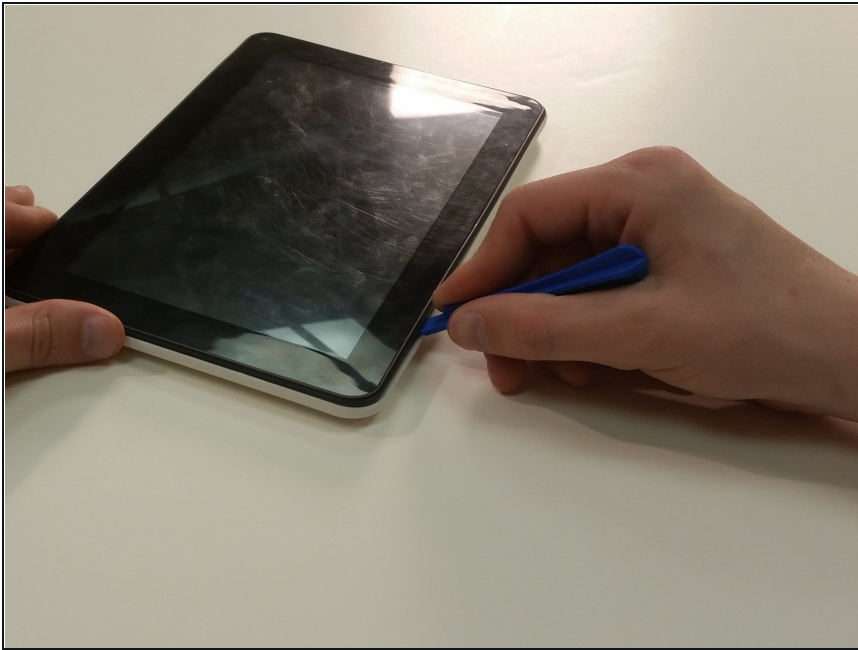


- Use a 1 cm wide plastic opening tool to remove the back panel. Go around the entire back panel to ensure safe removal.
- The power, return, and volume buttons are not firmly secured to the panel; it is likely they will fall off in the process of removing the panel.

Step 3 — Camera

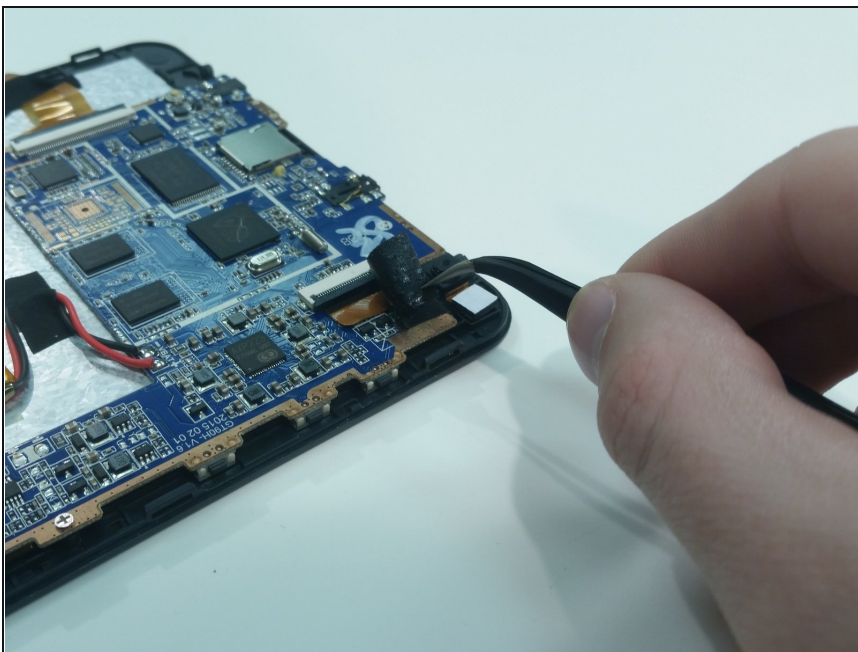


- Using [tweezers](#), carefully remove the cloth covering from the ribbon connector for the camera.

Step 4

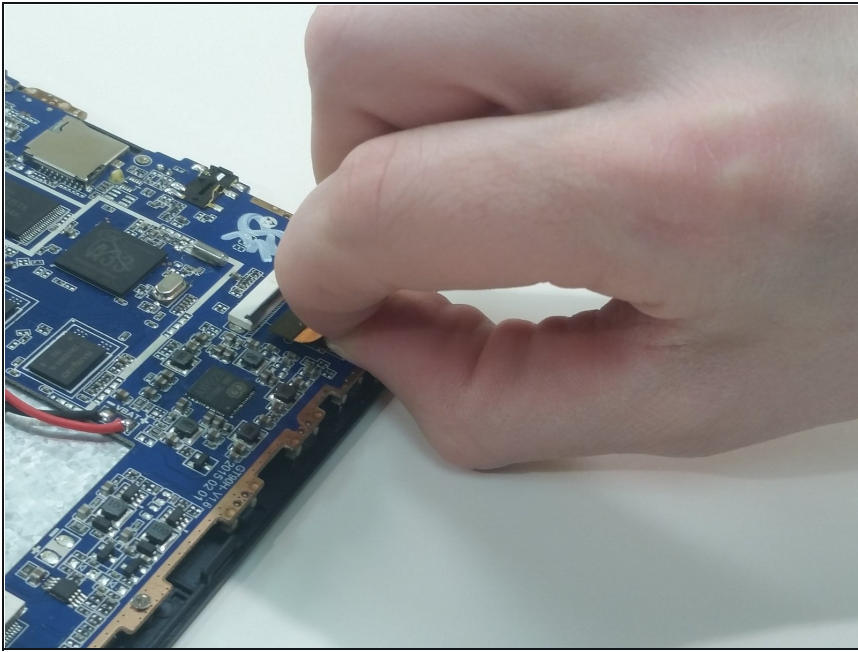

- Use the tip of the spudger or your fingernail to flip up the small flap on the ZIF connector.
- Carefully remove the ribbon cable from the connector.

Step 5

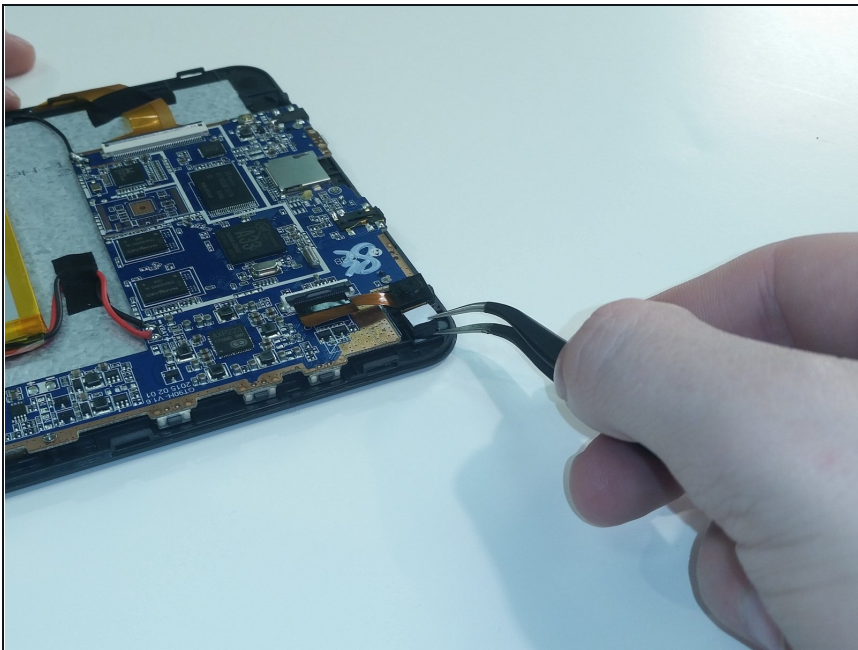

- Remove the camera from its position at the top of the tablet.

To reassemble your device, follow these instructions in reverse order.

