



Acer Aspire One AO756-2623 Battery Replacement

Replace the battery to solve problems such as incomplete charging and short battery life.

Written By: Colin Rodwell



INTRODUCTION

A dysfunctional battery can be the root of multiple problems within the laptop. Replacing the battery requires one step and is also necessary if any of the other parts inside of the laptop need to be replaced for safety measures.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Orient the ACER Aspire One to where the bottom of the laptop is facing upward as shown in the picture.

Step 2




- Locate the circular slot positioned at the bottom right of the battery.

Step 3



- Insert a spudger and slide the tab to the right.

 When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The regular black nylon spudger or a plastic opening tool should be used whenever possible.

- Hold the tab in the right-hand position and firmly push or pull the battery upward to remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.