



Nikon Coolpix L330 Back Housing Replacement

Use this guide to replace a scratched or damaged back housing.

Written By: Taibah



INTRODUCTION

Use this guide to replace a scratched or damaged back plate.

This guide requires removing the back housing of the camera. When replacing the housing, use a PH000 screwdriver. The cover is well secured, so some force may be needed to remove the screws as well as the cover.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Housing



- There are six screws attaching the back housing to the camera. Remove the screws from the body with a PH000 screw head.
 - Two 1.5x2.5mm screws on the right side.
 - Two 1.5x2.5mm screws on the underside.
 - Two 1.5x2.5mm screw on the left side.

Step 2



- After removing the screws, use a metal spudger or plastic opening tool to push the back cover out.
- ⚠ The metal spudger can damage the plastic housing, so use caution when applying any pressure to it. Use a plastic opening tool to reduce the risk of damage to the housing.
- Remove the back housing of the camera by lifting it directly up.
- ⓘ The back cover may be slightly tight, therefore more force may be needed to lift it up.

To reassemble your device, follow these instructions in reverse order.