




Ivation IVWPDC20Y Flash Bulb Replacement

Ivation IVWPDC20Y Repair Flash bulb Replacement

Written By: Wendy Jones

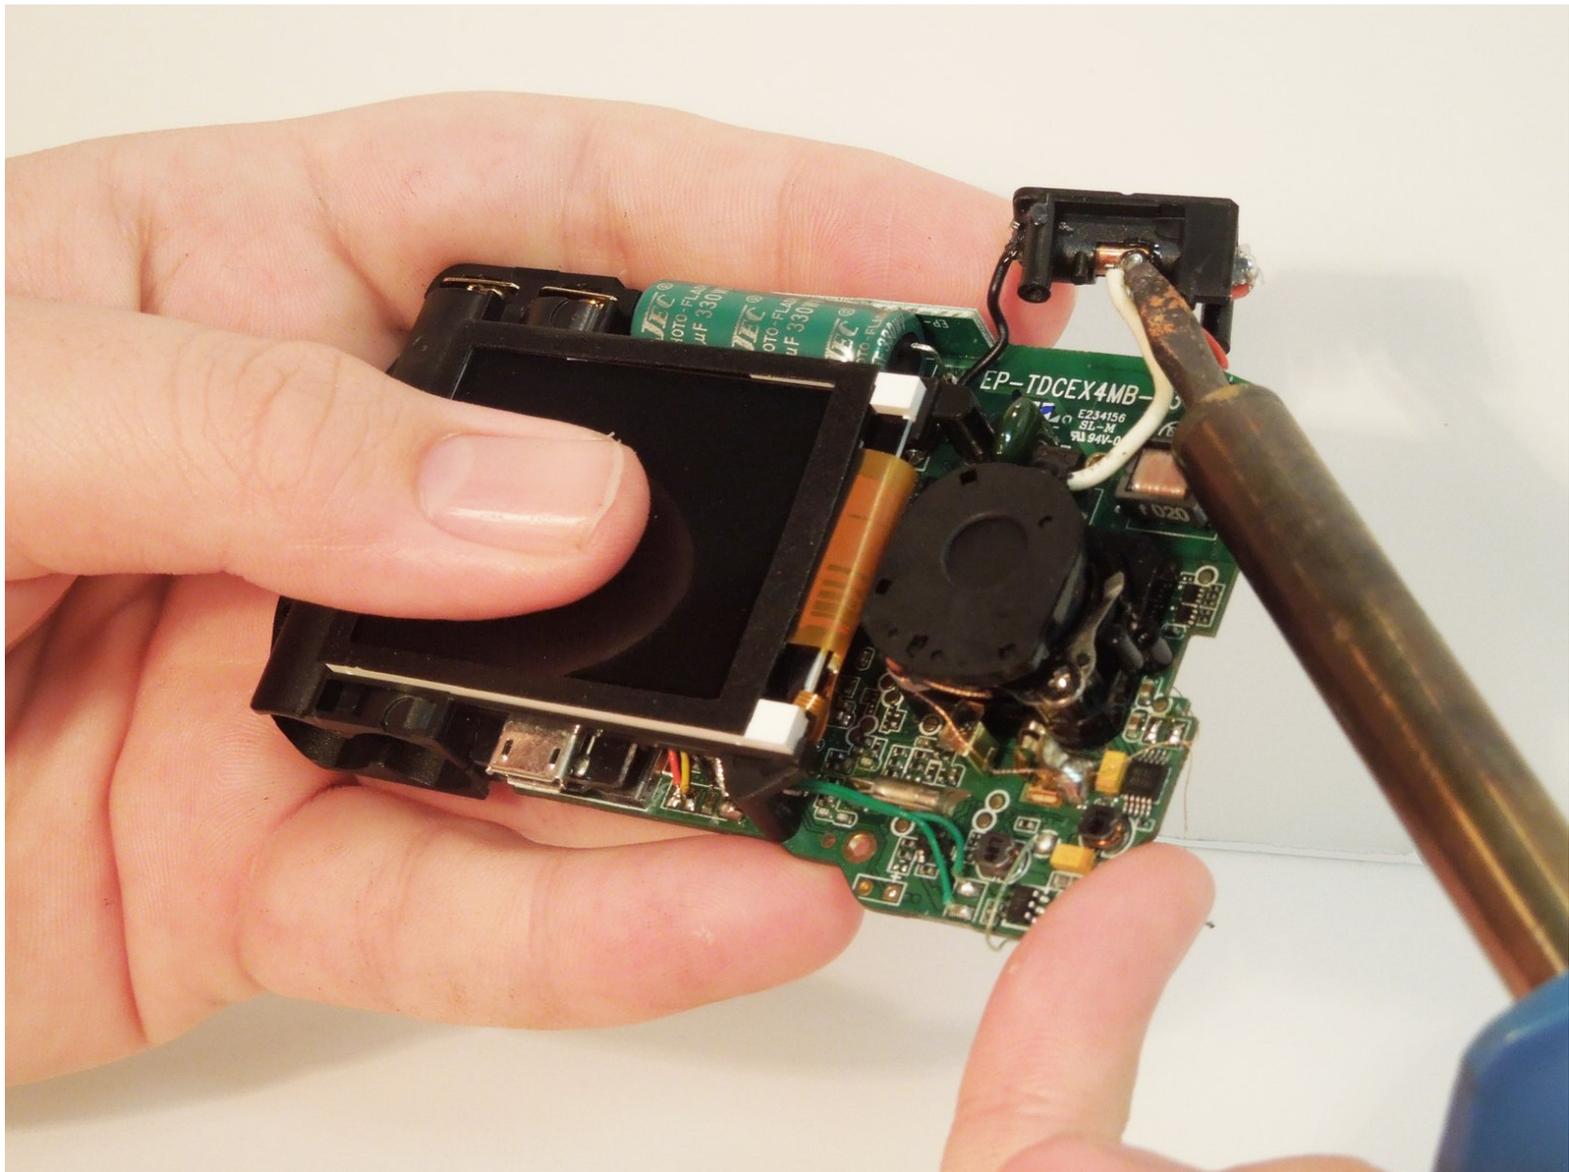

INTRODUCTION

Use this guide to replace the bulb on the flash if it is burnt out.

TOOLS:

- [T6 Torx Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Heavy-Duty Spudger](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Flash Bulb



- With the H2.0 bit screwdriver, remove the two screws on the yellow waterproof cover

Step 2



- Apply a plastic opening tool to each of the corners and gently remove the casing
- ⓘ The front casing is held down by adhesive and may require additional work to remove
- ⚠ Apply just enough force to undo the inner latches to make sure not to damage the waterproof seal

Step 3



- Remove the five silver screws from the inner casing using the PH00 screwdriver bit

Step 4



- Remove the six screws from the edge of the clear inner casing with the PH00 screwdriver bit
- ⚠ These screws are very small and easy to strip so apply consistent pressure when removing them

Step 5




- Pry off back outer casing using the black spudger or the blue prying tools

Step 6




- Carefully remove the screen from the silver casing using a prying tool or the black spudger
- ⚠ There is adhesive in the center of the screen, be sure not to bend it when applying pressure

Step 7

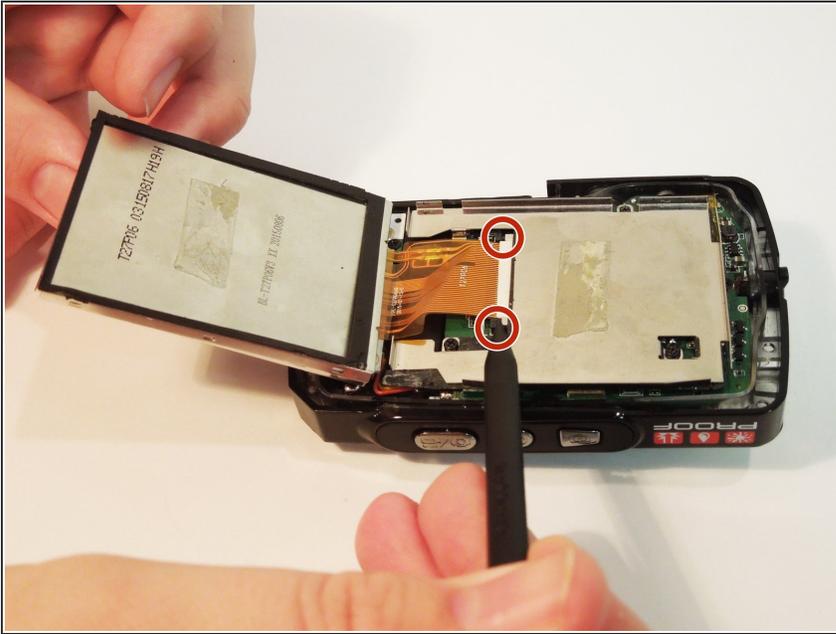


- Gently push out the pins holding the orange tape down using the pointy end of the spudger
- ⓘ Screen and orange tape should slip out as a whole

Step 8

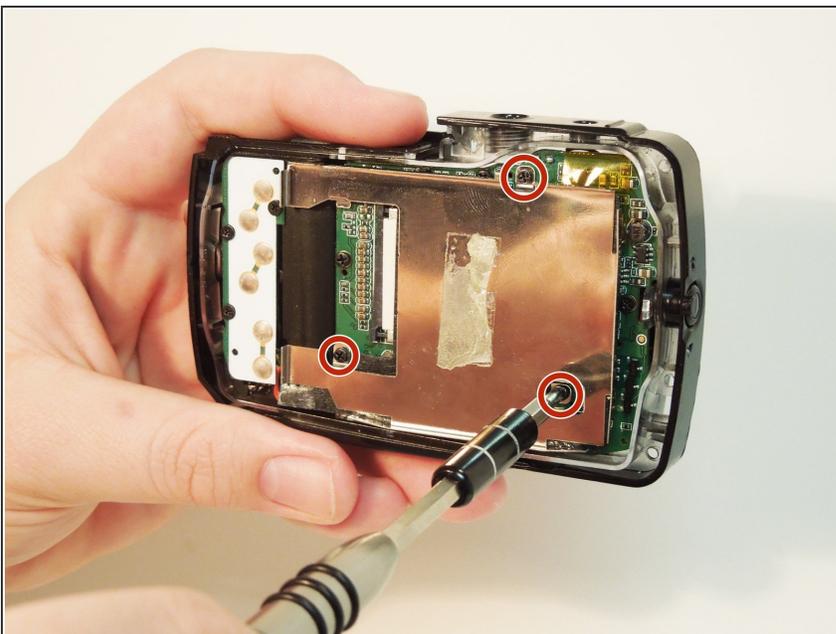


- Remove three screws holding the silver screen casing to the motherboard using the PH00 bit screwdriver

Step 9

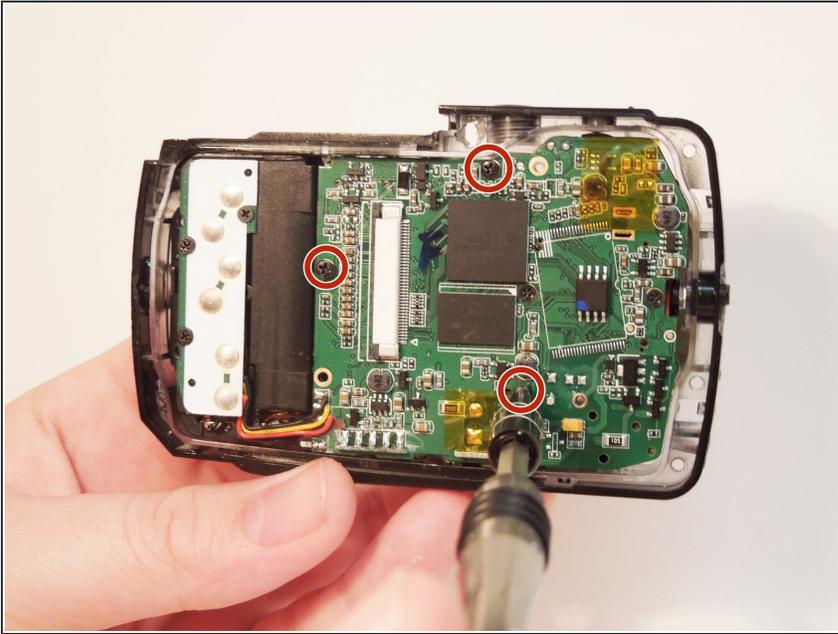


- Remove three screws holding the motherboard into the casing using the PH00 bit screwdriver bit

Step 10

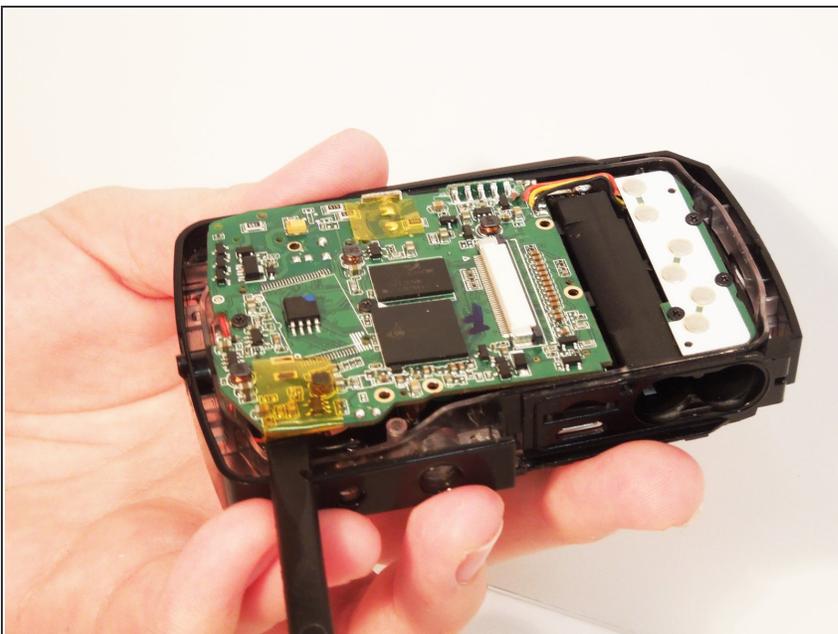

- Gently lift the corner of the motherboard out
- ⓘ Everything should come out as one component free of the casing

Step 11

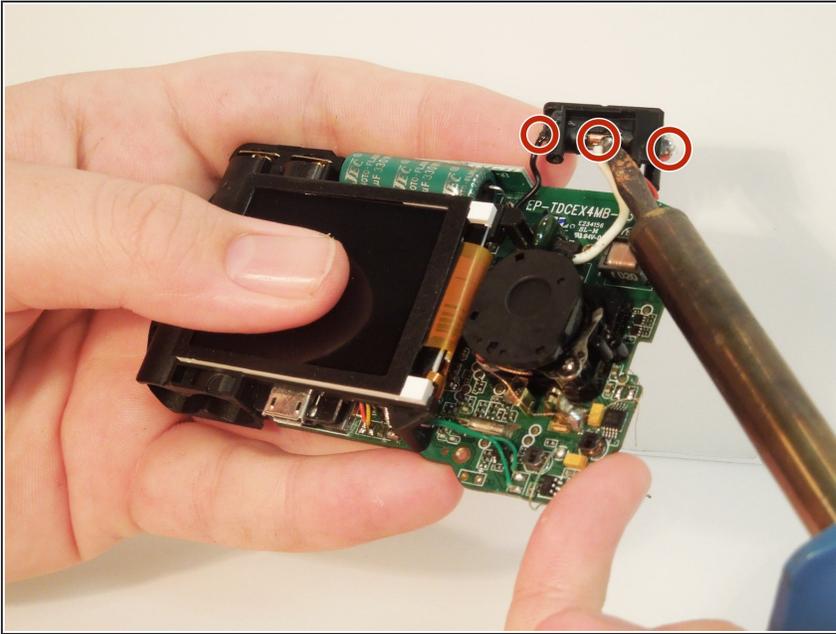

- Remove the soldering on the three wires holding the flash bulb
- ⓘ The wires are different colors: red, white, and black

To reassemble your device, follow these instructions in reverse order.