



# Base Disassembly

Disassembly of the Ninja base is needed to get inside to observe the motor's parts.

Written By: Devin Poulin



---

## INTRODUCTION

In this prerequisite guide, we will remove the 4 screws on the bottom of the base. Then we will remove the gray cover from the base.

---

### TOOLS:


- [T10 Torx Screwdriver](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Base Disassembly



- Take out the three 15 mm Phillips #1 screws.
- Remove the 15mm T10 screw.
- ☑ Place the 4 screws on the magnetic mat.

## Step 2

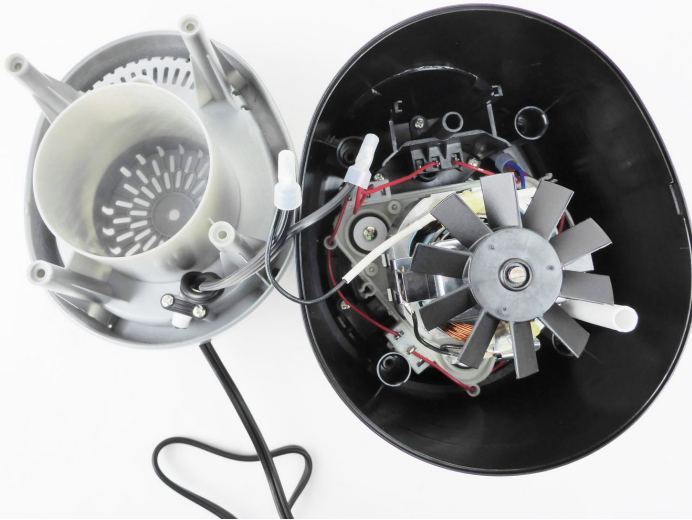

- Remove the gray base by lifting upwards and placing to the side.

To reassemble your device, follow these instructions in reverse order.