




NeuTab N7 Pro Speaker Replacement

Use this guide to replace the speaker.

Written By: Travis McLean

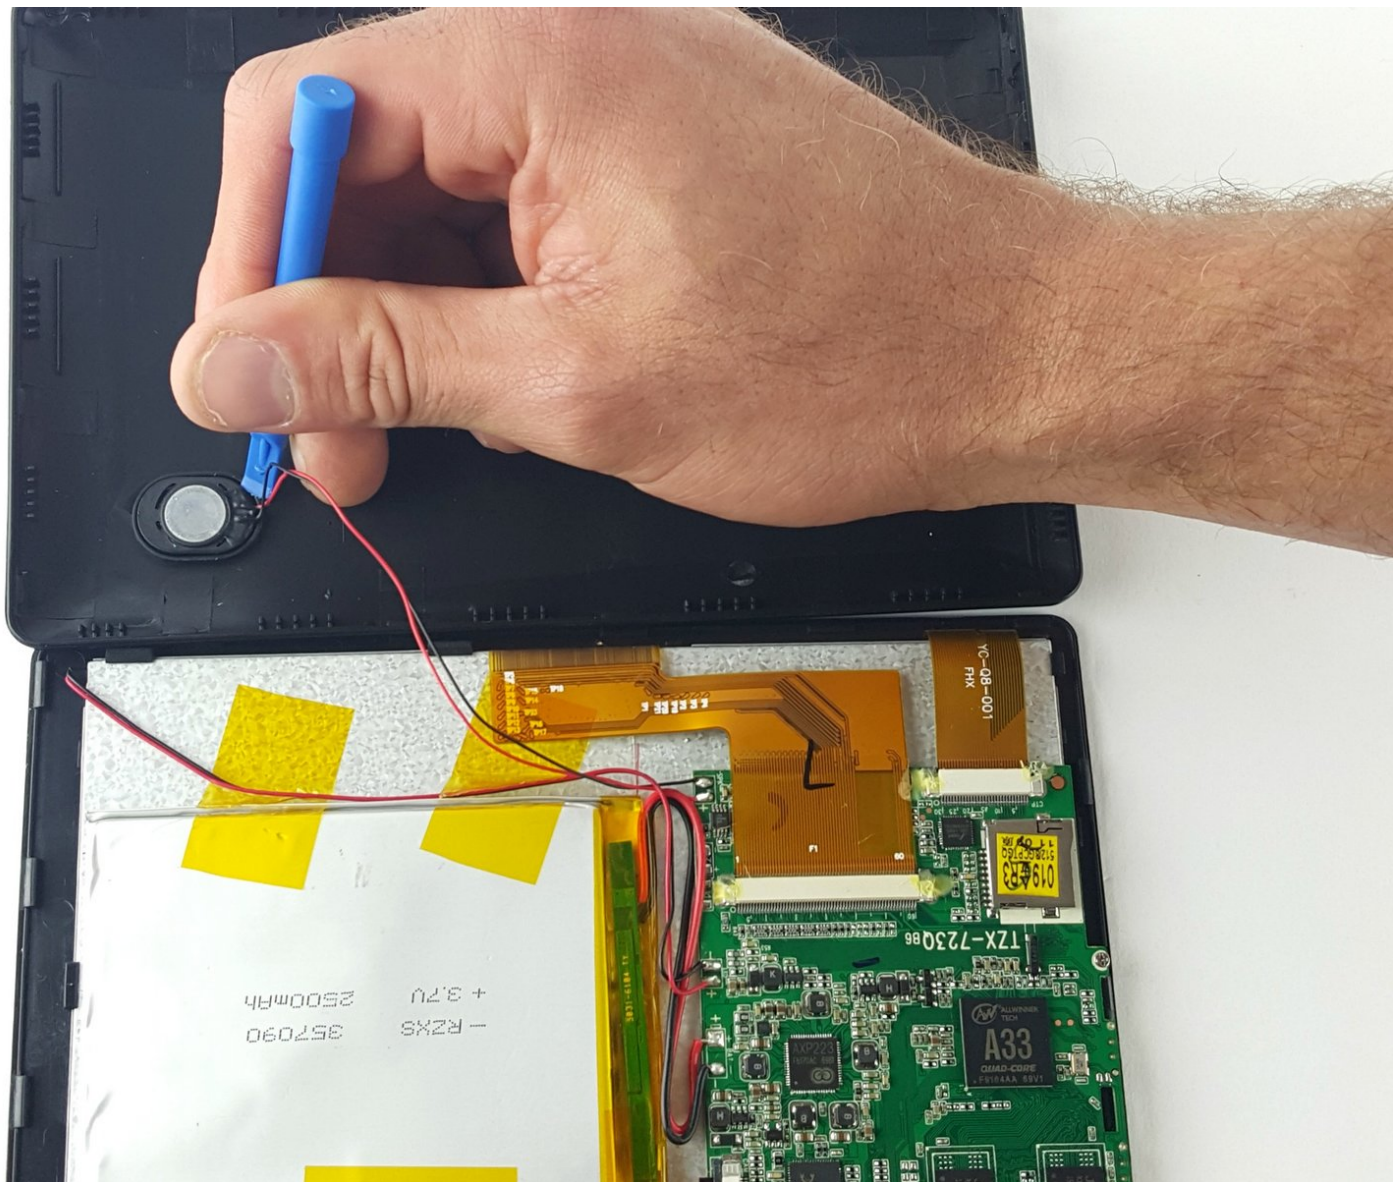

INTRODUCTION

If your speaker is not working or starting to go out then this guide is for you. By following the steps provided, you will be able to successfully replace the speaker for your NeuTab N7 Pro.

TOOLS:



- [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Speaker




- ❗ Power off your device before beginning disassembly.
- Insert plastic opening tool and pry back case away from the device, slowly moving the plastic opening tool along the device.

Step 2

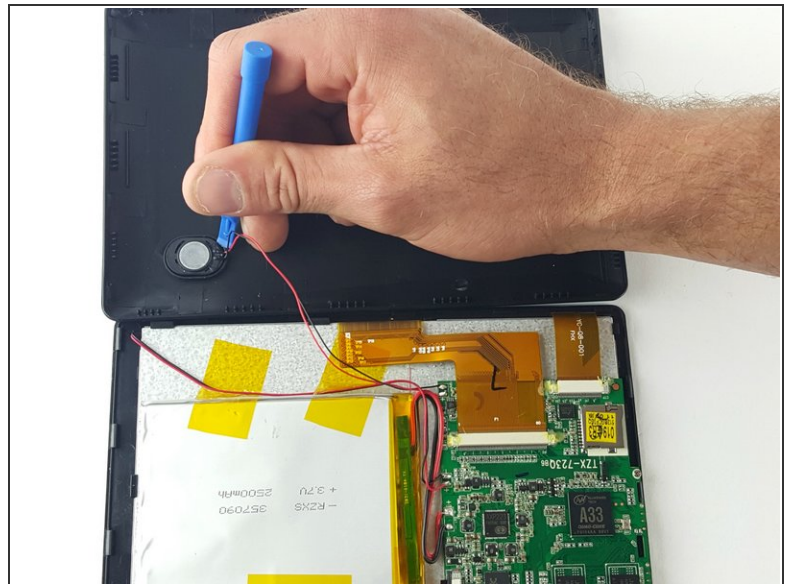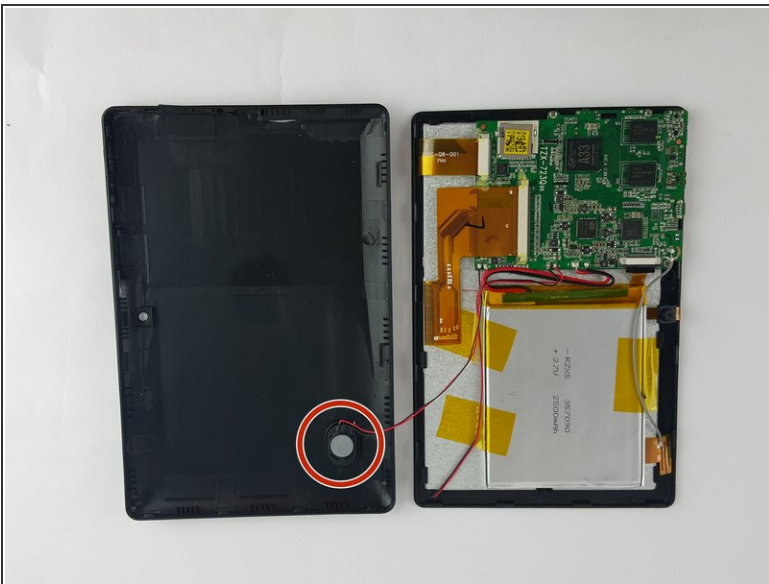

- The speaker is attached to the back cover of the device.
- Hold positive and negative wires as close as possible to the speaker. Use small plastic spudger and fingers to simultaneously lift speaker from cover.

Step 3

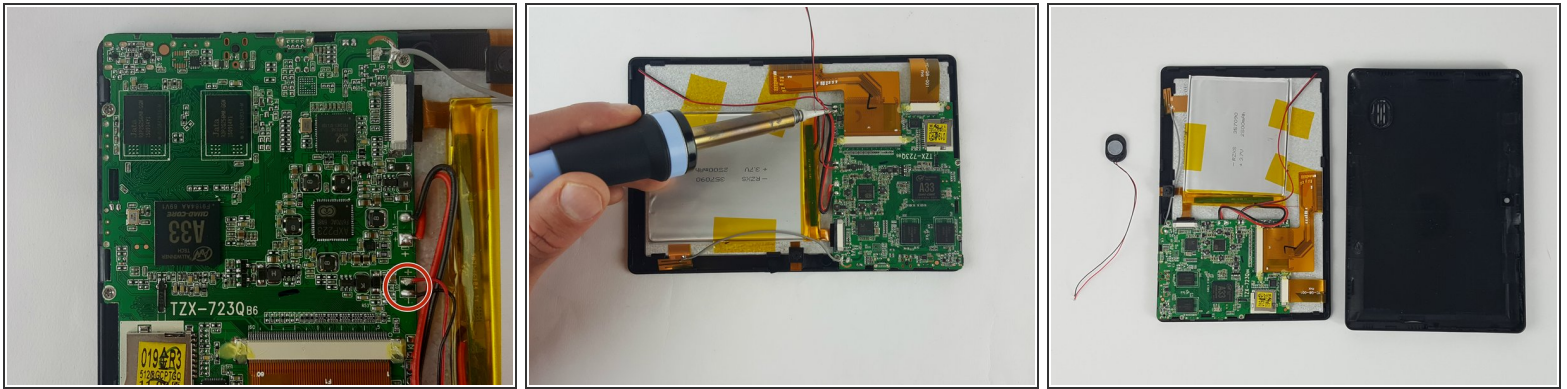

- Use a soldering gun to remove the positive and negative wires connecting the battery to the circuit board.
- ⓘ For a complete guide on how to solder, [click here](#).
- ⚠ Be sure not to touch both the positive and negative terminal at the same time.

To reassemble your device, follow these instructions in reverse order.