




NeuTab N7 Pro Camera Replacement

Use this guide to replace the camera.

Written By: Robsander Carrasquero

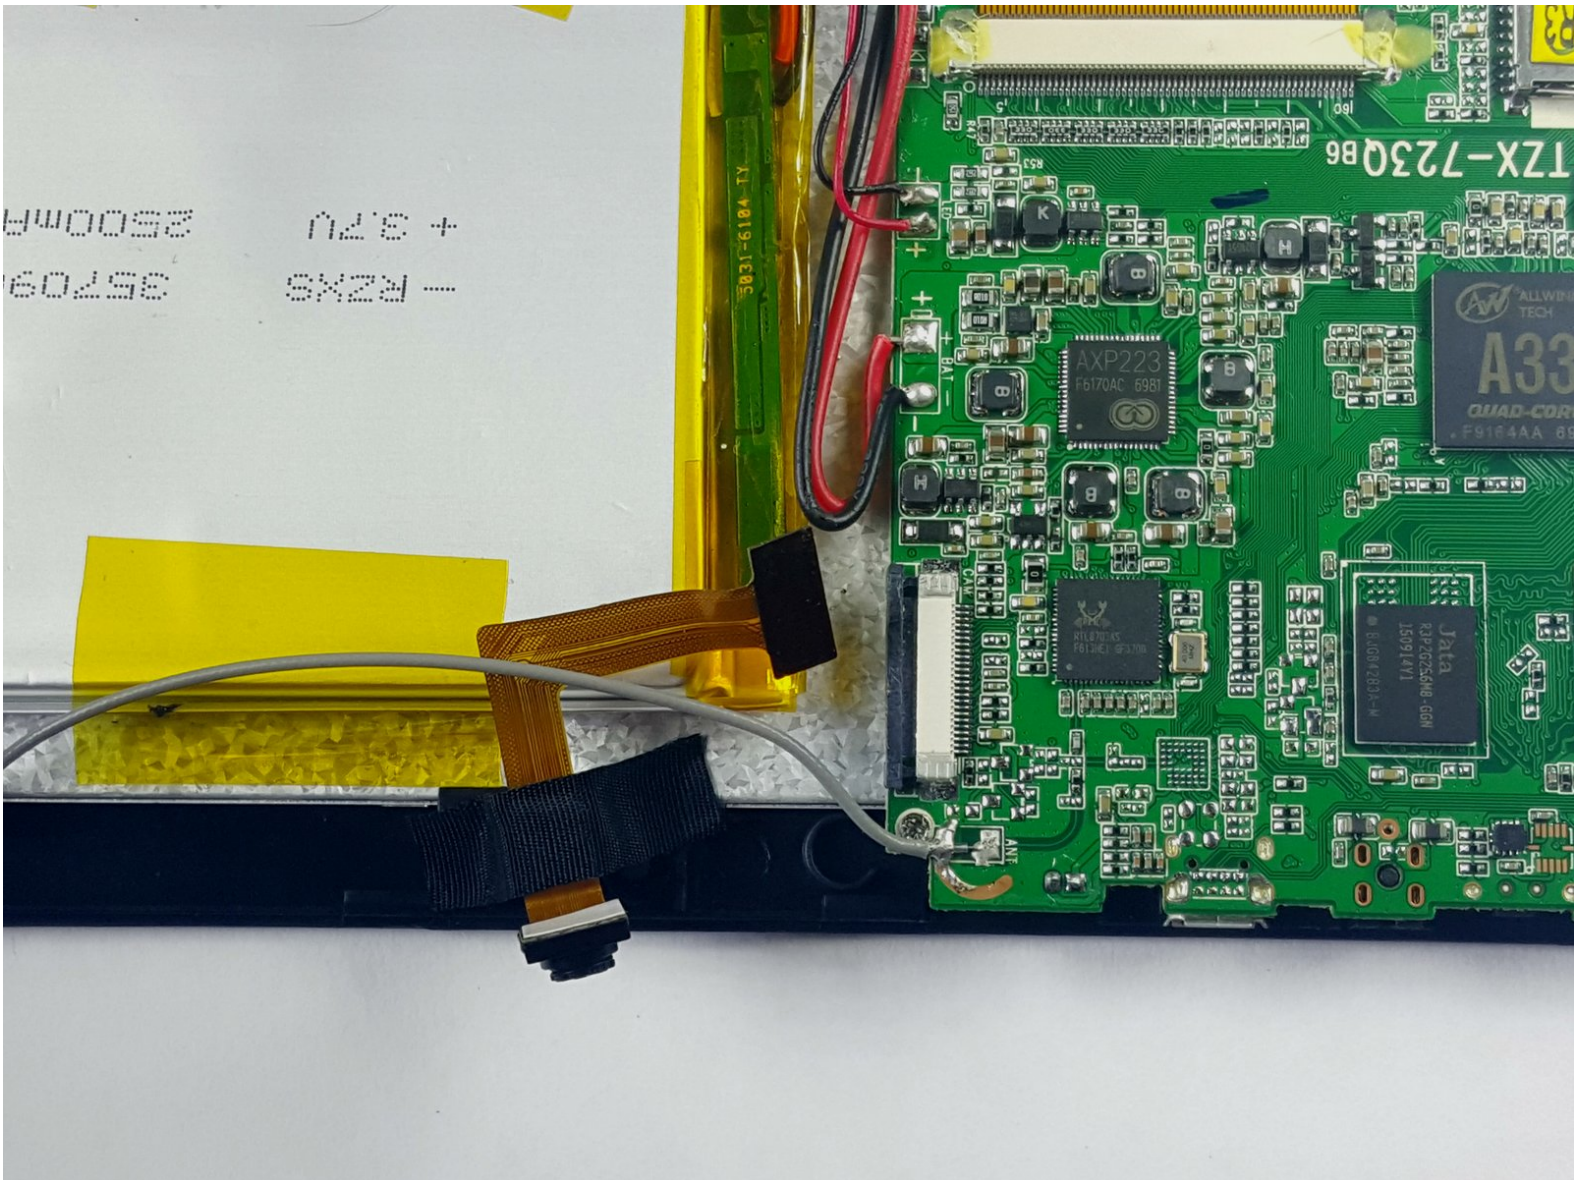

INTRODUCTION

The NeuTab N7 Pro has a dual camera. The gadget comes with a back camera of 2 MP and a front camera of 0.3 MP. The NeuTab N7 camera can sometimes break or malfunction, and must then be replaced to continue to be able to take pictures and video. Use this guide to replace the camera.



TOOLS:

- [Metal Spudger](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:


- [NeuTab N7 Pro rear camera](#) (1)

Step 1 — Camera





- ⚠ Power off your device before beginning disassembly
- Insert plastic opening tool and pry back case away, slowly moving the plastic opening tool along the device.

Step 2

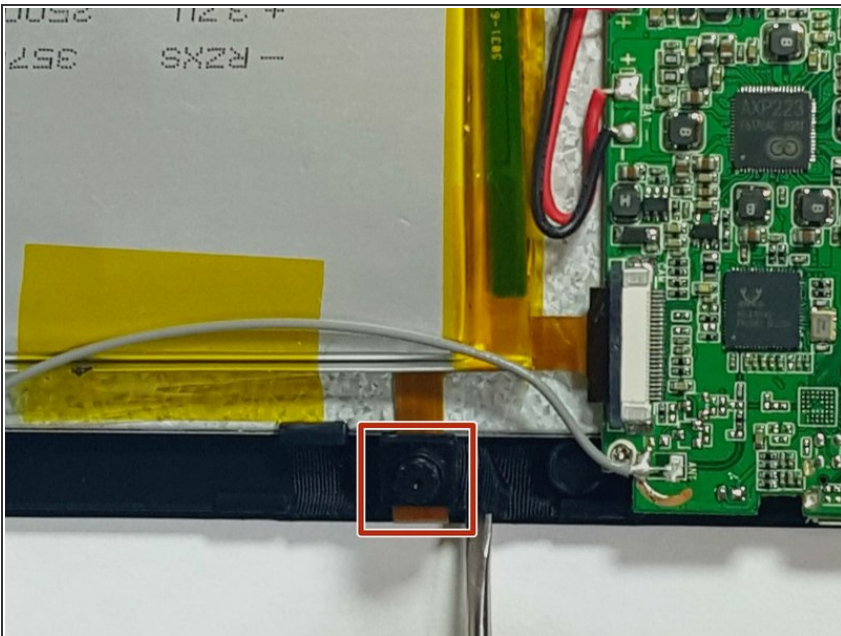

- Locate the camera unit and note where it is attached to the motherboard.
- Use a black nylon spudger to remove the adhesive holding it onto the motherboard.
- ⚠ Metal tools can puncture an unprotected battery, potentially causing a fire. When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device.

Step 3

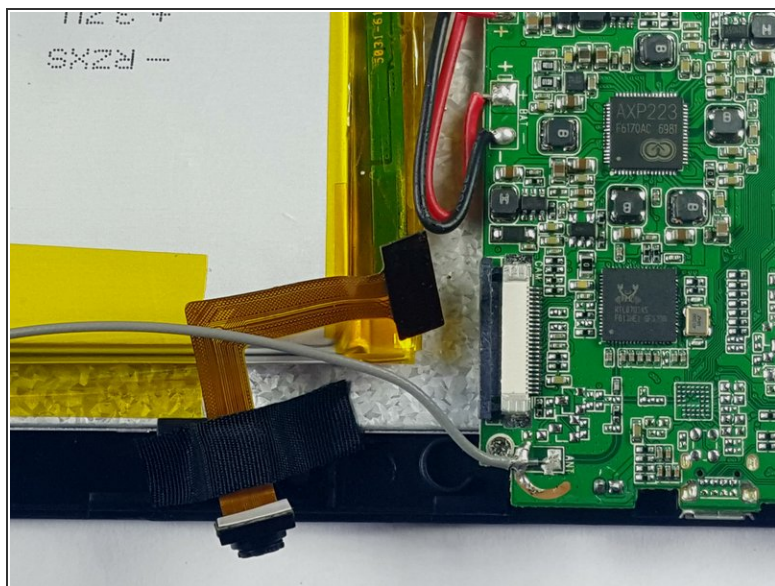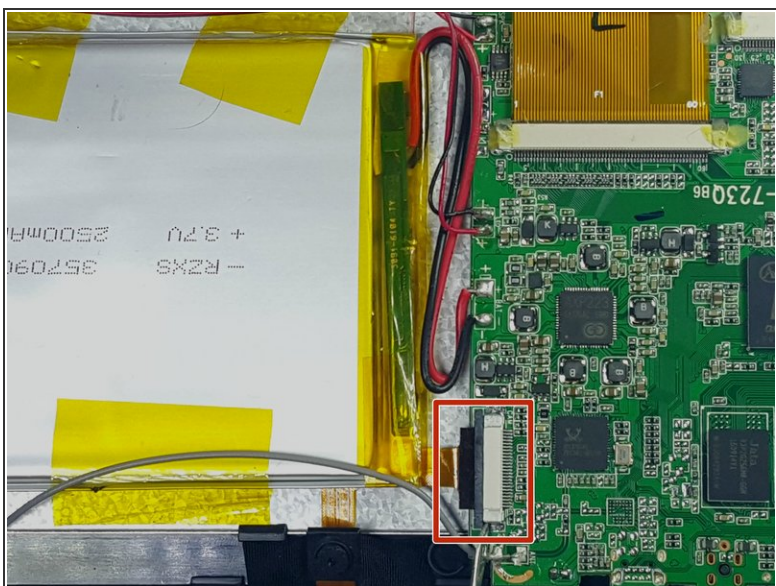

- Use a black nylon spudger or tweezers to release the connector holding the camera ribbon cable in place.
- Carefully pull the ribbon cable out, removing the camera from the motherboard.

To reassemble your device, follow these instructions in reverse order.