




VTech Learning Tunes Karaoke LCD Screen Replacement

This guide will demonstrate for the reader how to replace a cracked or malfunctioning LCD screen.

Written By: Gregory Timmins

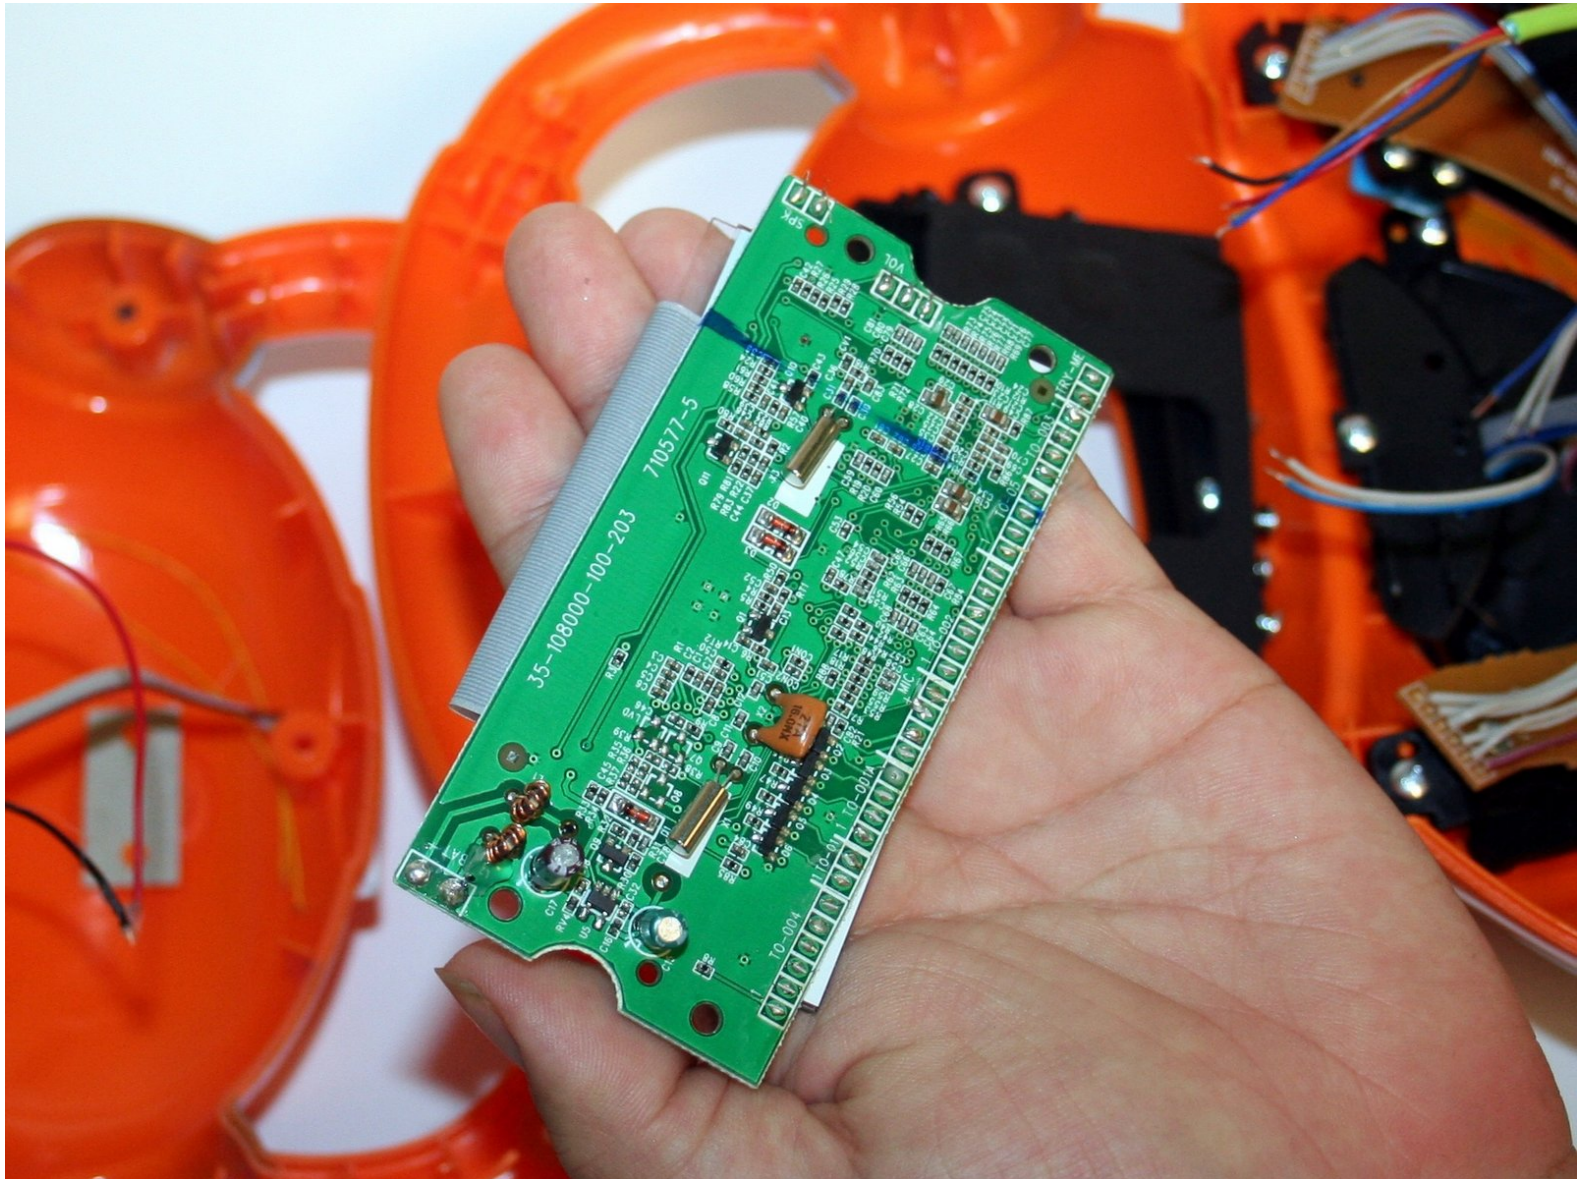

INTRODUCTION

Does the screen not show any animations while on? Replacing the LCD screen may solve your problem.

TOOLS:

- [Soldering Workstation](#) (1)
 - [Flathead Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — LCD Screen



- To remove the battery door, loosen the screw using a Flathead screwdriver.


ⓘ A coin can also be used to loosen the screw.

Step 2




- Remove the battery door and take out the batteries.

Step 3

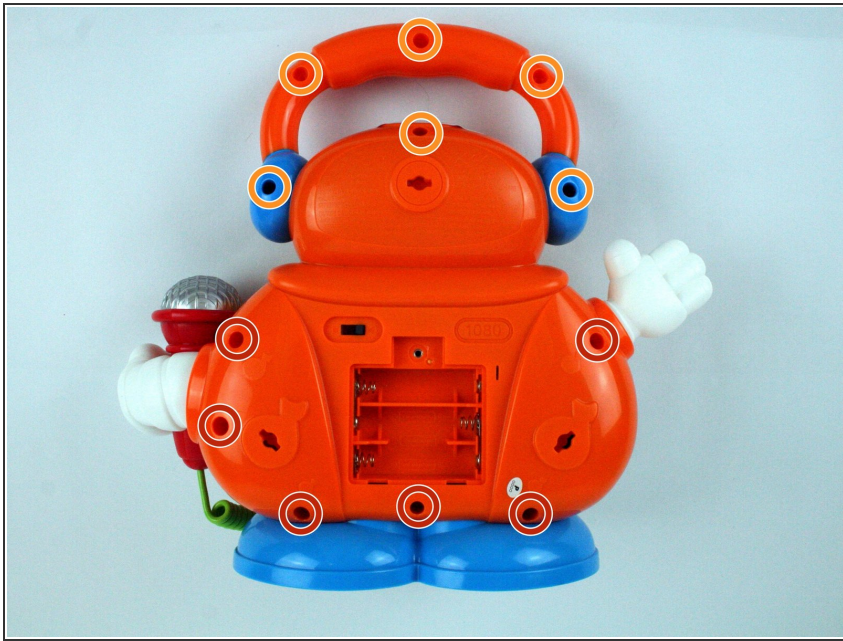

- Remove the six 9.5 mm Phillips #2 screws.
- Remove the six 6.0 mm Phillips #2 screws.

Step 4

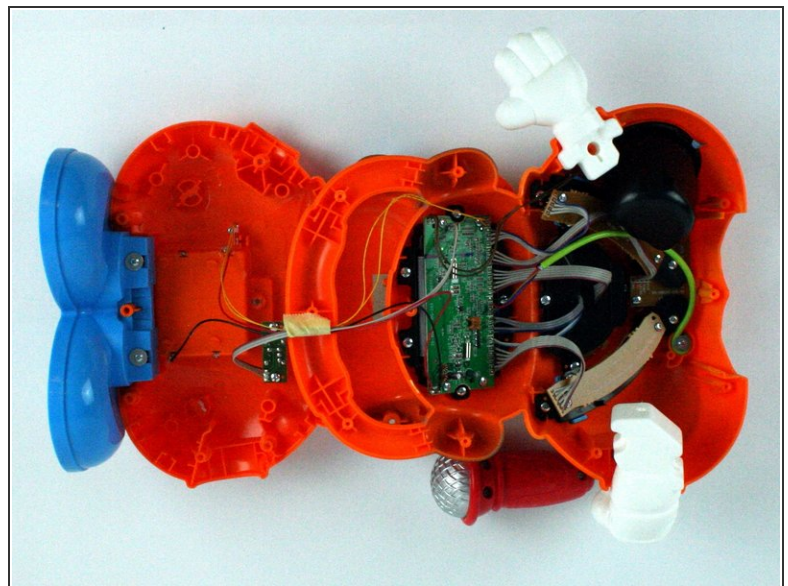


- Gently pull up on the rear panel.

⚠ Be careful to not pull on the wire connections.

- Gently place the back panel underneath the top panel with the tops facing each other, as shown in the picture.


This document was generated on 2020-11-20 02:23:20 PM (MST).

Step 5

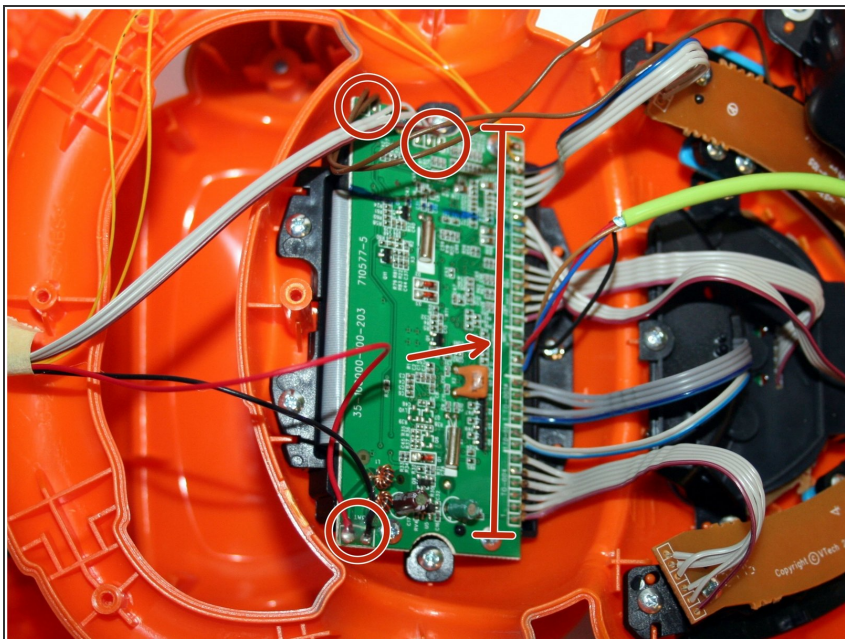


- Note wire connections and desolder connections to board.
- [iFixit guide on soldering](#)

Step 6

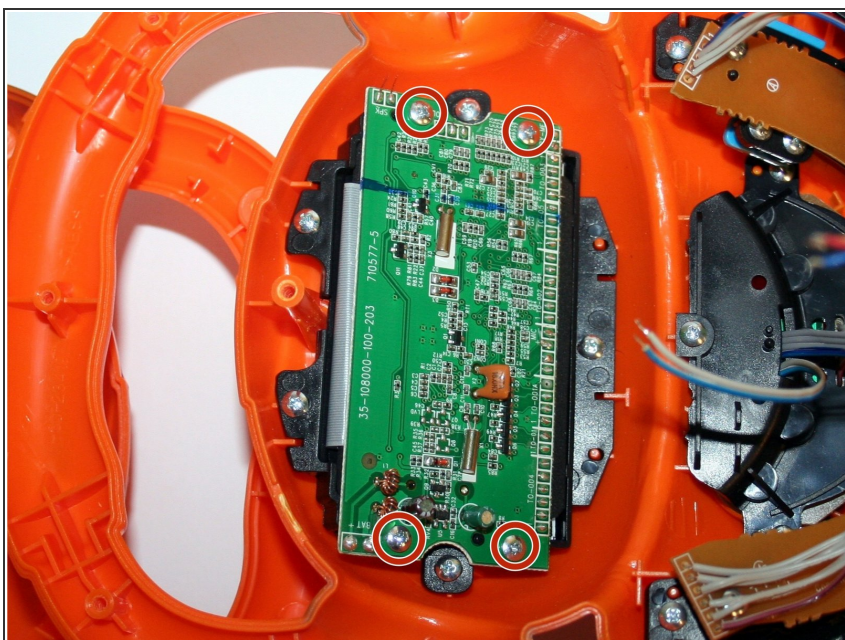

- Using Phillips #1 screwdriver, remove the four 7.9 mm LCD board screws.

Step 7

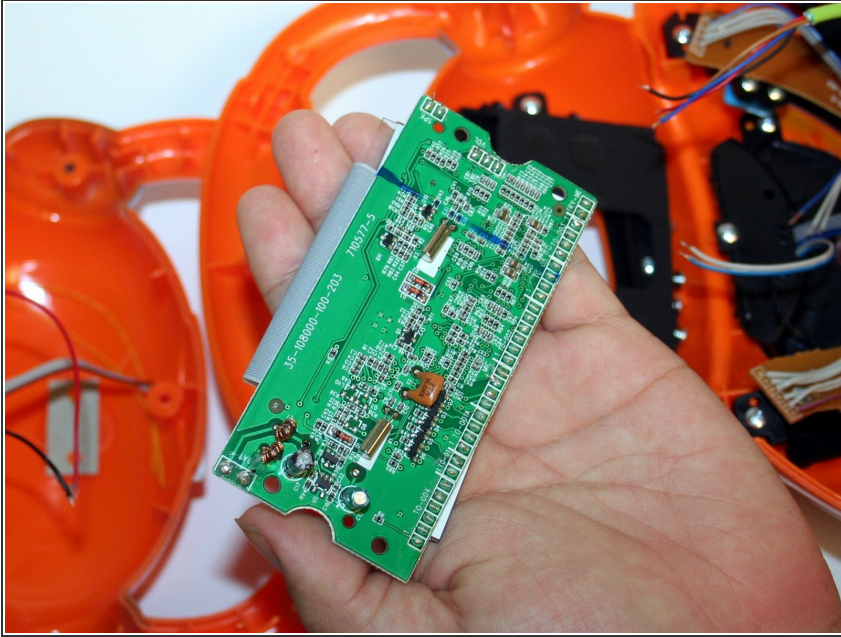

- Remove old board and screen.

To reassemble your device, follow these instructions in reverse order.