



# Samsung NX2000 Lens Assembly Replacement

The Samsung NX2000 is a smart camera with Wi-Fi capabilities and a detachable lens.

Written By: Katarina Raic



# INTRODUCTION

This guide will show you how to replace the lens assembly on the Samsung NX2000. It will show you a step by step replacement guide of how to remove parts of lens successfully. Begin with making sure your camera is turned off and removing the lens.



## TOOLS:

- [Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [Tri-point Y0 Screwdriver](#) (1)
  - [Precision Tweezers Set](#) (1)
-

## Step 1 — Lens Assembly



- Begin by pressing the lens lock button to the right of the lens.
- Release the button and turn the lens in a clockwise motion until you have removed the lens.

## Step 2



- Make sure your camera is turned off and flip your device upside down.
- Slide the battery switch to the left and open the battery compartment.
- Push the blue button up inside the battery compartment and remove the battery.

## Step 3



- Remove the four 4mm screws highlighted here with the Y0 screwdriver.
- Using a tweezer, gently remove the outer silver lens lining.
- Underneath will lie a black ring, which needs to be removed using the same tweezer.

## Step 4



- Remove the final silver ring from the lens assembly using a tweezer.
- Using a slanted tweezer, remove the highlighted pyramid screw from the compartment shown.
- Remove the spring from the same compartment using the same tool.

To reassemble your device, follow these instructions in reverse order.