



Grace Digital Mondo Remote Disassembly

This guide will show you how to disassemble your remote in order to replace/fix any given components.


Written By: Zachary Nelson



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Grace Digital Mondo Remote Disassembly

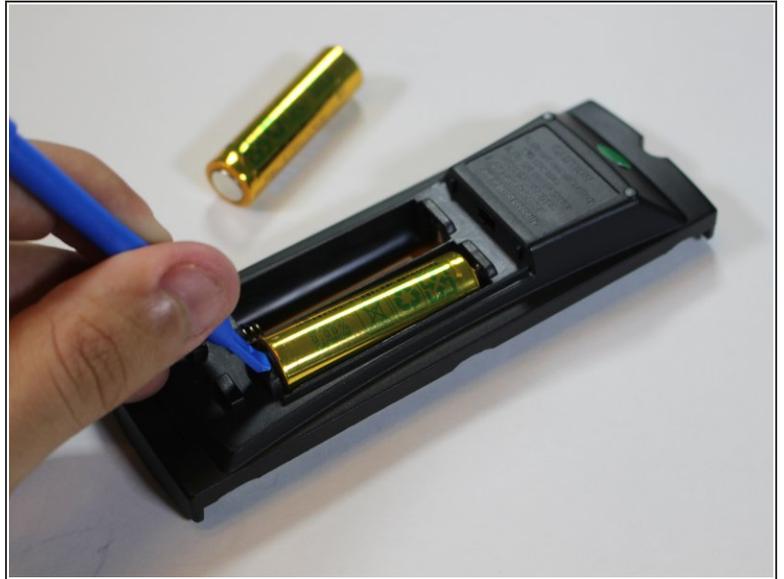

- Slide back the battery cover.
- Remove the (2) AA batteries by prying upwards with a plastic opening tool from the (+) terminals.

Step 2



- Locate the (6) clips that hold together the remote.
 - Gently separate the cover with a plastic opening tool.
- ⚠ Fully disengage the clips before beginning to gently pry open the remote. This might result in breaking the thin plastic shell and making the clips non-functional.

To reassemble your device, follow these instructions in reverse order.