

Garmin Nuvi 1490T Battery Replacement

Guide on how to remove the battery for replacement.

Written By: Ricardo Solis



INTRODUCTION

Use this guide to replace the battery of your Garmin Nuvi 1490T GPS.

TOOLS:

- iFixit Opening Tools (1)
- T5 Torx Screwdriver (1)
- Tweezers (1)
- Heavy-Duty Spudger (1)

PARTS:
Garmin Nuvi 1400/1450/1490
Replacement Battery (1)

Step 1 — Front Frame Panel



- Power off your GPS before moving on.
- Locate the crevice that separates the frame from the body.

Step 2




- Carefully insert the plastic prying tool into the crevice to separate the frame from the body.
- Applying excessive force can lead to a damaged or scratched display screen.



• Slide the plastic prying tool around the perimeter to completely remove the frame.

Step 4 — Second Frame Panel

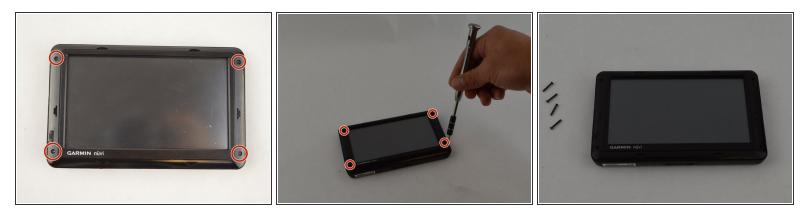

• Remove the four 11.0 mm screws using the Torx T5 screwdriver.




- Using the plastic prying tool, dislodge the frame from the body of the device.
- Using your hands, completely disconnect the frame from the body.
- Set the pieces of the frame aside.

Step 6 — Display Screen




• Gently lift up the display screen using your fingers to make sure the only thing connecting it to the body is the ribbon cable.

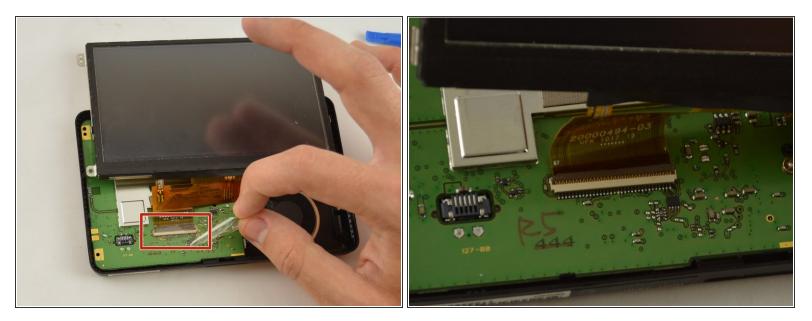

• Remove the piece of tape that is covering the connecting point of the motherboard and display.

Step 8

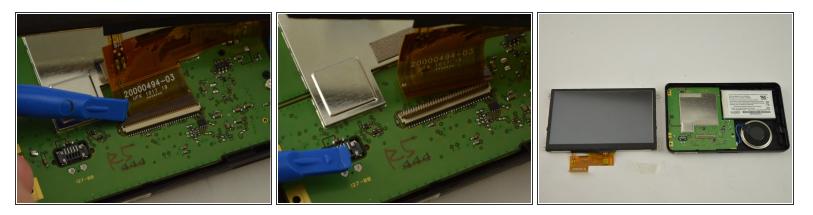


- Using the plastic opening tool or your fingers, lift up the ZIF connector holding the ribbon cable in place.
- Carefully pull the ribbon cable out of the connector with tweezers or two fingers.
- Gently disconnect the display by pulling upward. Set display aside.
- If the display screen does not disconnect easily, make sure the ZIF connector is no longer holding it in place.

Step 9 — Battery



- Using the T5 Torx screw driver, remove the two 5.0 mm screws.
- Using your hands, lift up the motherboard and fold it over.

Step 10

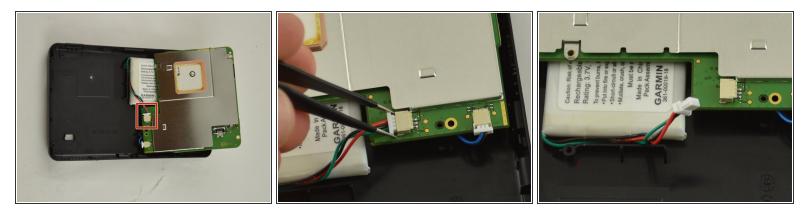

- Fold motherboard out of the way to reveal the white plastic end of the battery plug.
- Using the tweezers, pull the white plastic connector to disconnect the battery from the motherboard.
- Let the cord hang unattached.



- Return motherboard back to original position by flipping it back over.
- Using the nylon spudger, dislodge the battery out of its socket.

Use a tool that is ESD-safe such as a nylon spudger or a plastic prying tool. Never use a metal spudger to take out the battery.

To reassemble your device, follow these instructions in reverse order.