



DigiLand DL701Q Back Case Replacement

This guide will show the user how to remove the back cover and replace it.

Written By: Jonathan Mysona



INTRODUCTION

This guide will show the user the first steps into opening their Digiland tablet and replacing the back of the case.



TOOLS:

- [iFixit Opening Tool](#) (1)
-

Step 1 — Back Case



i Make sure your device is turned off.


- Hold the device firmly, in landscape view.
- Locate the crevice that separates the front cover from the back cover. Then hold the plastic opening tool and insert the wedge portion of the tool into the crevice.

i Some force may need to be applied and there may be a cracking sound. This is normal.

- Slowly slide the wedge portion of the plastic opening tool while applying some upward force around the device until the back cover is completely loose.

! Only apply enough force to loosen the back cover. Excessive force may damage the screen.

Step 2

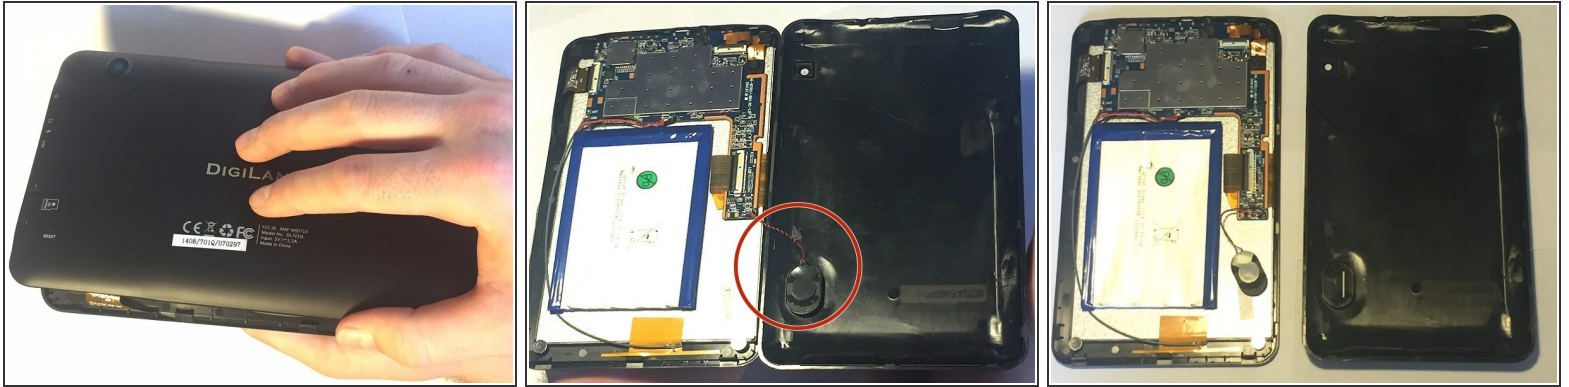

- Place the screen in the palm of your hand and then with your other hand carefully grab the case and remove the cover like flipping the page of a book.
- Lay the device down and notice that the speaker will be attached to the back cover with a wire. Carefully lift the speaker upward from the back cover and place it near the battery.
- ⓘ The speaker may be glued in so treat with care and remove the speaker by gently moving your finger around it and lifting up.

To reassemble your device, follow these instructions in reverse order.