



# DigiLand DL701Q Micro SD Card Replacement

This guide will show how to remove the Micro SD Card and replace it.

Written By: Jonathan Mysona



## INTRODUCTION

This guide will help the user replace the micro SD card which can store information on your tablet.

## Step 1 — Micro SD Card



- Lay screen in the palm of your hand and locate the picture and words of the back cover that say micro SD.
- Push the card inward towards the center of the device until there is a click. Then release your finger.
- ⓘ The card is loose from the device and can fall out.
- Now pull the card out of the device.

To reassemble your device, follow these instructions in reverse order.