



# Asus eee PC 1015px HDD and cooling fan repalcement

Follow this guide to replace the cooling fan and to access the HDD compartment

Written By: Smilzo





## Step 1 — Cooling fan



- Remove the battery.

## Step 2




- unscrew the 4 screws, purple arrow

## Step 3



- use a screwdriver to press in the 2 slots to unlock the keyboard hooks


## Step 4

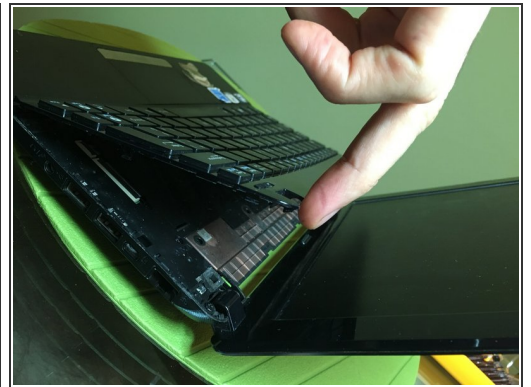

- pry up the 2 side points to release the joints
- Using a flat opening tool, unclip the keyboard along the perimeter




## Step 5

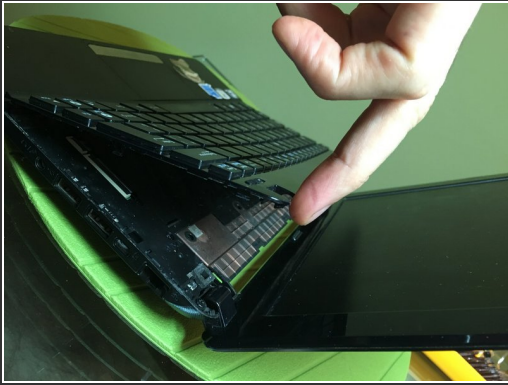


- unhook the keyboard
- Disconnect the ribbon cable by opening the 2 black side latches

## Step 6

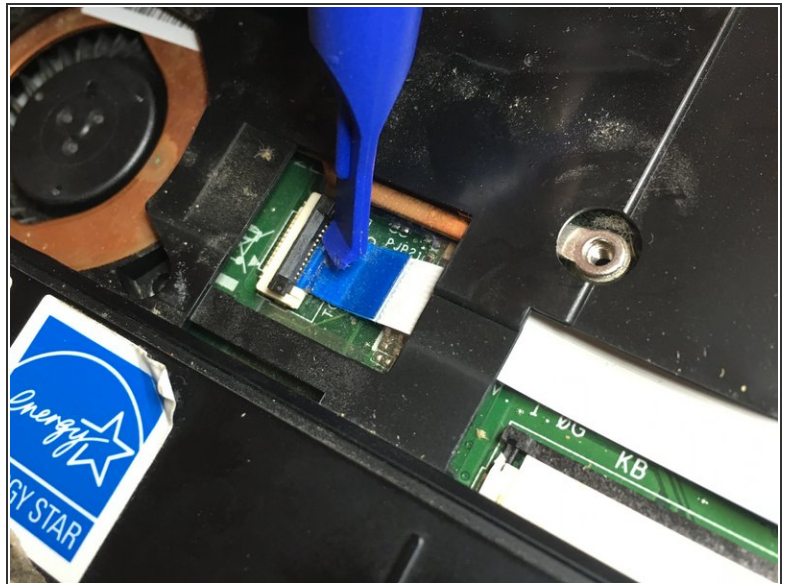



- Disconnect the 2 ribbon cables

## Step 7

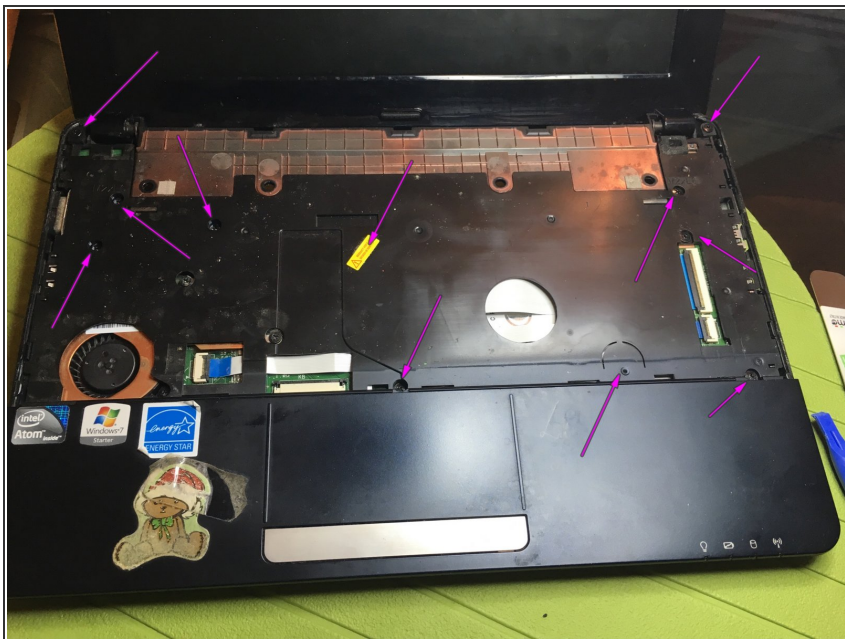

- remove the screws, including the one under the yellow sticker

## Step 8

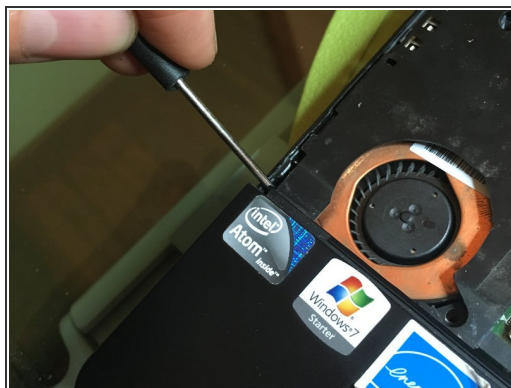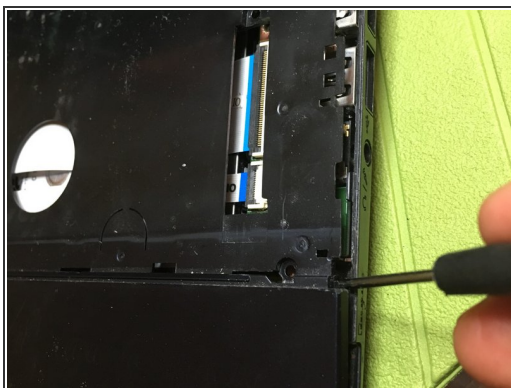

- Pry in the 2 points. Using a flat tool release the trackpad block along the perimeter



## Step 9





- unhook and remove the mouse block

## Step 10



- Remove heatsink and fan screws
- Unhook fan ribbon cable

## Step 11

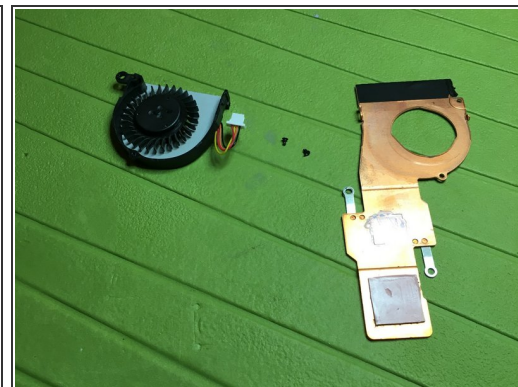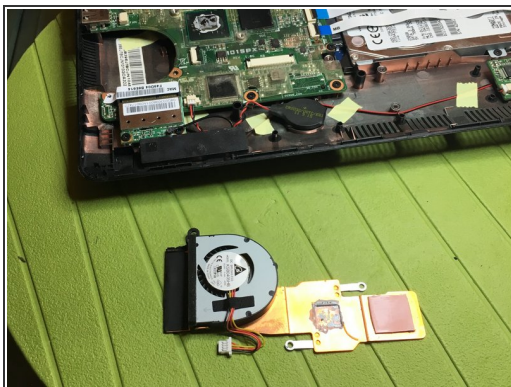

- carefully clean the old Arctic cooling paste on the processor and heatsink
- before reassembling put some new Arctic paste
- To replace or remove HDD, unhook the 2 ribbon cables (purple arrow). Remove 2 screws (yellow arrow)

To reassemble your device, follow these instructions in reverse order.