


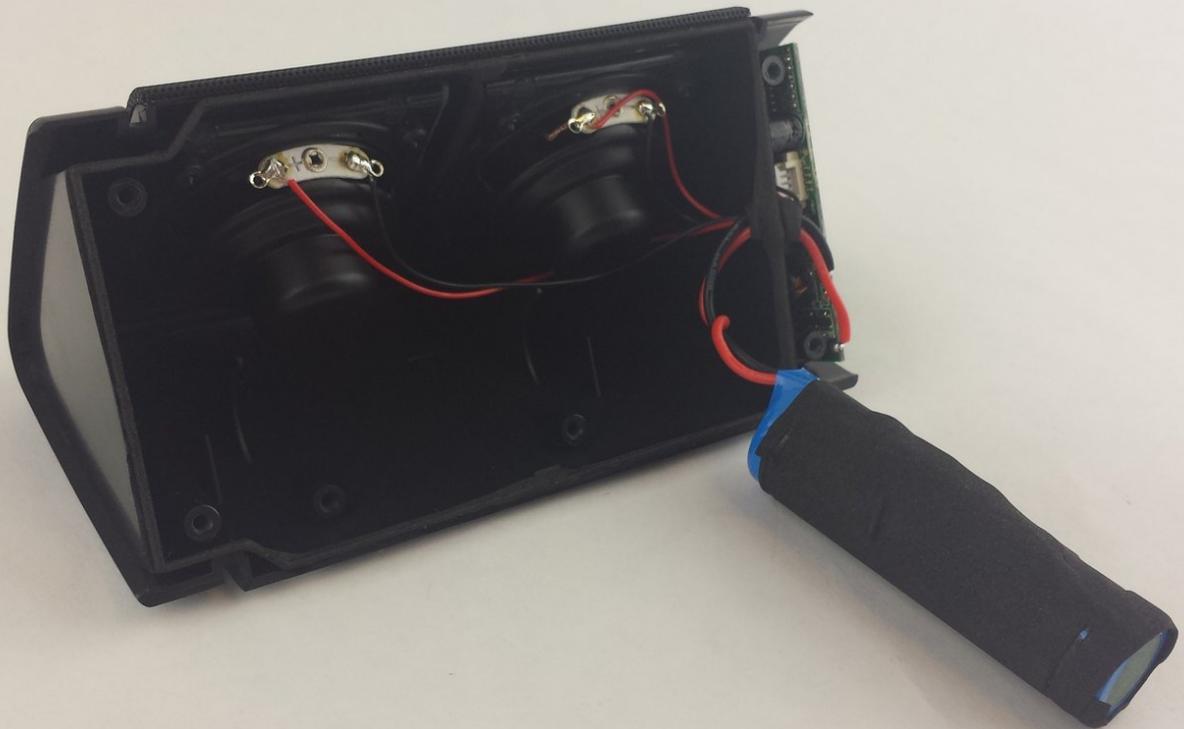

# OontZ Angle 3 Battery Replacement

With this guide you will learn how to disconnect and replace the battery of an OontZ Angle 3 bluetooth speaker.

Written By: Mason Hollander



---

## INTRODUCTION

In this guide, some soldering is required when disconnecting the battery from the motherboard. If you are unfamiliar with soldering, watch [Soldering Tutorial for Beginners, Five Easy Steps](#) to familiarize yourself and to be able to correctly replace the battery.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Soldering Iron](#) (1)
-

## Step 1 — Back Case




- ⓘ Make sure that the OontZ Angle 3 is powered off before starting the disassembly.
- Use the plastic opening tool to remove the rubber caps from each end of the speaker.

## Step 2





- Remove four (4) 11.7 mm Phillips #0 screws from each side at the bottom of the speaker.

### Step 3

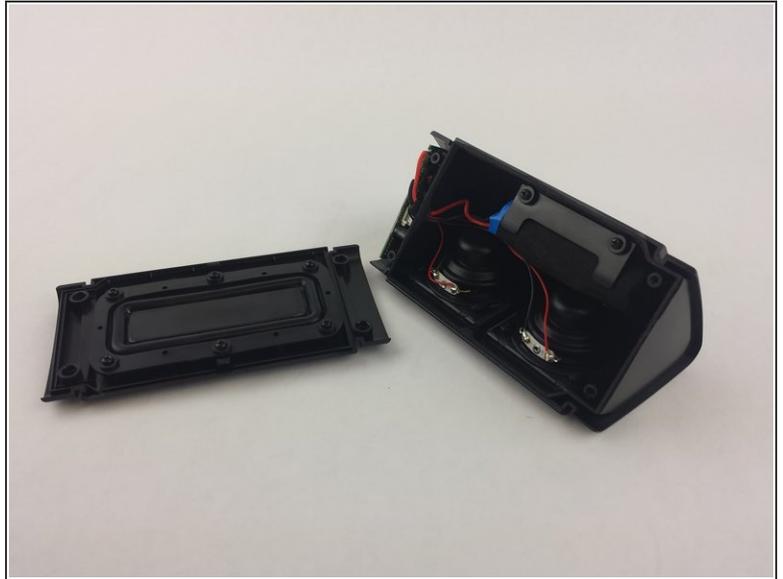


- Use the plastic opening tool on one of the corners to separate the bottom piece from the speaker, and then remove the piece.

### Step 4 — Battery

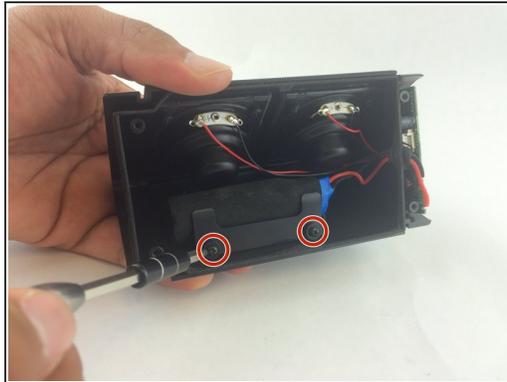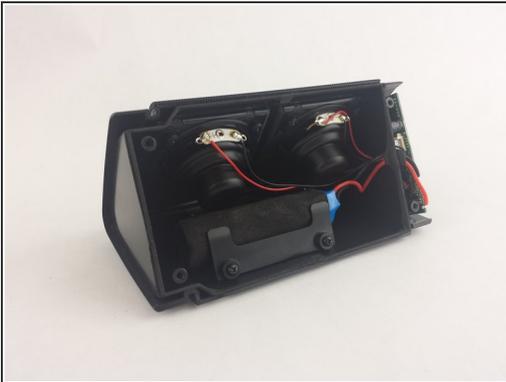

- Begin by removing the bottom piece, revealing the inner compartment with the speaker cables and battery.
- Remove two (2) 11.7mm Phillips #0 screws from each side of the speaker plate.
- Remove speaker plate from the front of the battery.

## Step 5

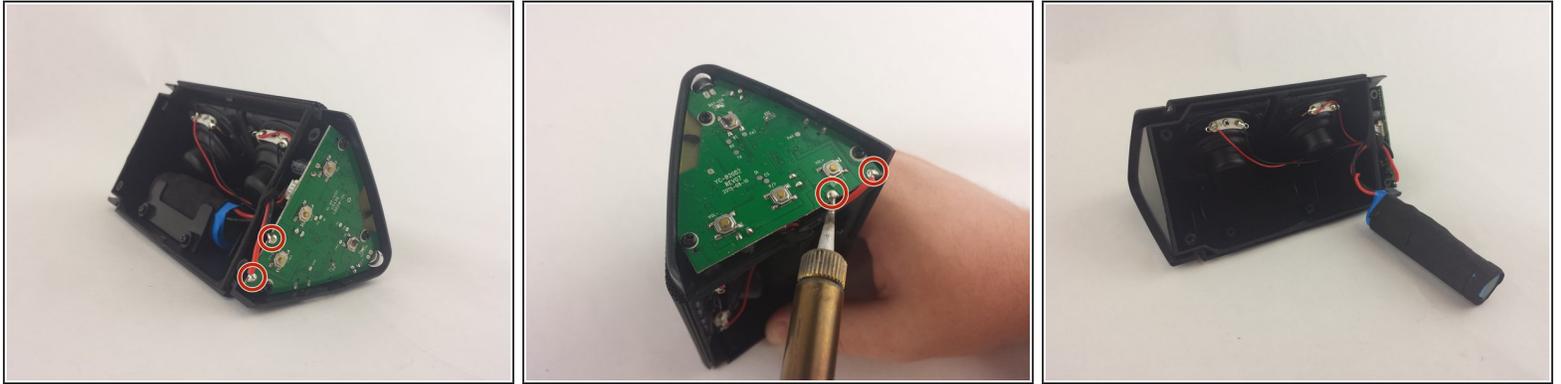

- Locate the soldering points for the battery on the motherboard face of the speaker.
  - Use a soldering iron to carefully disconnect the battery from the motherboard.
    - Learn more about soldering [here](#).
  - Remove the battery from the inside compartment for replacement.
- ⚠** Be careful when soldering the new battery into the correct position on the motherboard, as a bad connection can cause the battery to overheat or catch on fire.

To reassemble your device, follow these instructions in reverse order.