



# Nikon Coolpix L340 Battery Replacement

If the batteries in the camera have depleted, and they need replacing, follow these steps.

Written By: Nikki Butts



## INTRODUCTION


The batteries in your camera only last a certain amount of time before they die and it is time to replace them. Once this happens, the camera will not be able to turn on until all four of the batteries are replaced. The batteries used in this camera are AA batteries.

## Step 1 — Battery



- Turn the camera so that the flash is facing downward- you are now looking at the bottom of the camera
- If the camera lens is pointing towards you, there should be a small lever on the right hand side
- Take this lever and push it away from your body, while simultaneously pulling upwards

## Step 2

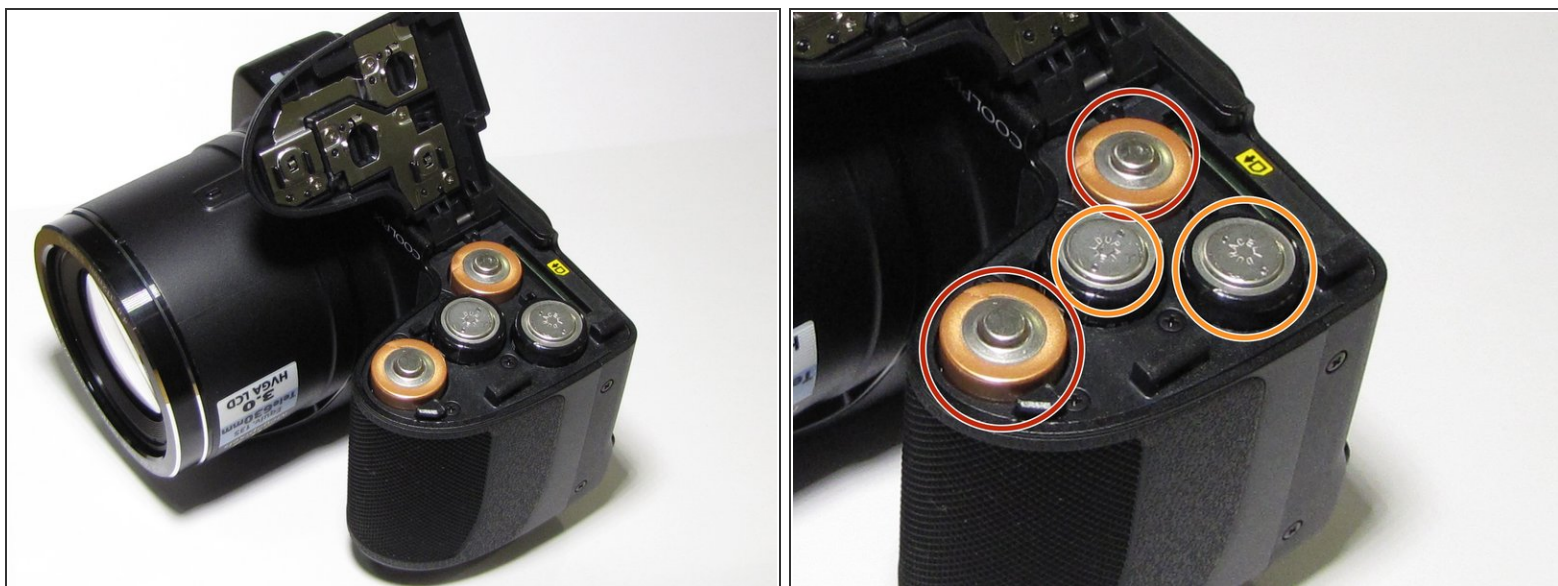

- Once you have pulled up, four batteries will appear underneath
  - Note how there are two batteries facing upwards (circled in red)
  - and two batteries facing downwards (circled in orange)
- ☑ When the new batteries are placed back in the camera, they should be put back in this same orientation



### Step 3



- Take out each of the batteries

### Step 4



- When all of the batteries have been removed you should see four places for four new batteries to be inserted

To reassemble your device, follow these instructions in reverse order.