




Coby Kyros MID7024 Speakers Replacement

Instructions on replacing speakers in case of audio malfunction.

Written By: Jacob Bartell

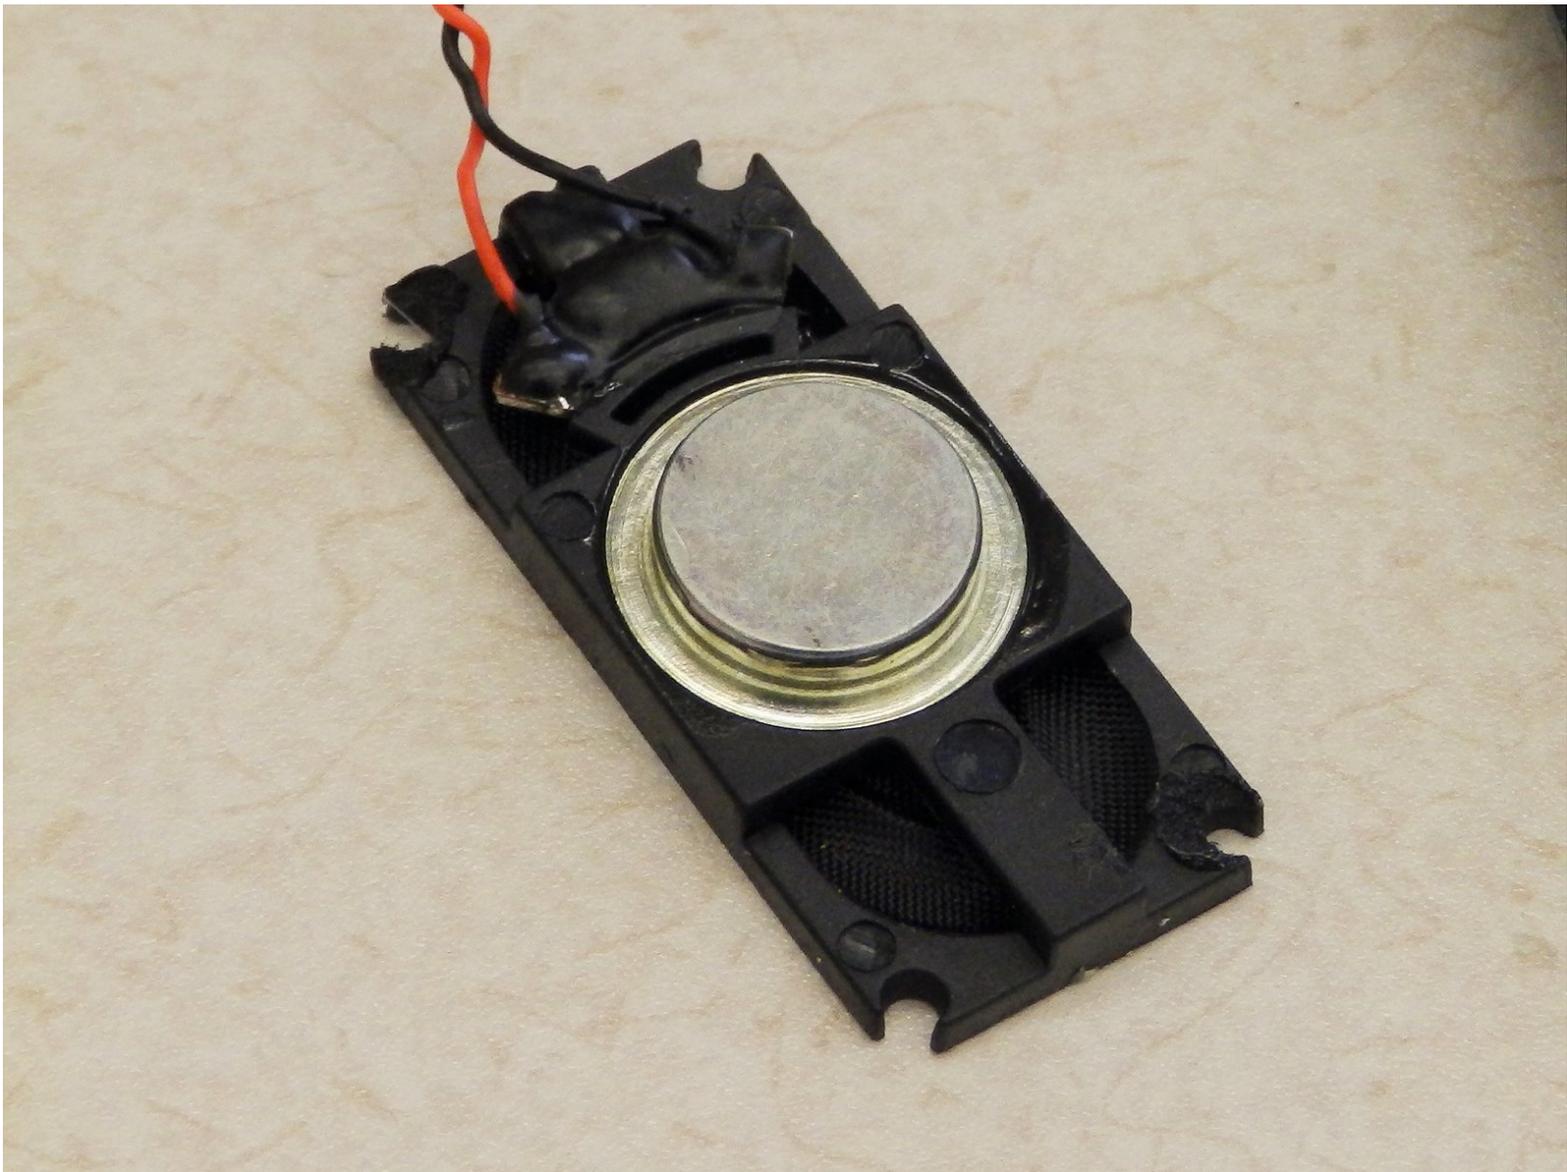



INTRODUCTION

After the back cover is removed you now have a view of the insides of the device. Be careful not to separate the back cover from the device too quickly as the speakers are still keeping these two pieces attached. The 2 speakers are attached to the back cover by small plastic inlets that only require simple upward motion to pop off.

TOOLS:

- [Heavy-Duty Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Portable Soldering Iron](#) (1)
-

Step 1 — Back Cover

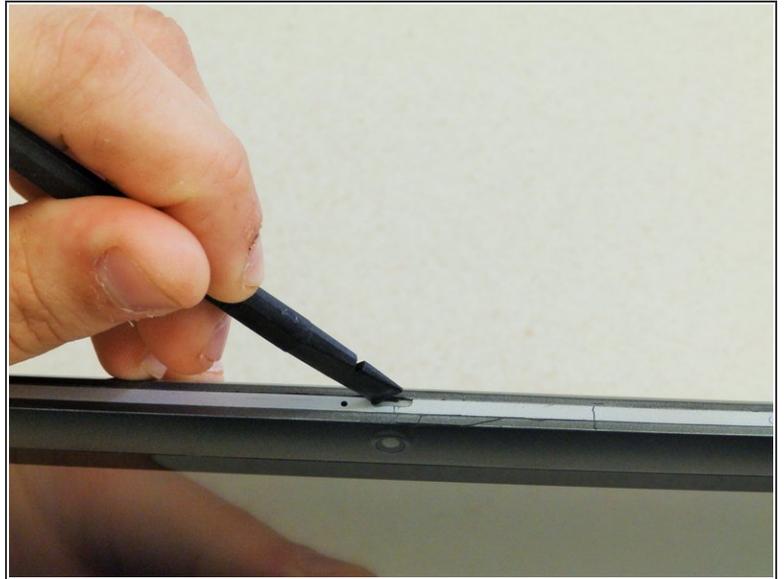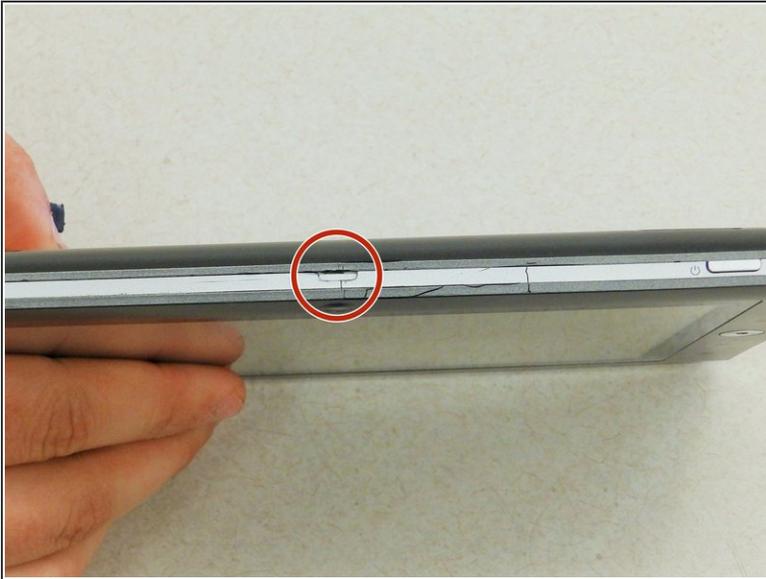

- Begin by ensuring that the device is powered off.
- To replace the back cover of the device you must pry it open using the access points. One is located on the top of the device above the camera and the other is on the bottom left hand side.
- Use the spudger to pry at the access points to open the device.

Step 2



- Once the back cover begins to separate from the body of the device continue working the spudger around the perimeter of the device until the back cover is free.
- ⚠ You will hear some popping and cracking noises as you pry open the device. These sounds are the internal clips coming apart.
- Once the back cover is free from the body of the device, open both sides like a book, placing them flat on the table as shown. Be sure to pay attention to the speaker wires that hold the two pieces together.

Step 3




⚠ This step is only necessary if you intend to repair or replace the back cover and/or speakers of the device.

- In order to replace the back cover you must remove the speakers. Place the Spudger under the plastic frame of the speaker as shown. Pry up, popping the corners of the speakers out of their bracket and lift the speaker out.


⚠ Be sure not to pull on the speaker's wires or body too hard as you may damage them.

Step 4 — Speakers

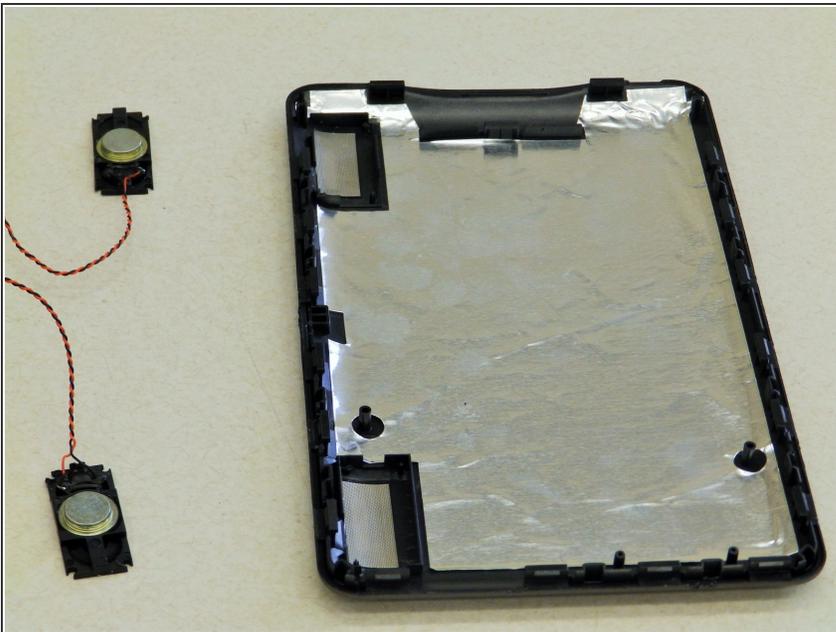


- With the speakers now free from the back cover trace their wires back to the area where they connect to the motherboard.

Step 5

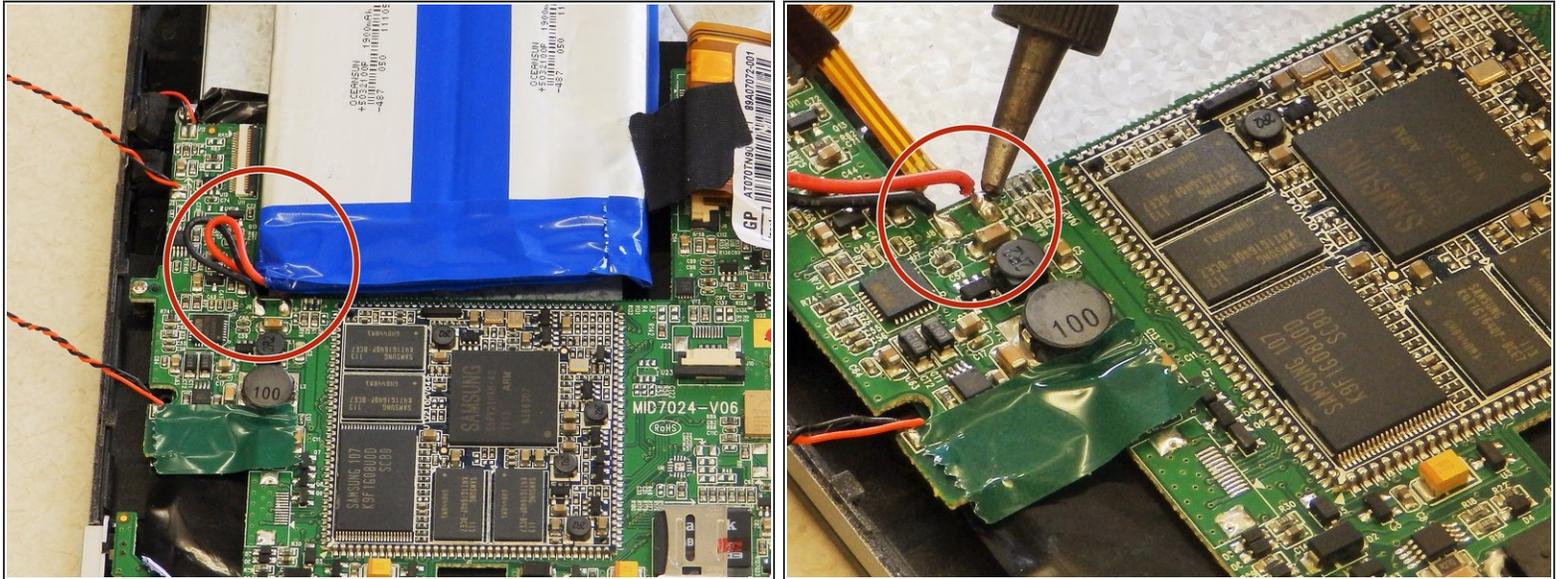

- Use a soldering gun to remove the positive and negative wires connecting the battery to the motherboard.
- ⓘ Follow [the guide on soldering](#) to assist you in removing the battery.

Step 6

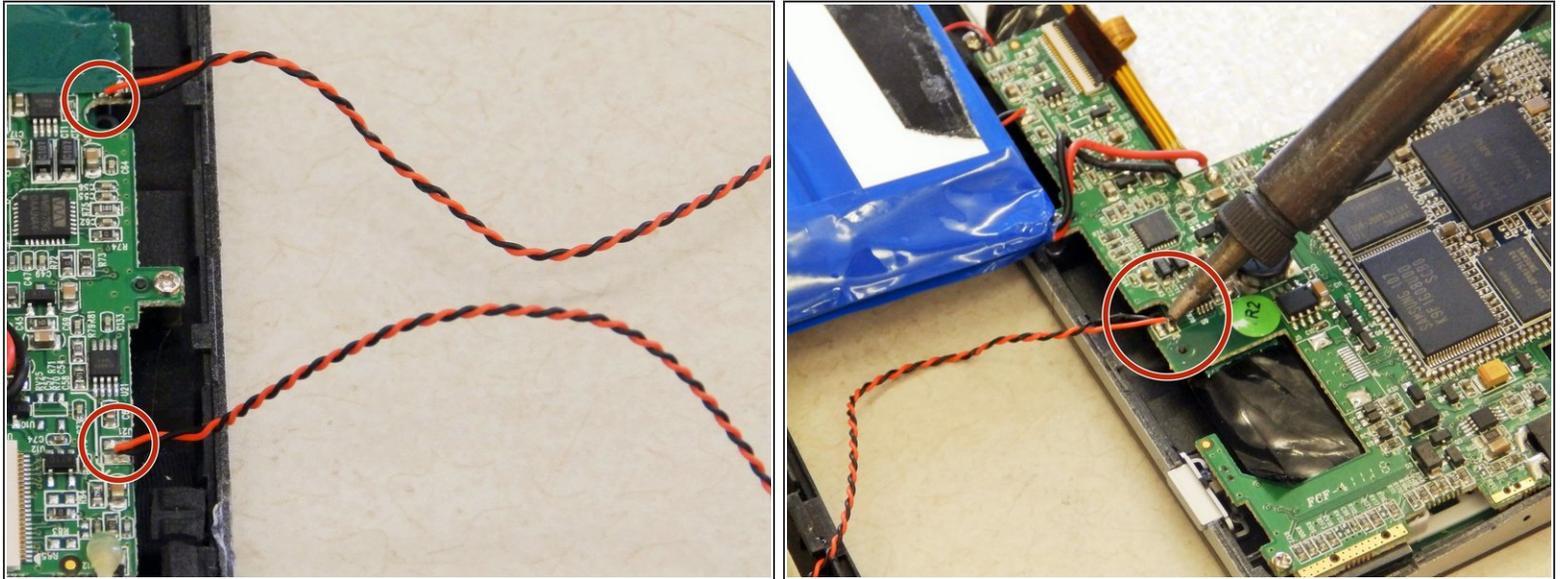

- To completely remove the speakers from the device use a soldering iron to unsolder the connection points located at the end of each wire.
- ⓘ Follow [this guide on soldering](#) to help you with unsoldering the wire from the motherboard.

To reassemble your device, follow these instructions in reverse order.