



ZTE Majesty Speaker Replacement

How to replace Replacing Speaker

Written By: Gustavo Hernandez





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Battery



- Place your phone in the palm of your hand.
- You will notice the groove and that the back detaches from the phone.

Step 2



- Using either your finger or a plastic opening tool, pry the back off to reveal the battery.

Step 3




- Pry the battery out of the groove in the phone with your finger.

Step 4 — Speaker



- Remove the back of the phone by removing the 9 PH000 shown

Step 5

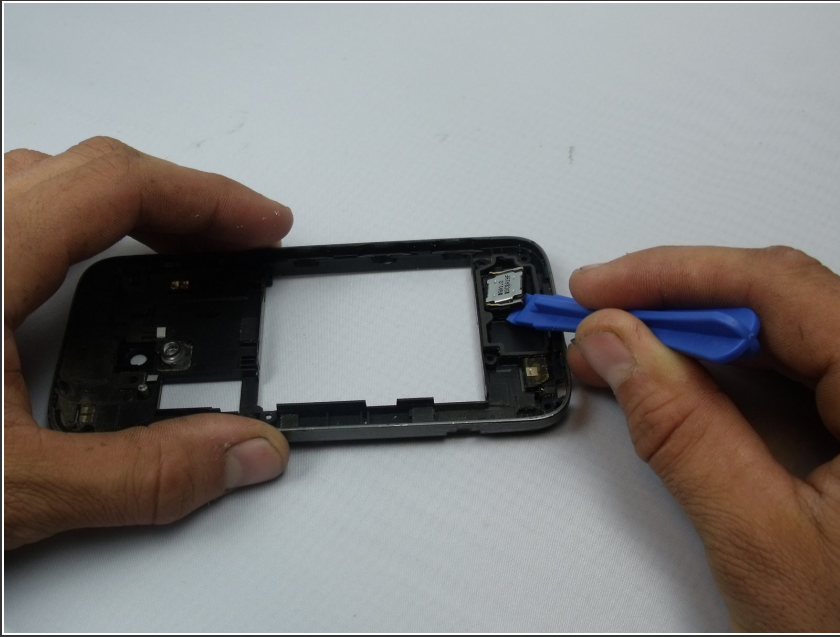

- Pry the speaker as shown to remove.

To reassemble your device, follow these instructions in reverse order.