



# Nerf Alpha Trooper CS-18 Plunger Replacement

A broken plunger may inhibit your gun from...

Written By: Chelsea Frazier



---

## INTRODUCTION

A broken plunger may inhibit your gun from firing correctly. This guide will show you how to replace the plunger and return your riffle to firing condition.

---

### **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Plunger




- ✦ It is important to group screws together by length to ensure proper reassembly.
- ⚠ Be sure that the device has been discharged and is unloaded before beginning the repair process.

## Step 2



- Look at the rear of the rifle. Remove the two 10 mm Phillips head screws that hold the black cap to the rear of the rifle.
- Gently remove the black cap.

### Step 3

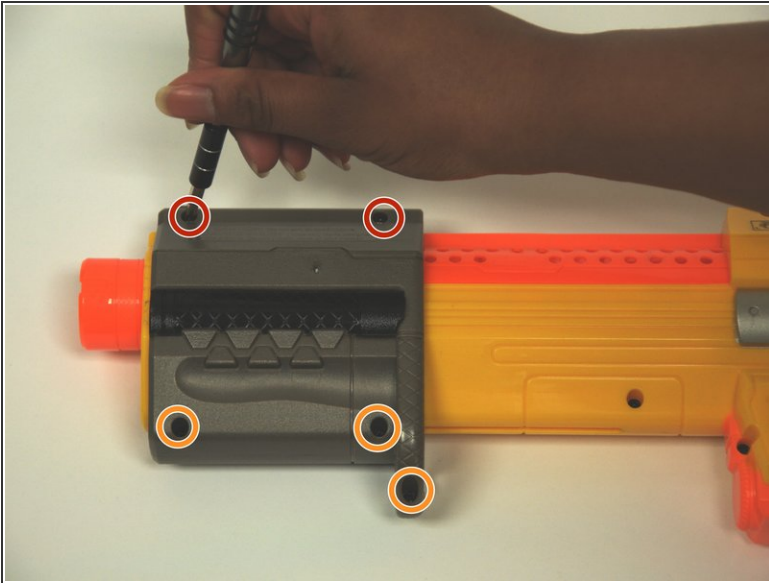

- Point the barrel of the device to the left, screw side up. Remove the two 8 mm Phillips head screws (the top two) holding the device slide together.
  - Keep the device in the same position, remove the three 10 mm Phillips head screws from the bottom of the device slide.
  - Once all screws are removed, carefully separate the two halves of the device slide and put them aside.
- ☑ Be sure to keep track of which screws correspond to the correct holes.



## Step 4



- Keeping the barrel in the same position as step 3, remove the fourteen 10 mm Phillips head screws from the body of the device.
  - With the device in the same position, remove the 4 remaining 5 mm Phillips head screws from the body of the device.
- ☒ ⚠ Screws vary in lengths. Be sure to keep track of which screws correspond to the correct holes.

## Step 5



- Grip the cartridge insert, and pull the two halves of the device apart.
- ⚠ Warning!** The firing spring is not fastened to the device. It and other small parts may fall out of the device when separating it.
- i** If you are having difficulty separating the two halves of the device, use a spudger to pry the two halves apart.
- Remove the access gate and barrel cover.

This document was generated on 2023-01-20 07:29:32 PM (MST).

## Step 6



- Now remove the main firing spring from the rear of the device by gently pulling it.

## Step 7



- Slide the plunger lock back away from the device, then lift out towards yourself to remove.

⚠ Be careful not to lose the small spring on the top of the plunger lock.

## Step 8



- Pull plunger away in the same motion as in step 7 with the plunger lock.

To reassemble your device, follow these instructions in reverse order.