




Asus Eee PC 1000HE RAM Replacement

Replacing the RAM card of your Asus EEE PC 1000HE.

Written By: Mike Glenn

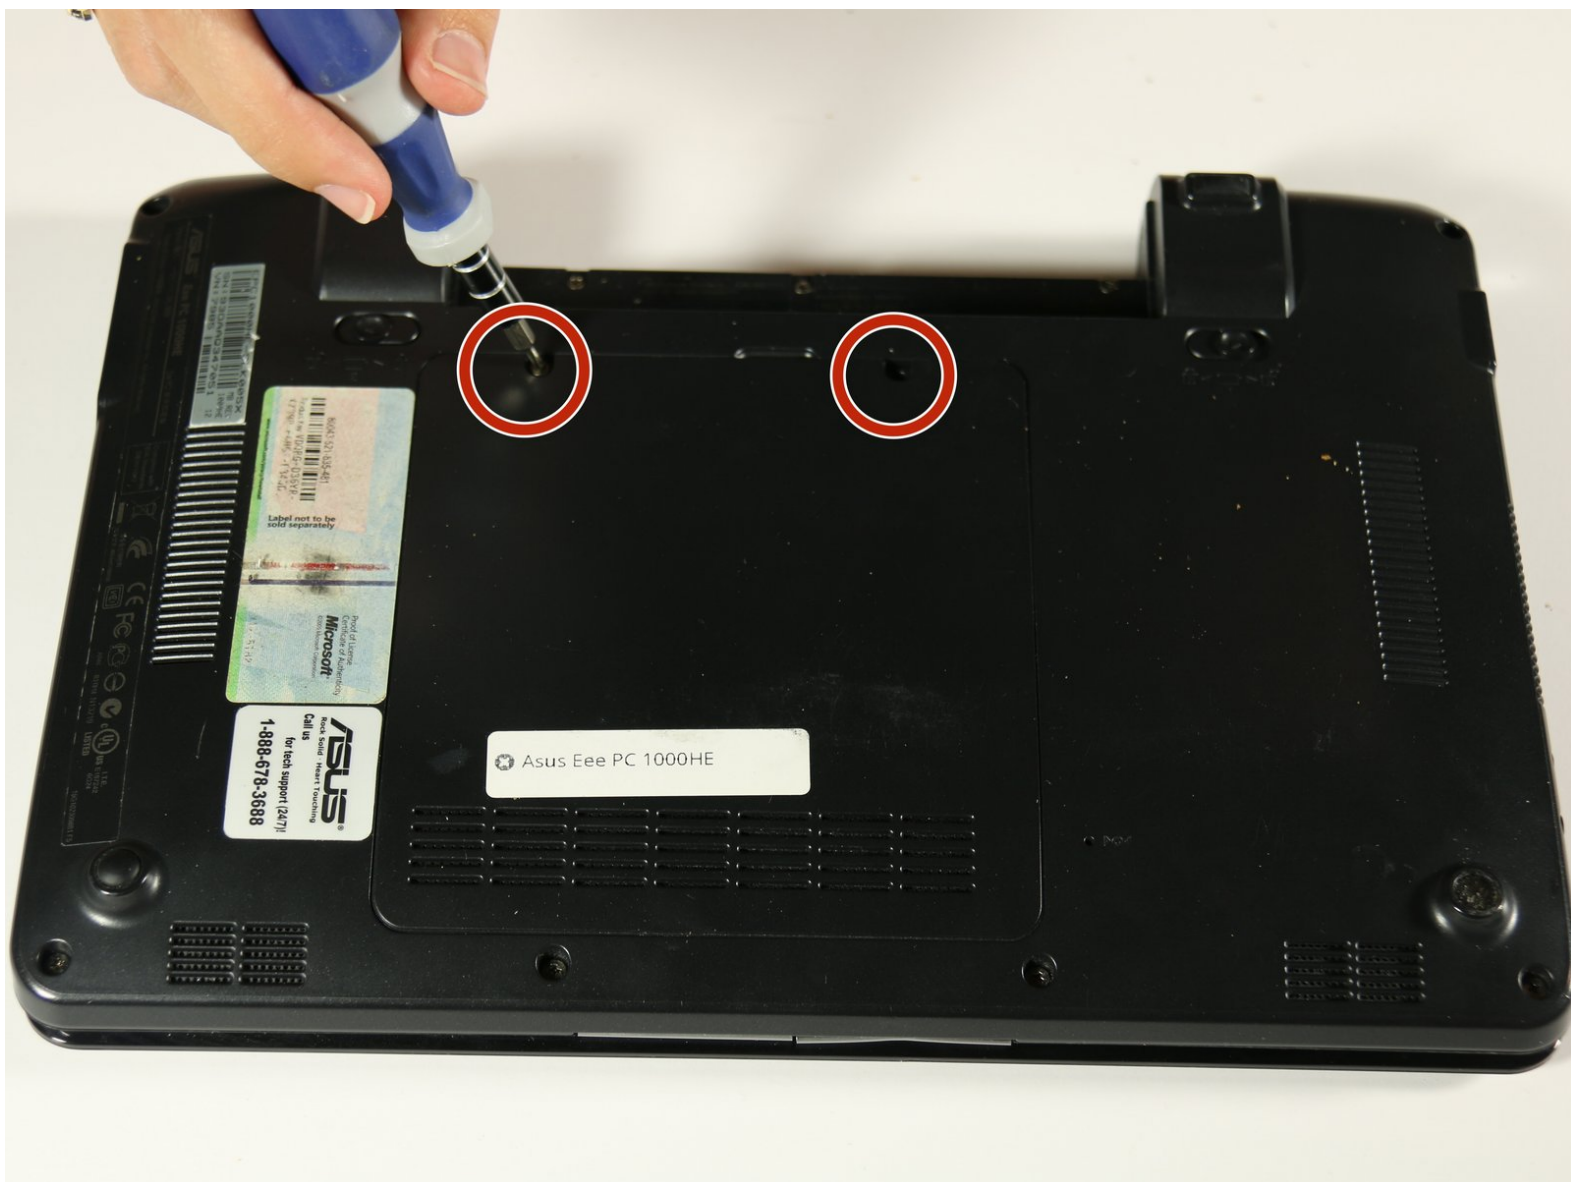

INTRODUCTION

If you are having problems with the RAM on your device, this guide will help you replace it.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery





- Lay the laptop down with the bottom facing upwards.
- Locate the two battery lock slide tabs.

Step 2

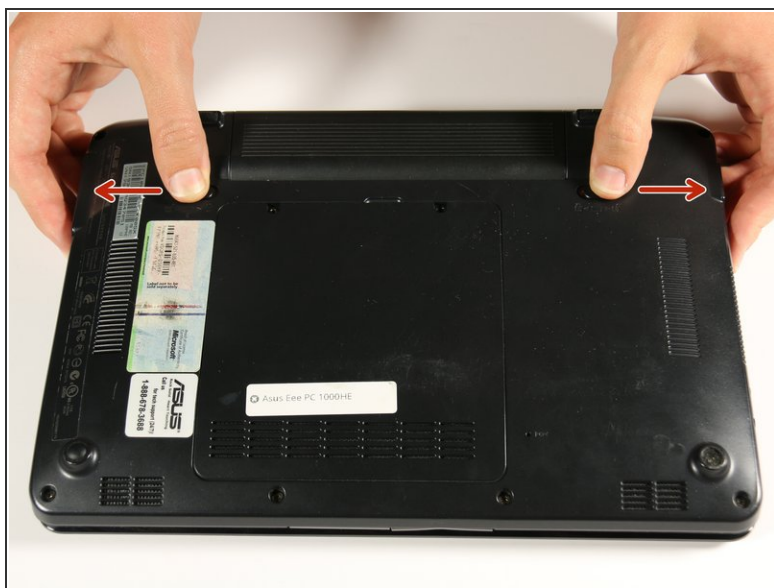



- Slide the tabs outward to unlock the battery.
- ⓘ The right tab will remain in the unlocked position while the left tab must be held.
- While holding the left tab outward, slide the battery away from you to remove it.

Step 3 — RAM

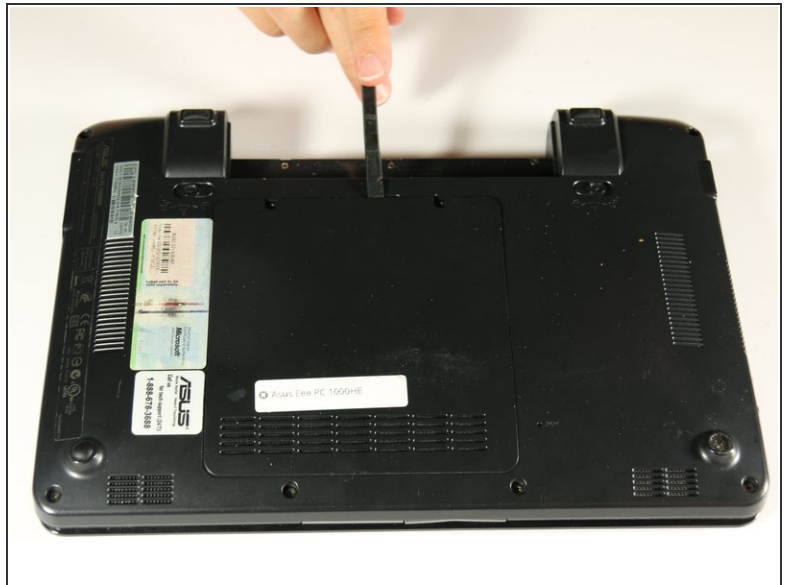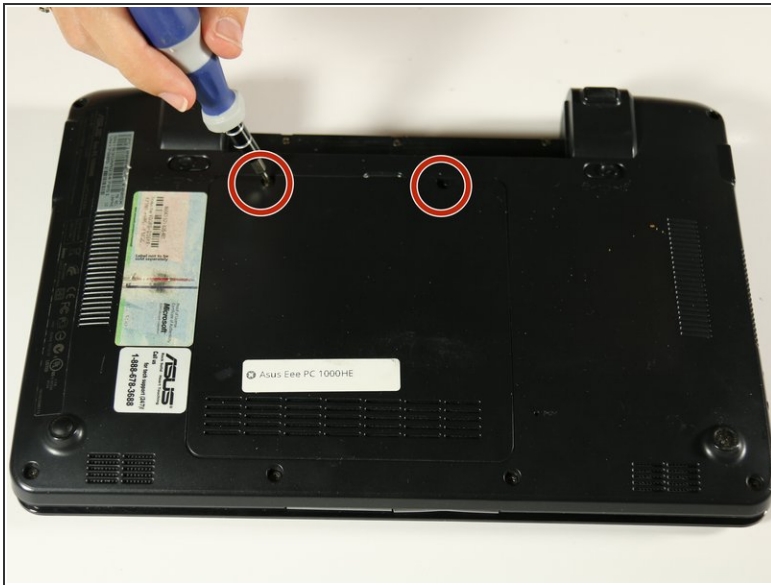

- Use a PH00 (+) Phillips head to unscrew the two 7 mm screws holding down the back panel.
- Use the spudger to pry off the back cover.

Step 4

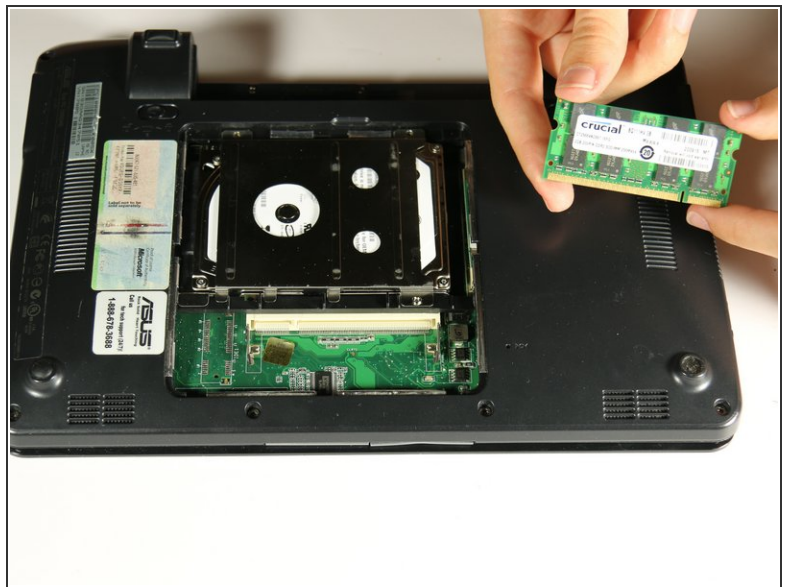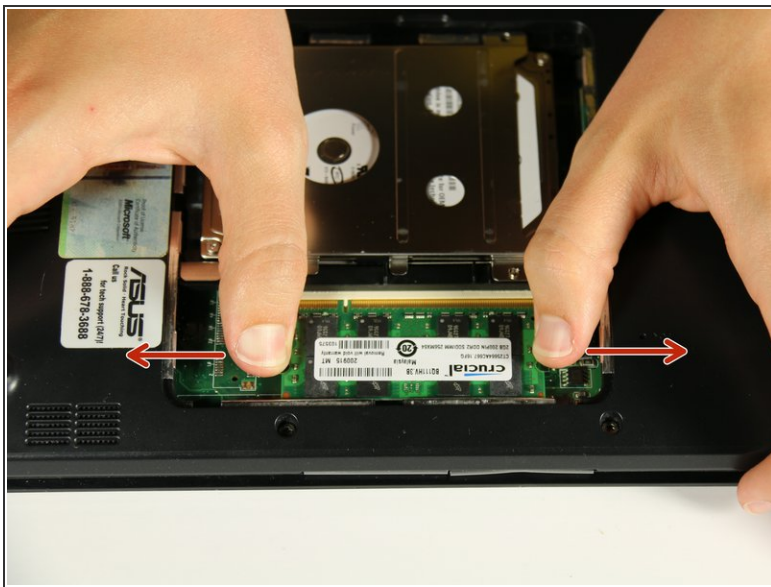

- Push the metal bars on the sides of the RAM card to pull them out away from each other
- Lift the RAM card out

To reassemble your device, follow these instructions in reverse order.